

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

euro lt | HYBRIDS

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.


General Setup Instructions for Extrusion System



Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

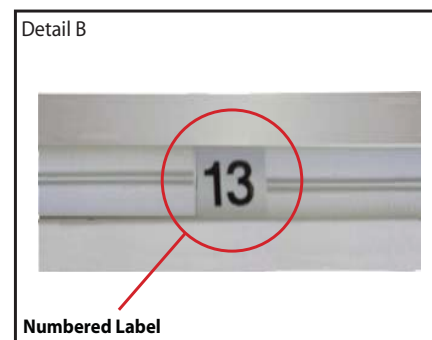


Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.



Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

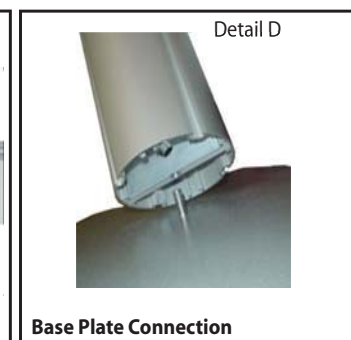


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

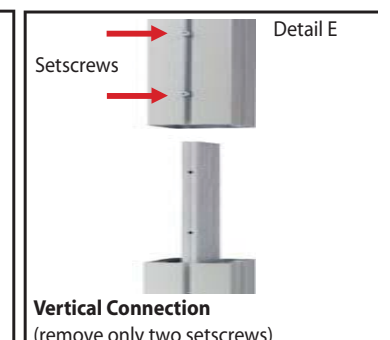


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.


Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

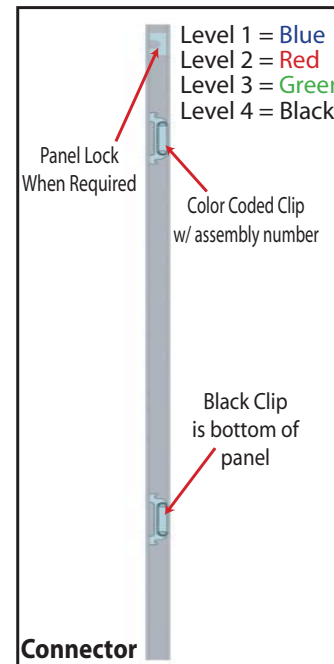


Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

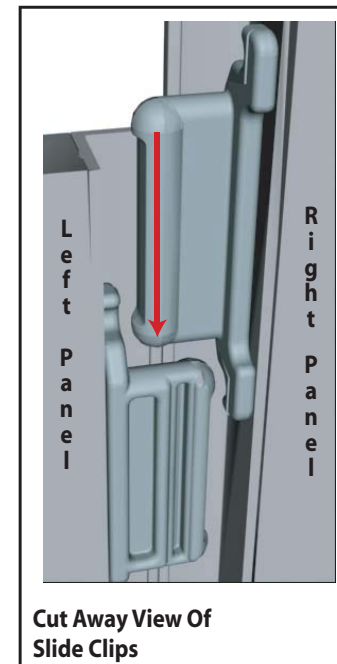

 Components connect together by aligning them and sliding downward connecting clips together.

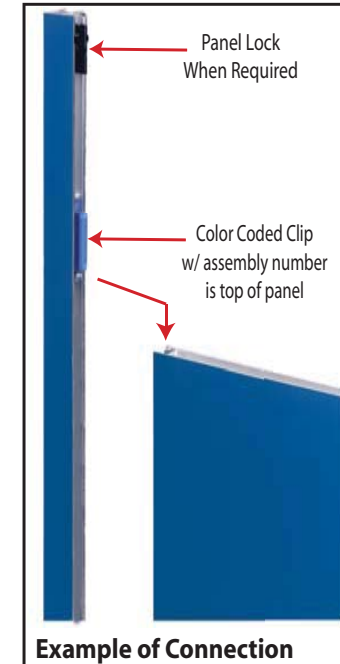

 Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

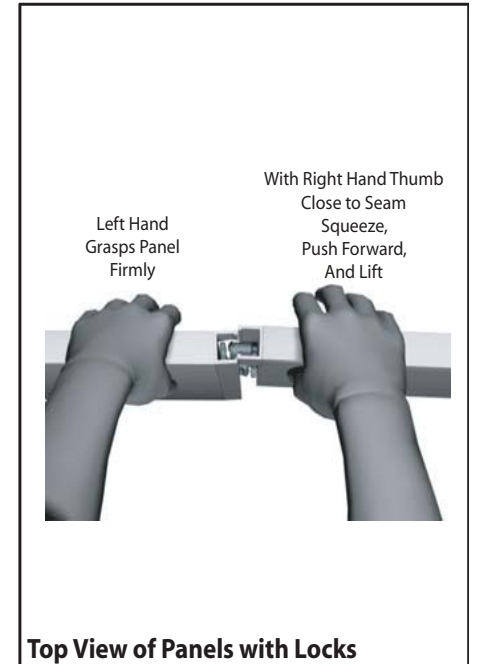

The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100





Item	Qty.	Description	Item	Qty.	Description
1	2	Base Plate	8	1	51.41" w Formed Horizontal Extrusion
2	1	95.75" h Vertical Extrusion	9	1	51.41" w Formed Horizontal Extrusion
3	1	96" h Vertical Extrusion	10	4	20" w Horizontal Extrusion
4	1	84" h Vertical Extrusion	11	1	87.7" w Horizontal Extrusion
5	1	84" h Vertical Extrusion	12	1	87.7" w Horizontal Extrusion
6	1	96" h Vertical Extrusion	13	1	51.41" w Formed Horizontal Extrusion
7	1	95.75" h Vertical Extrusion	14	1	51.41" w Formed Horizontal Extrusion

Steps:

 - 1) Attach vertical extrusions [2 and 7] to base plates [1].
- 2) Connect horizontal extrusions between vertical extrusions where indicated.
- 3) Apply graphics to assembled backwall.

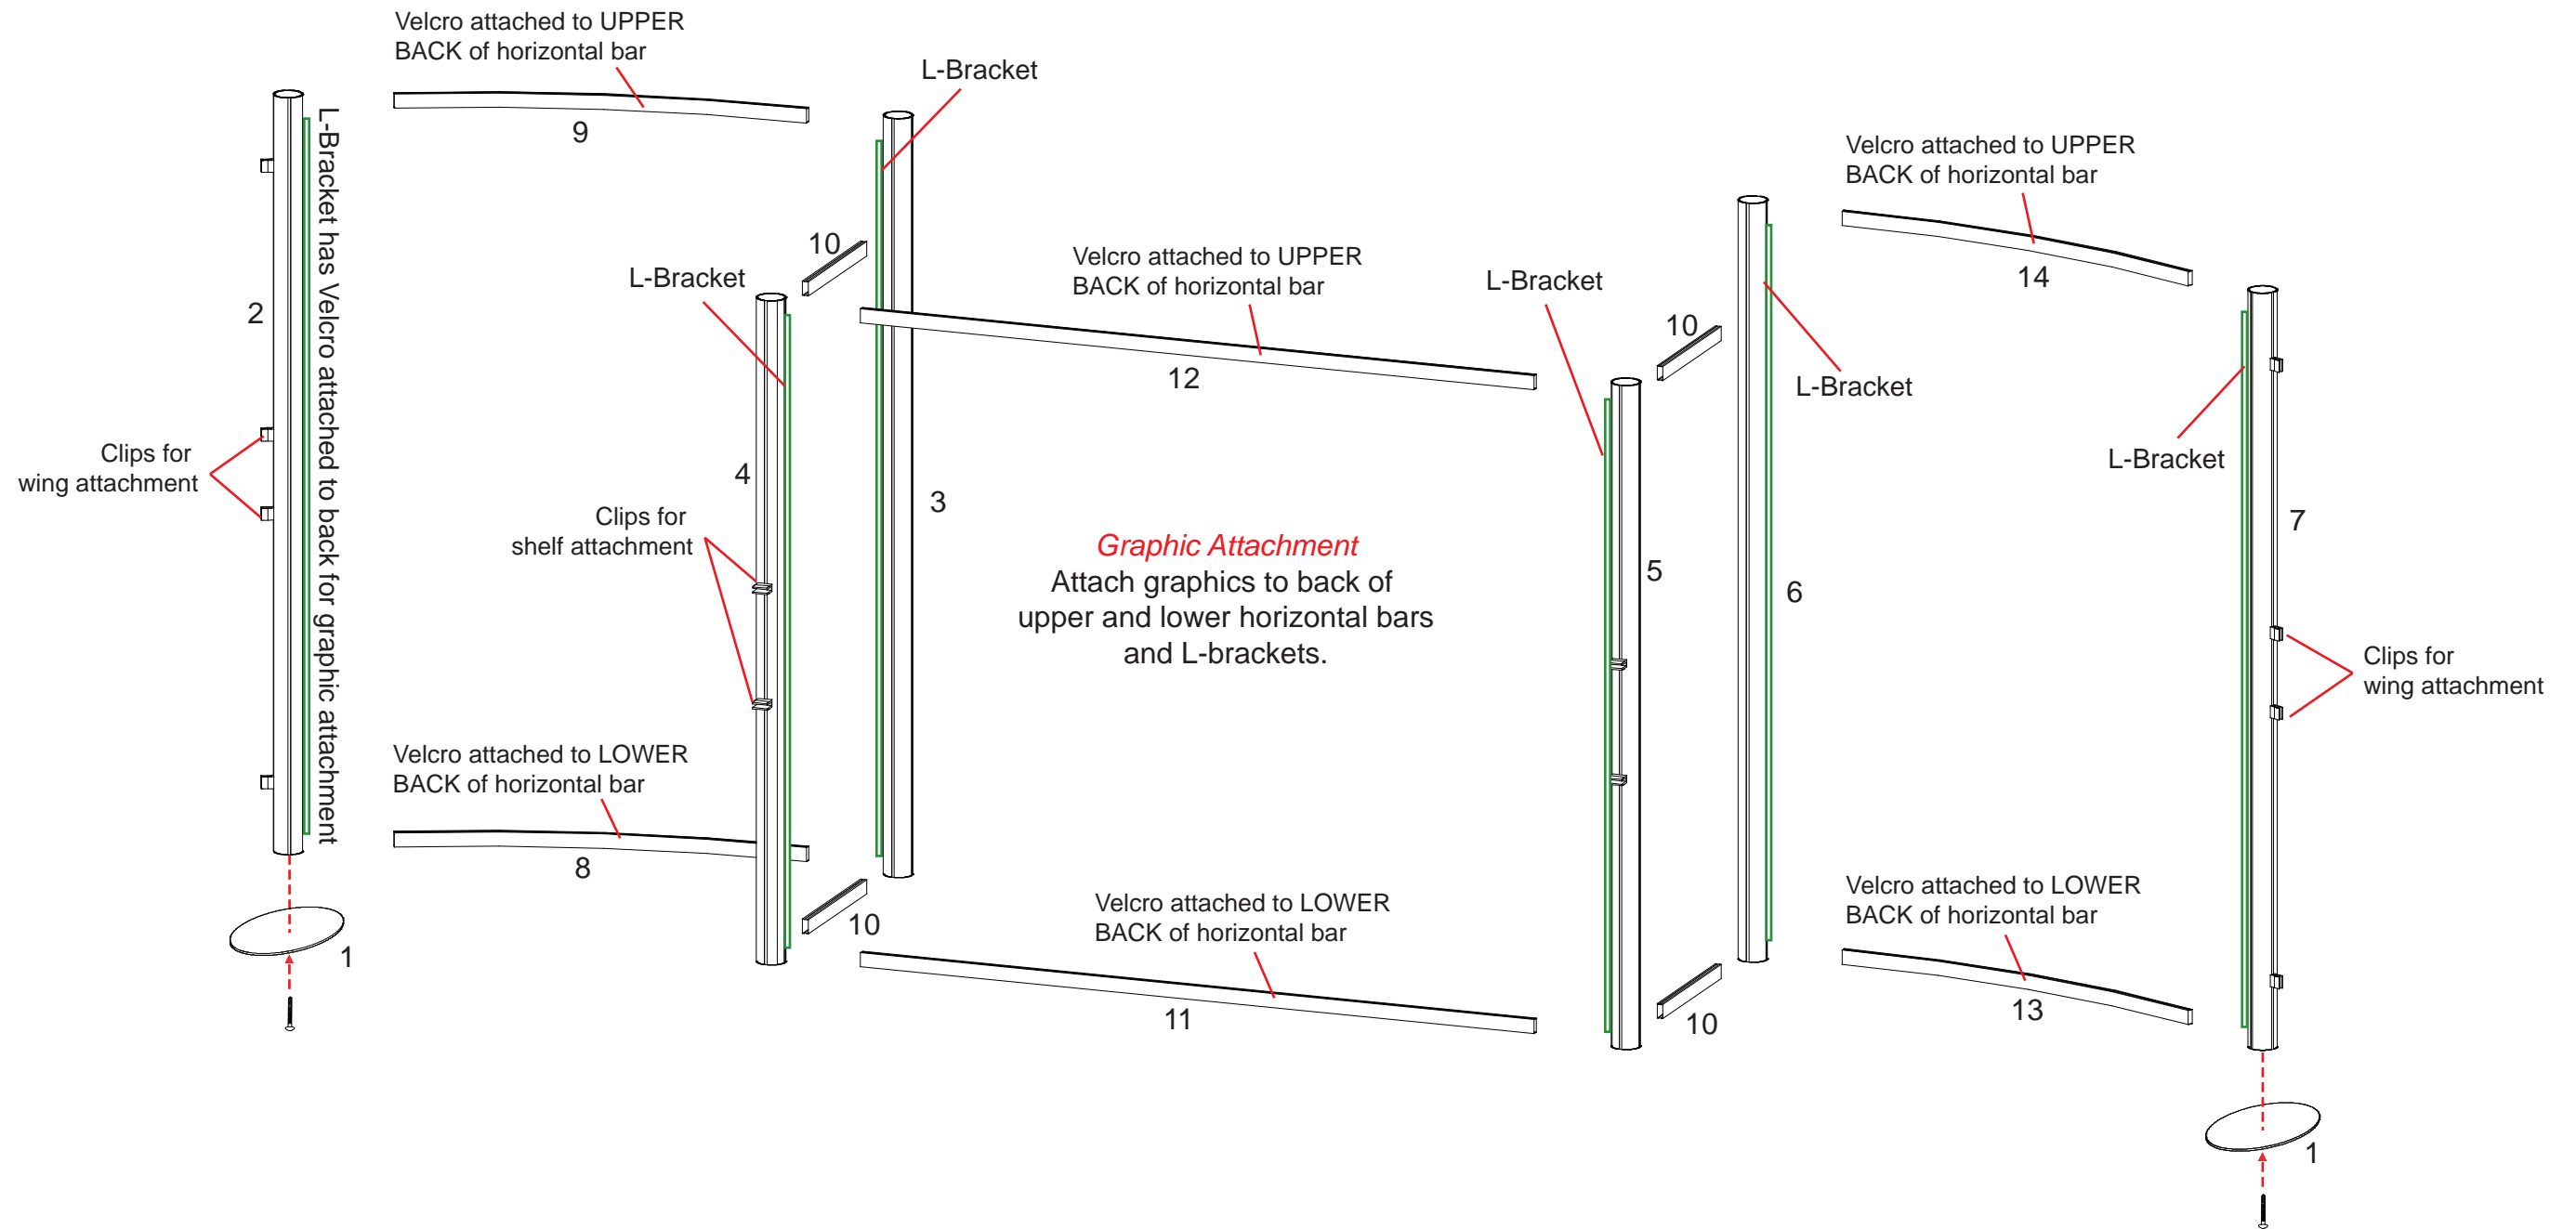

    WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

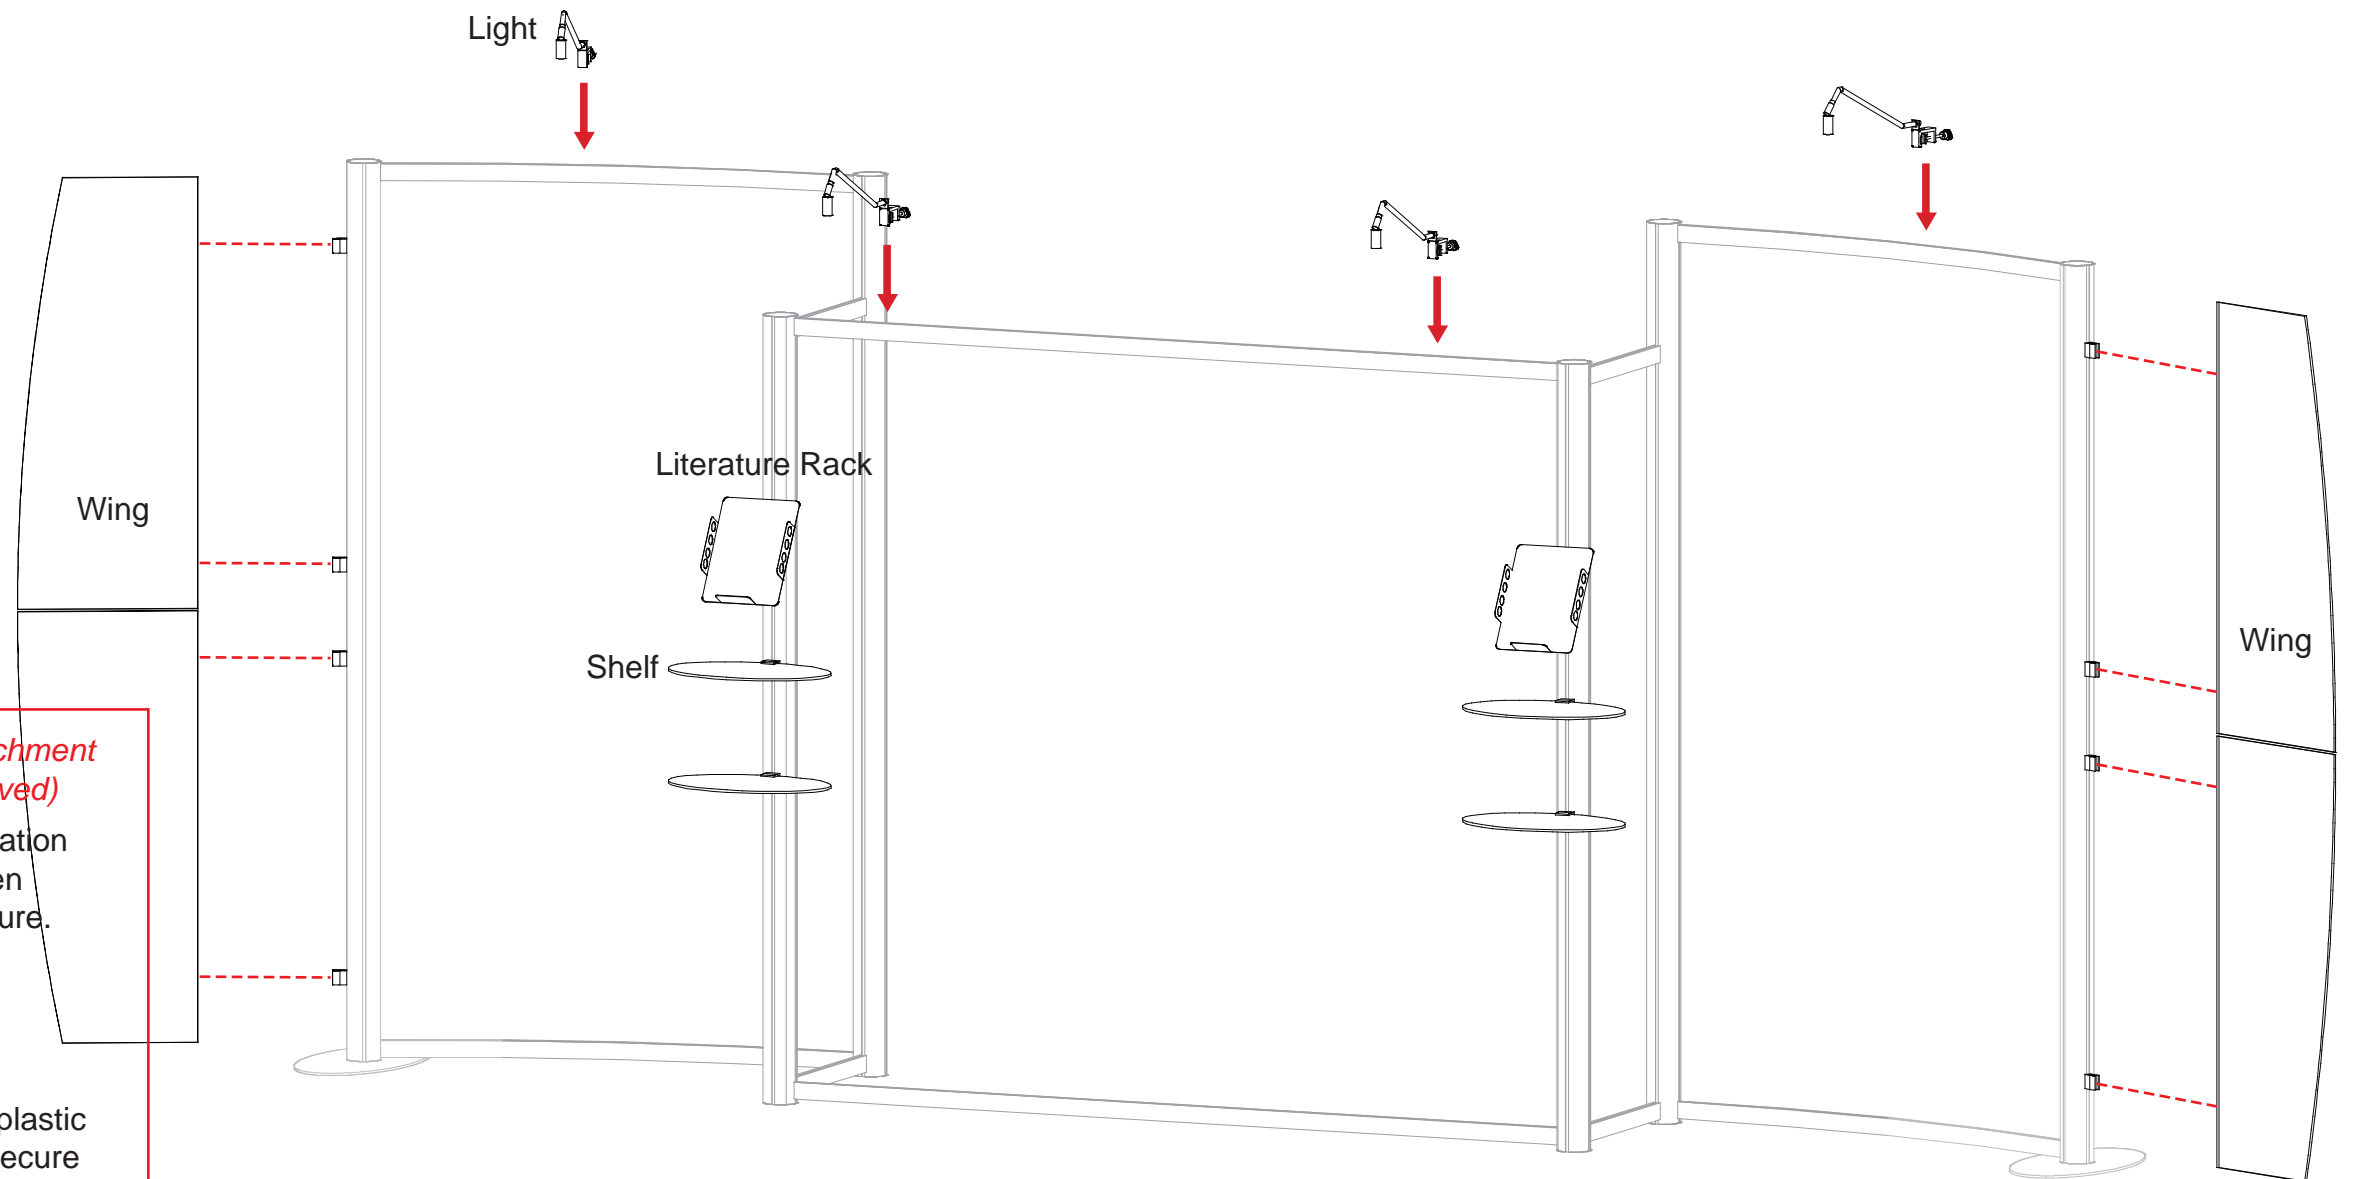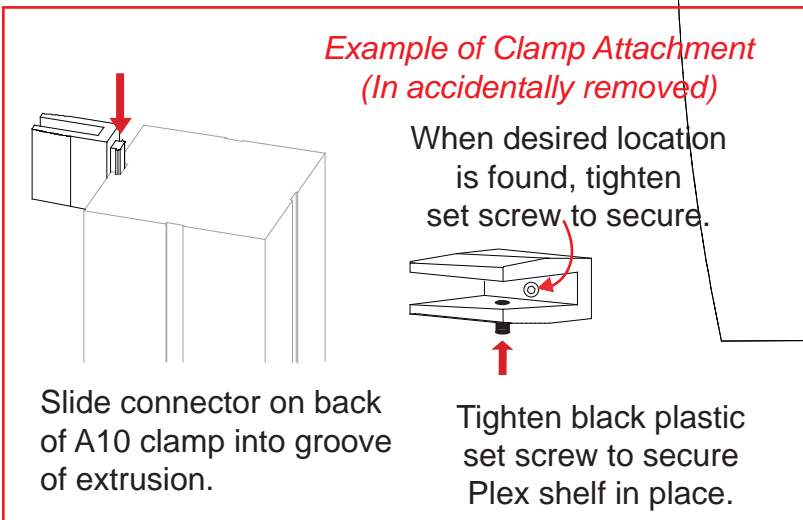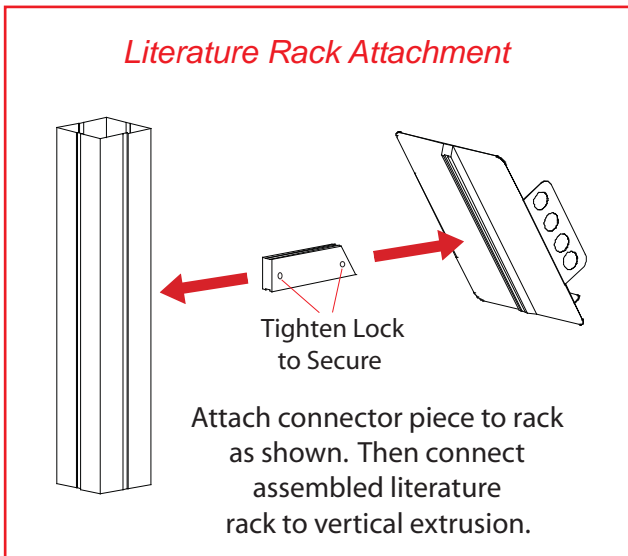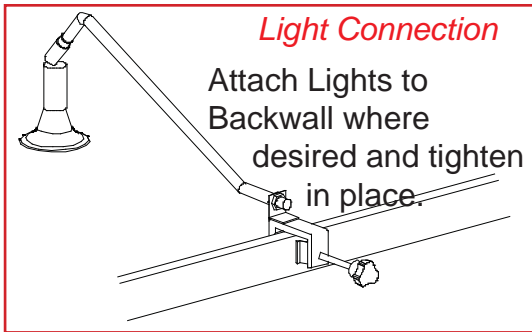

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING



Using Your Setup Instructions

The Aero Overhead Sign Setup Instructions are created specifically for your configuration. They include an exploded view of the frame which is sequentially numbered. We encourage you to study the instructions before attempting to assemble your exhibit.

 
 
Connections are kept very simple: no tools. Everything assembles with push-button connectors and pre-connected horizontal sections.

Cleaning and Packing Your Display




- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

Steps:

- 1) Connect canopy pieces together as shown.
- 2) Apply pillow case graphic to assembled canopy

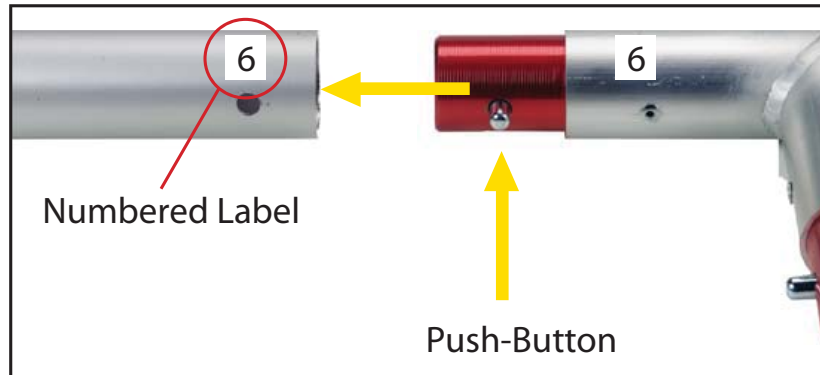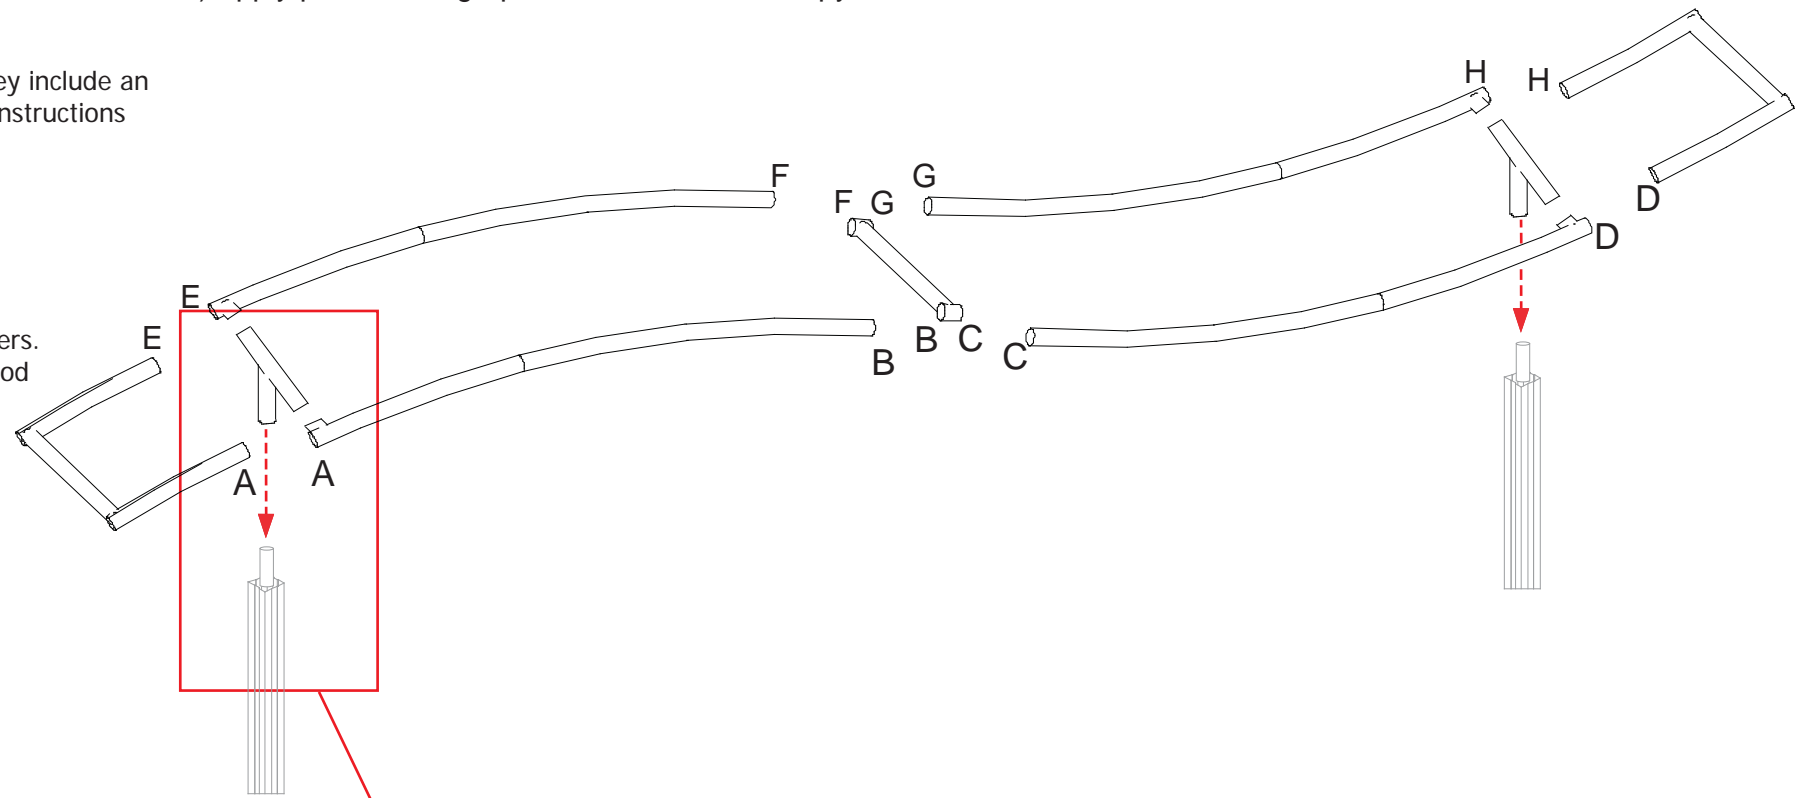


   Connections are made by holding the button down and sliding the red tube into opposing tube until the connection is made. To disassemble push button and pull or twist extrusions apart.

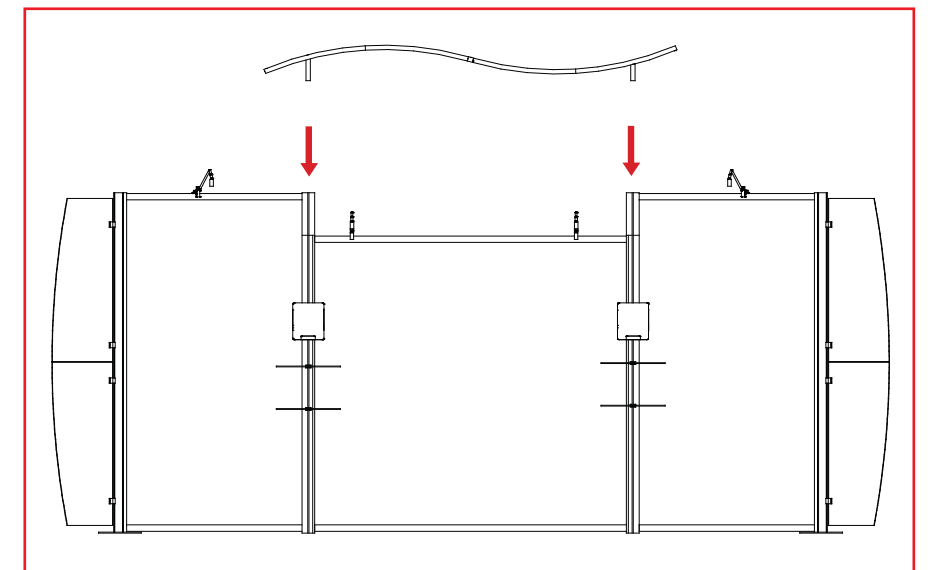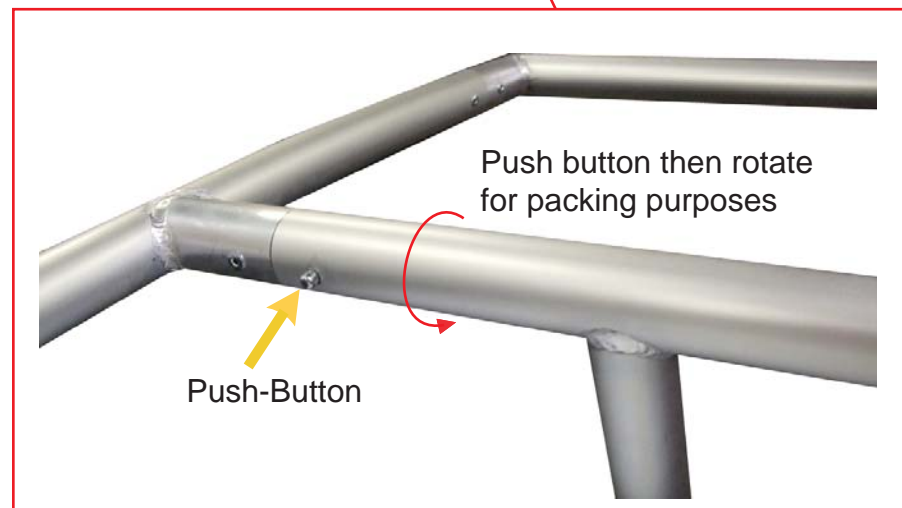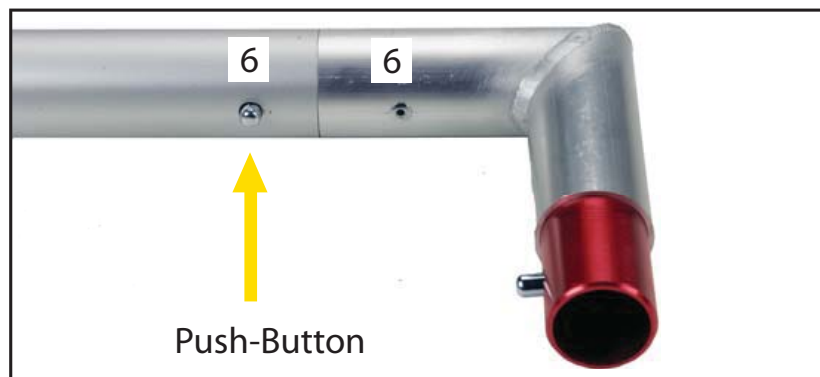


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item Number	Description
1	23" w x 46" h Flat Panel
2	46" h 90° Connector
3	23" w x 46" h Flat Panel
4	46" h 90° Connector
5	23" w x 46" h Flat Panel w/ Door
6	46" h 90° Connector
7	23" w x 46" h Flat Panel
8	46" h 90° Connector

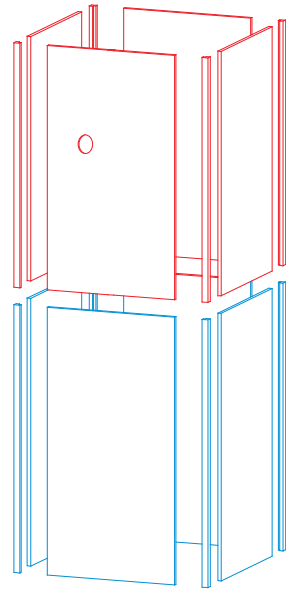 


 Steps:
 1) Assemble by starting at panel #1* and continue in numerical order.

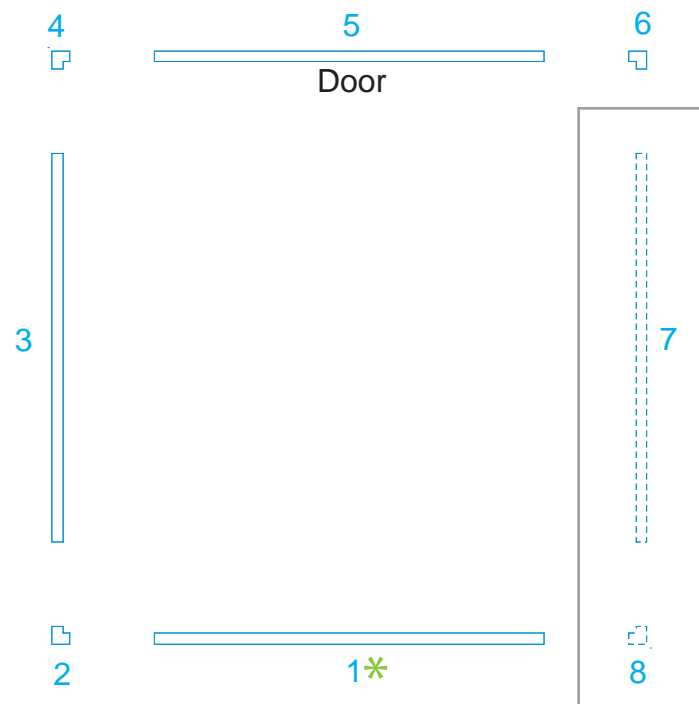


Note: Install monitor mount and monitor to tower before assemblingave #7 and 8

Item Number	Description
1	23" w x 42" h Flat Panel
2	42" h 90° Connector
3	23" w x 42" h Flat Panel
4	42" h 90° Connector
5	23" w x 42" h Flat Panel
6	42" h 90° Connector
7	23" w x 42" h Flat Panel
8	42" h 90° Connector

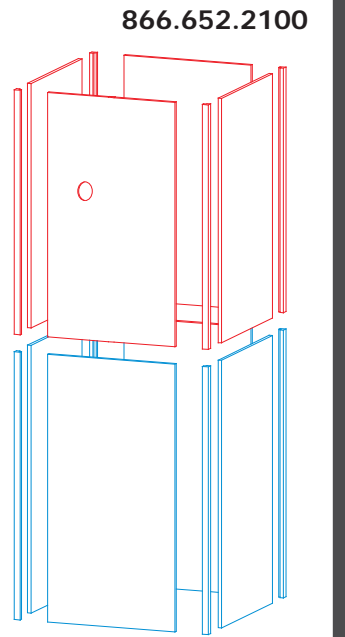 

866.652.2100

 Steps:
 1) Assemble by starting at panel #1* and continue in numerical order.

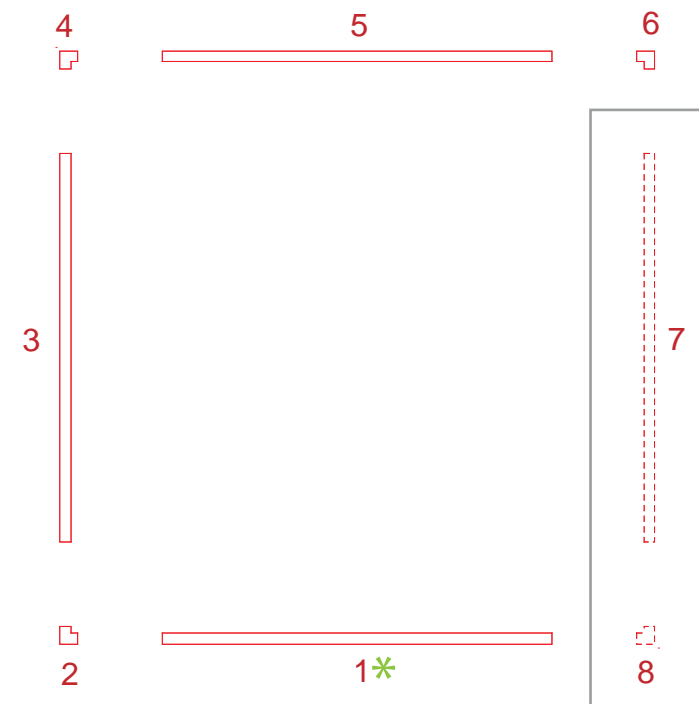


Note: Install monitor mount and monitor to tower before assemblingave #7 and 8


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

 - Steps:
- 1) Attach monitor mount to panel #1 using screws and wing nuts.
 - 2) Attach monitor to monitor mount and run wire through grommet hole.

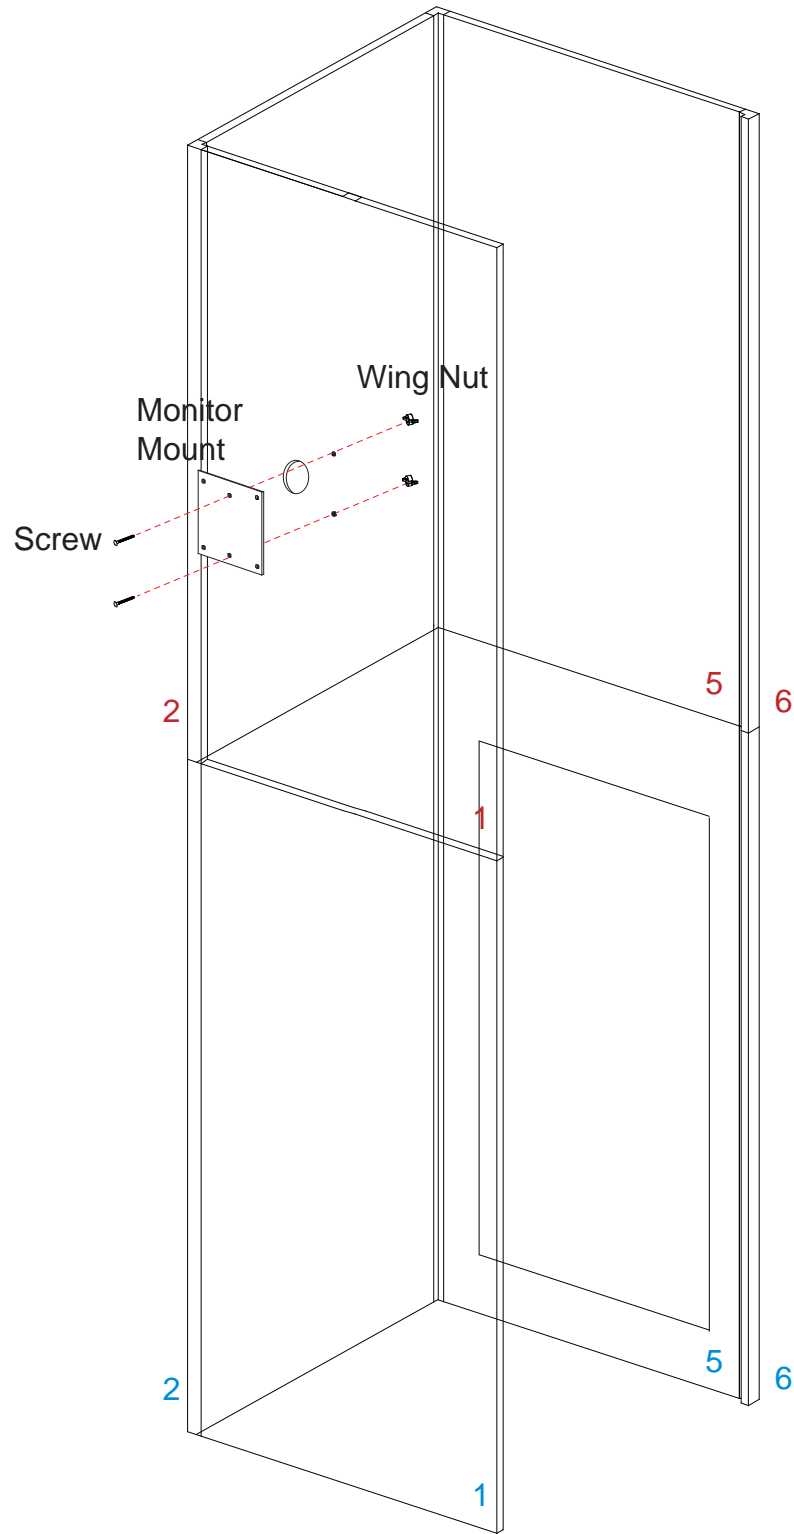


 - Steps:
- 1) After setting up monitor, attach panels and connectors 7 and 8.

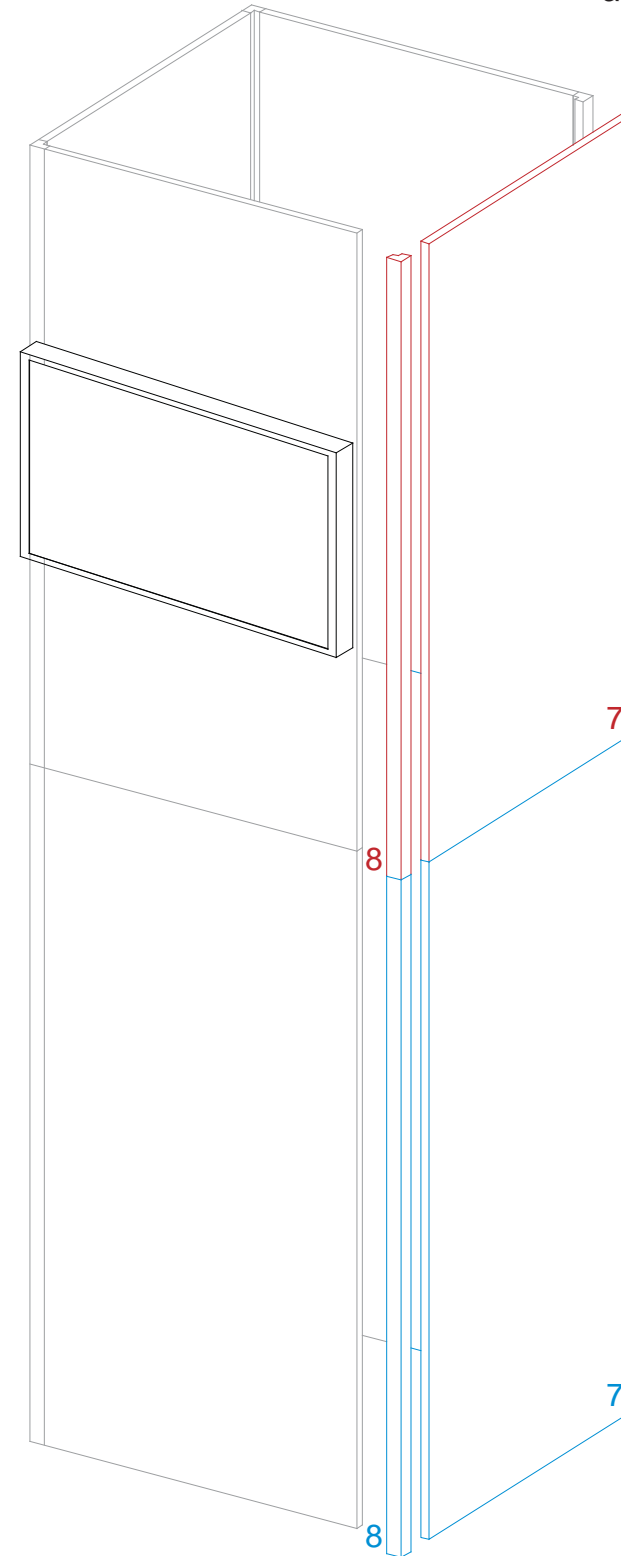


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

 
866.652.2100

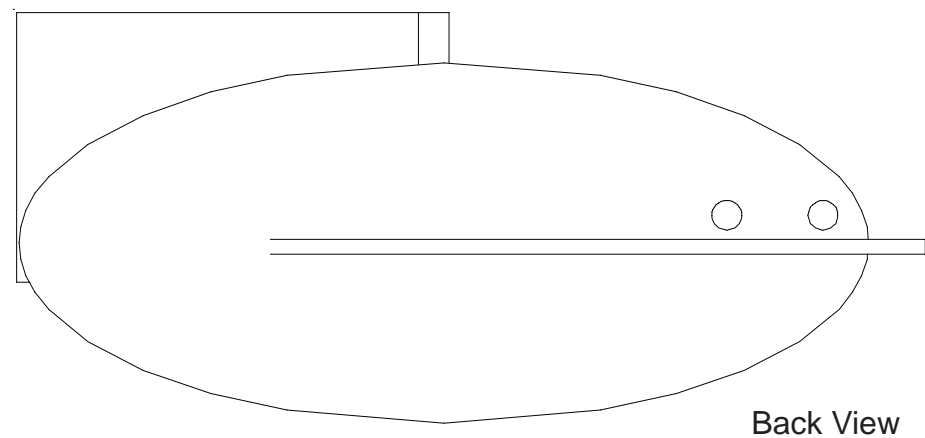

Back View

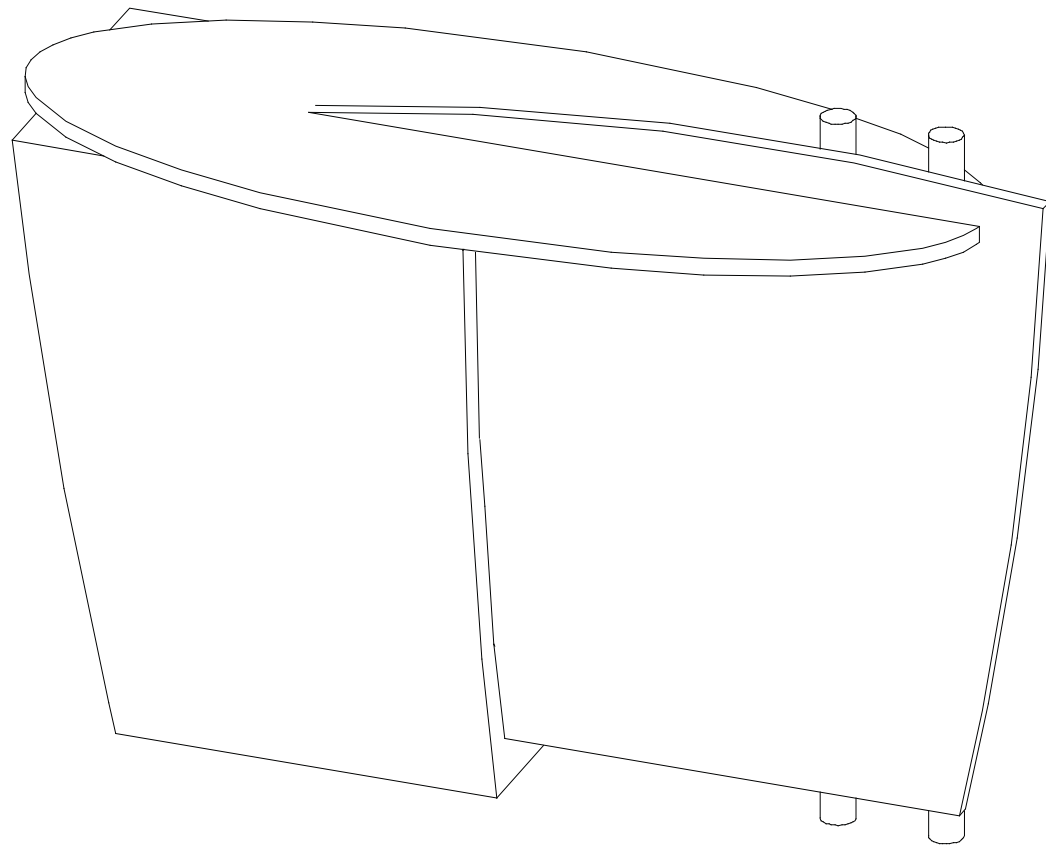 


Iso View

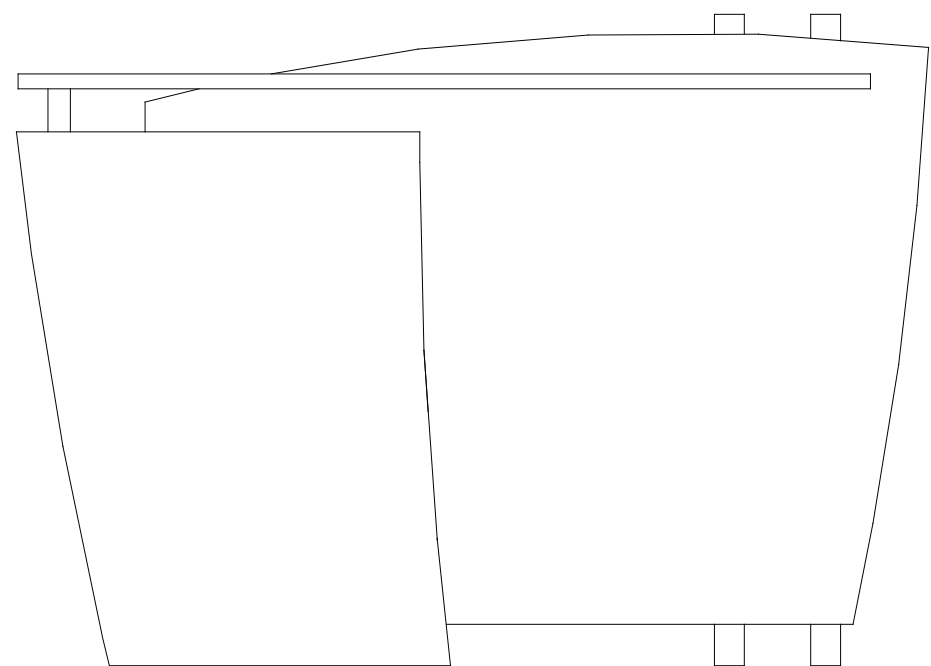 


Front View

 WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

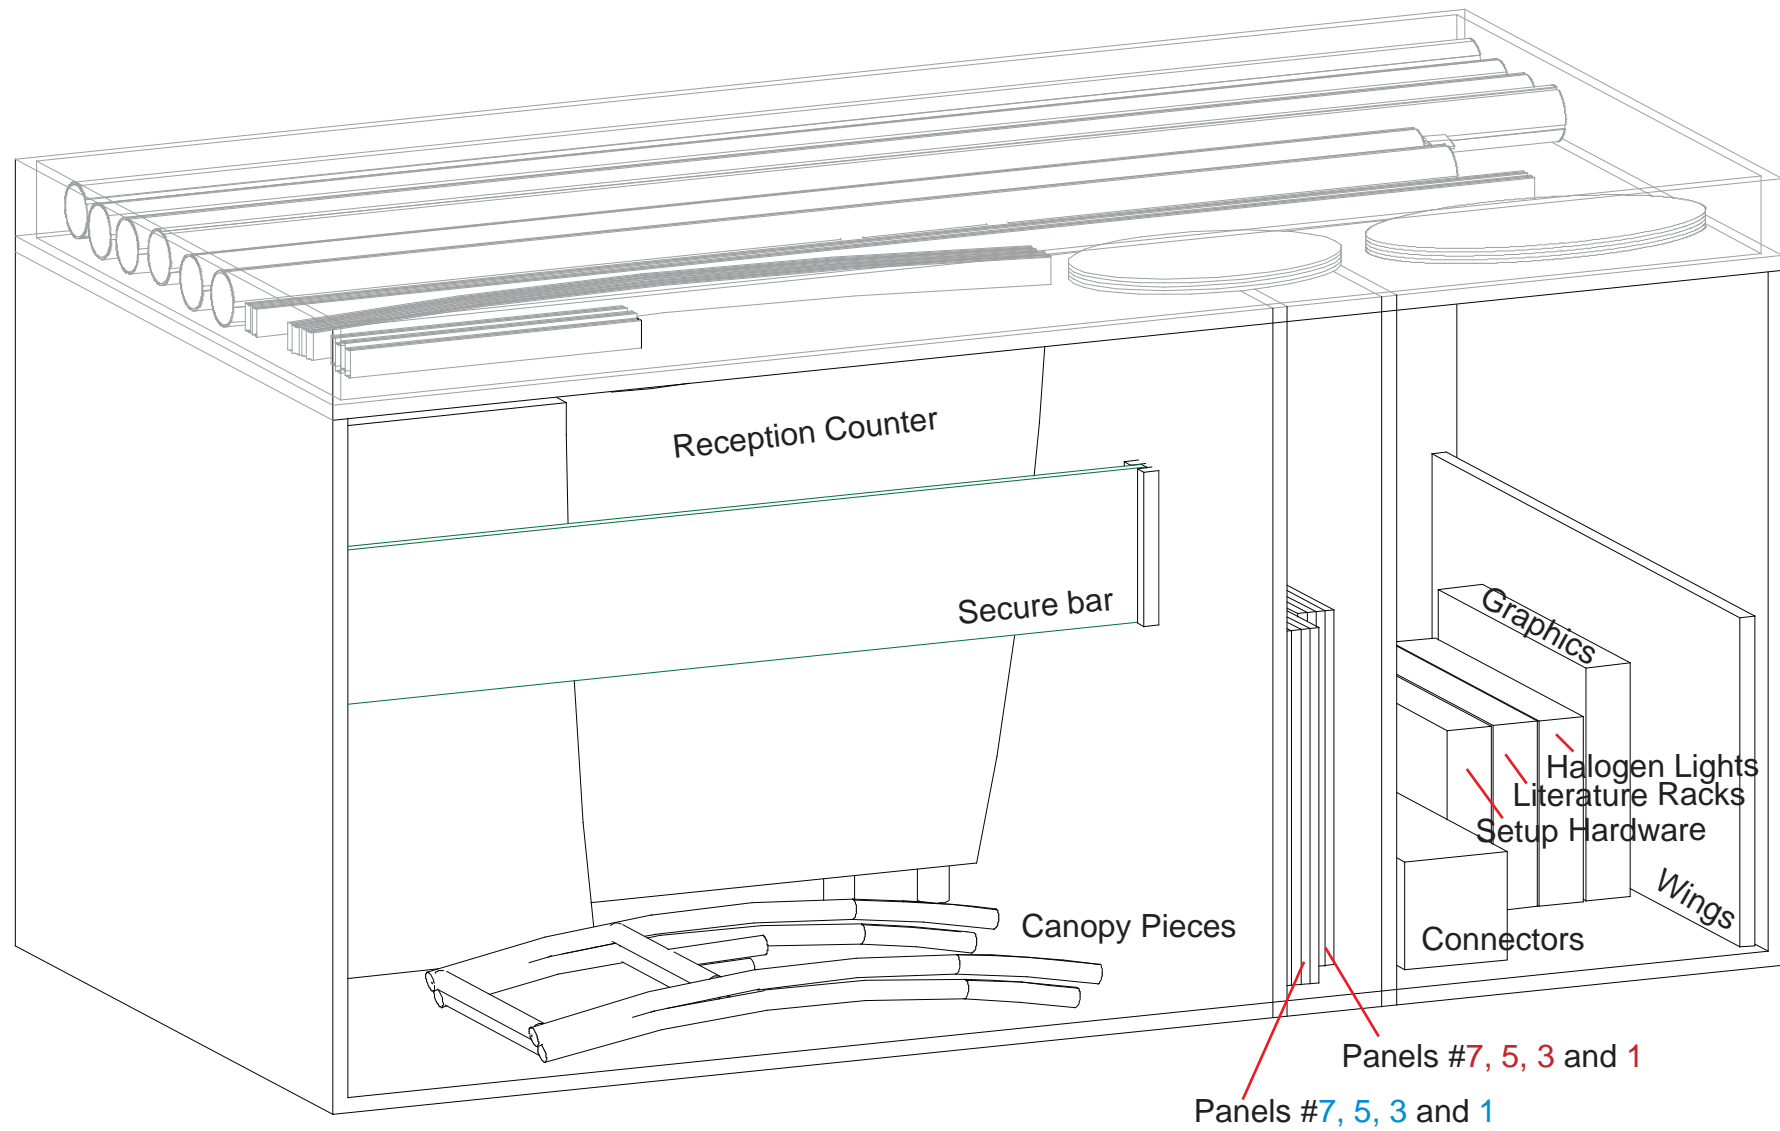

 WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

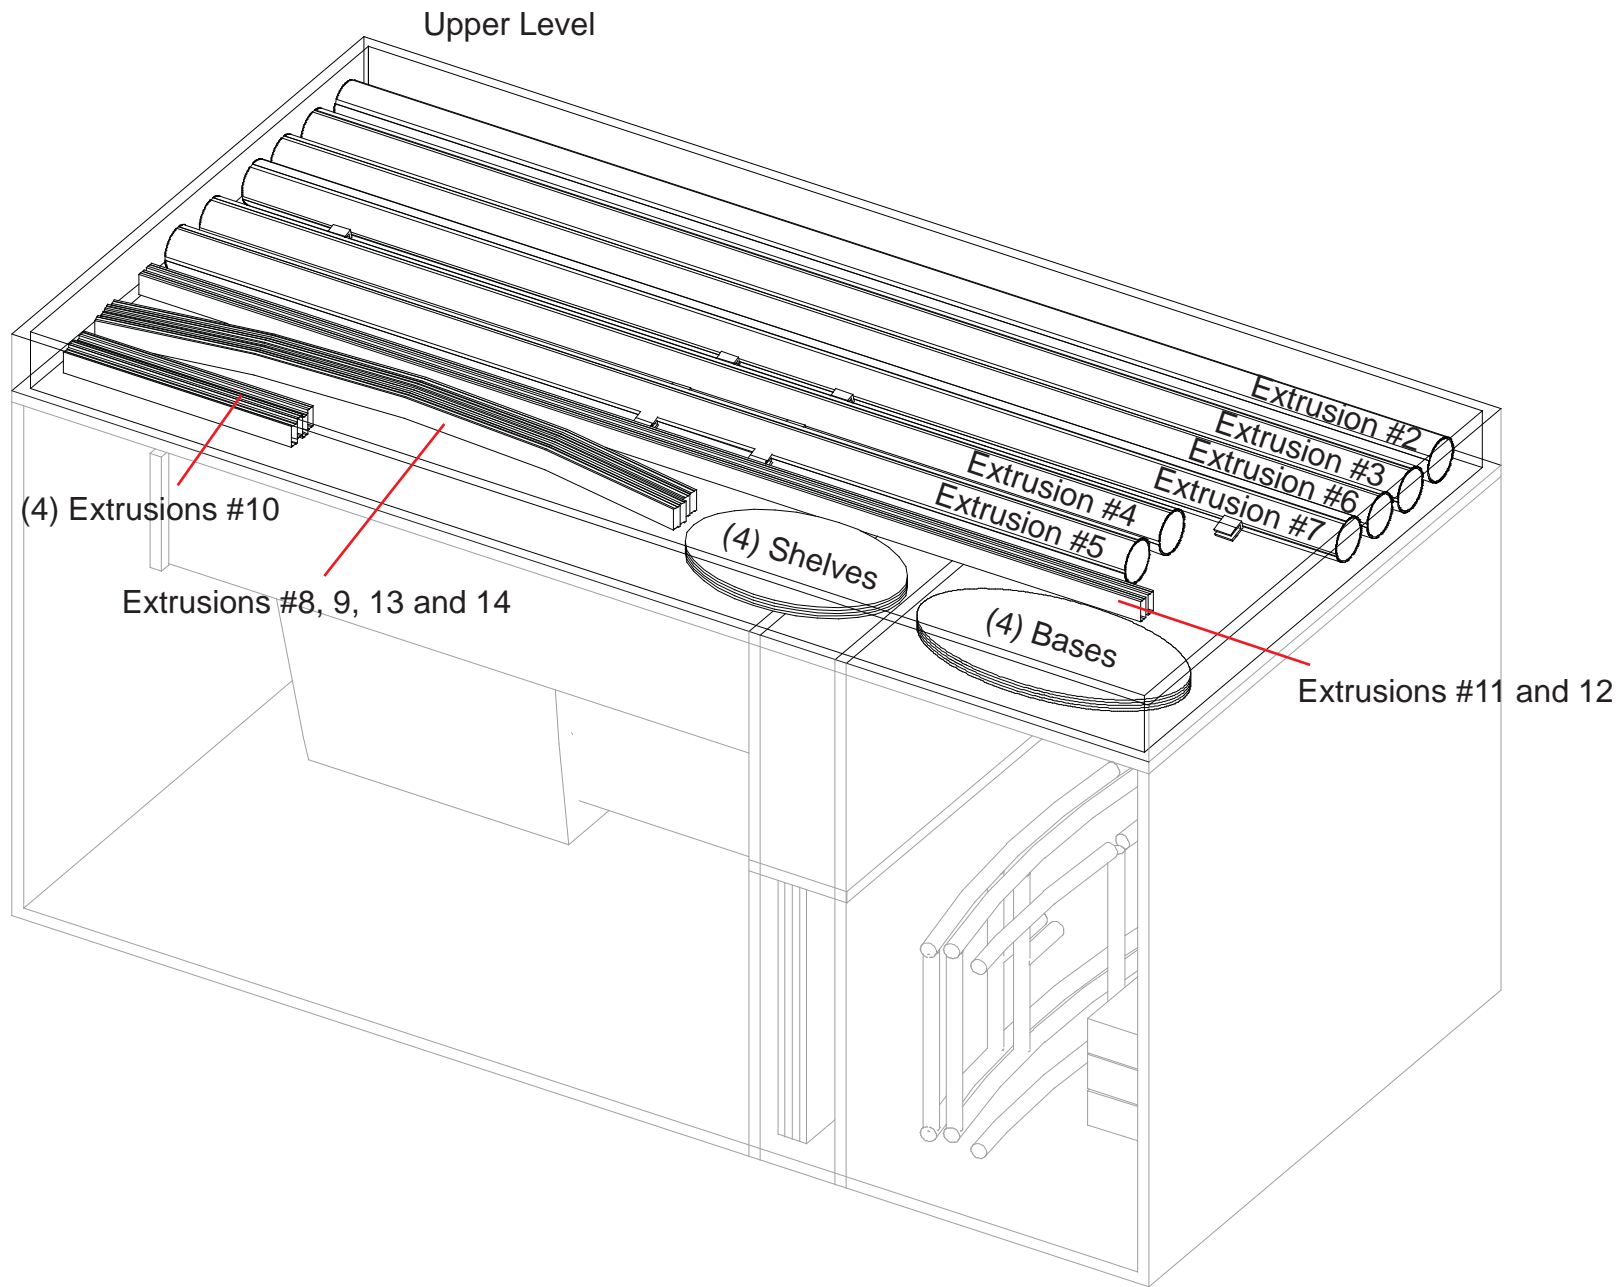

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING