

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

866.652.2100

VISICERS

Using Your Setup Instructions DESIGNS The Visionary Designs Setup Instructions are created specifically for your configuration. They are laid out sequentially, including an exploded view of the entire display, and then a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only


- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts or countertops, use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.



Most Visionary Designs exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

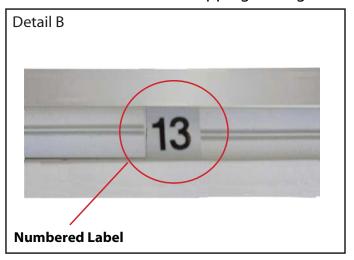

Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With Visionary Designs the labels contain Black numbers unless otherwise specified.



Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

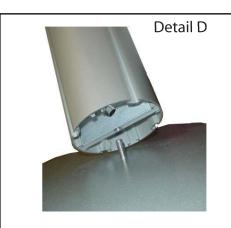

Base Plate Connection


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


www.classicexhibits.com

866.652.2100



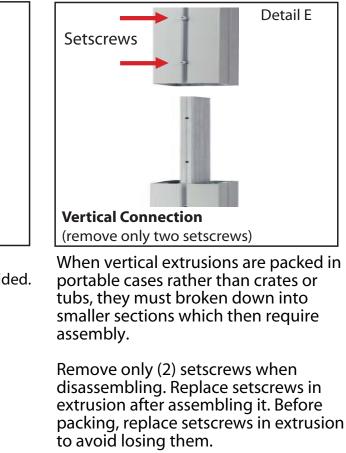


Order #XXXXX - Backwall Assembly

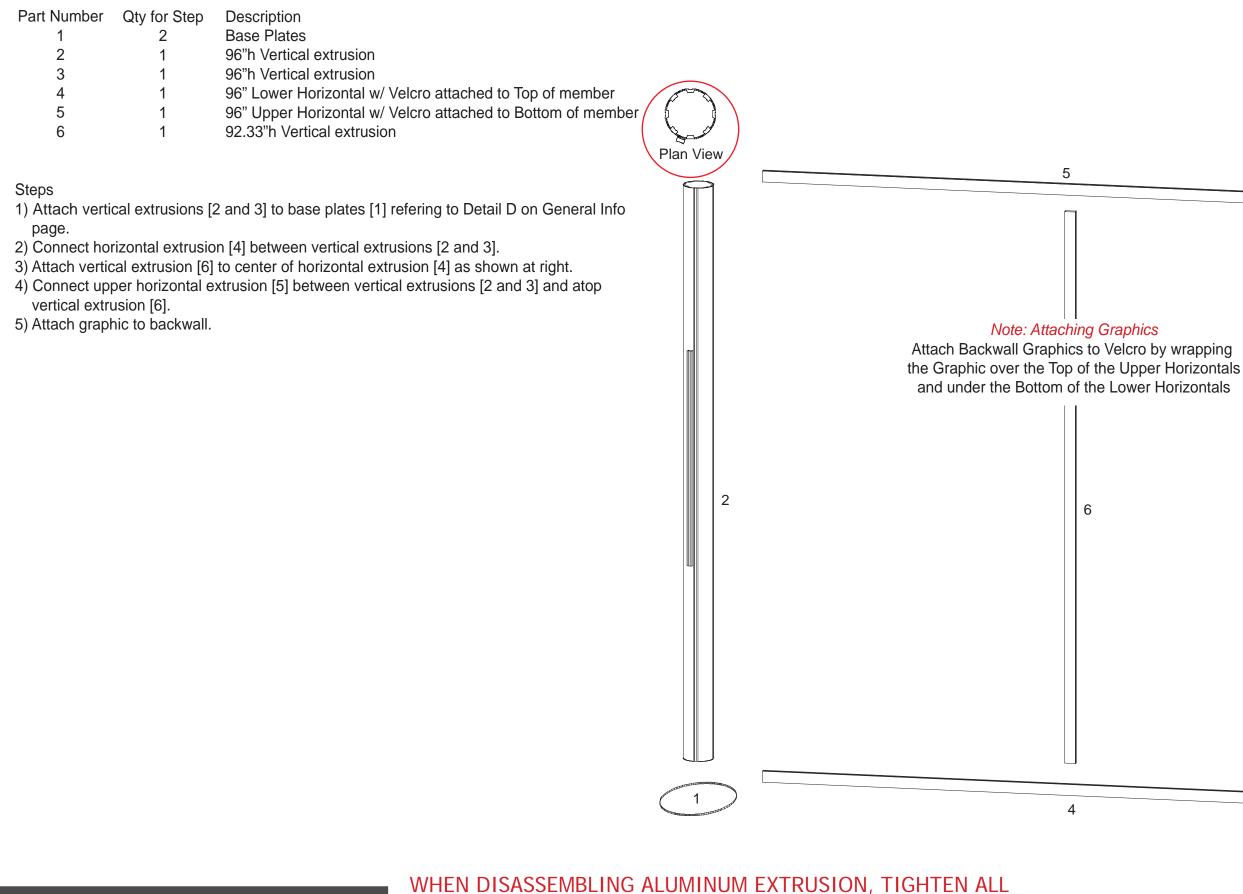

www.classicexhibits.com

SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

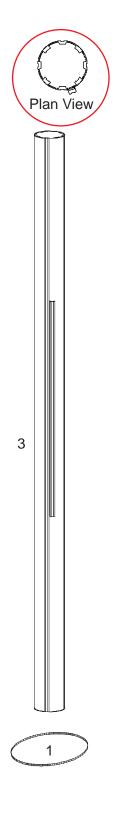

© 2008


Part Number	Description
7	25"h Horizontal extrusion w/ Velcro attached to Outside Edge
8	25"h Horizontal extrusion w/ Velcro attached to Outside Edge
9	98.3097" Curved extrusion w/ Velcro attached to Inside Edge
10	98.3097" Curved extrusion w/ Velcro attached to Inside Edge
11	25"h Horizontal extrusion w/ Velcro attached to Outside Edge
12	25"h Horizontal extrusion w/ Velcro attached to Outside Edge
13	98.3097" Curved extrusion w/ Velcro attached to Inside Edge
14	98.3097" Curved extrusion w/ Velcro attached to Inside Edge
15	25"h Horizontal extrusion w/ Velcro attached to Outside Edge
16	25"h Horizontal extrusion w/ Velcro attached to Outside Edge
17	98.3097" Curved extrusion w/ Velcro attached to Inside Edge
18	98.3097" Curved extrusion w/ Velcro attached to Inside Edge
Steps	
1) Attach horizontal extrusions [7, 8, 11, 12, 15, and 16] between curved vertica	


S

cal extrusions [9, 10, 13, 14, 17, and 18].

(NOTE: Vertical extusions [13 and 14] have extruision attachements that are located near the top for Header support)

- 2) Attach graphic to front side of frame.
- 3) Attach perf metal pieces using standoff caps to assembled center frame. (NOTE: Outer Frames also have holes for standoff connections but upon setup it was realized that it is very difficult to attach all caps)
- 4) Hook Assembled Frames over Backwall.

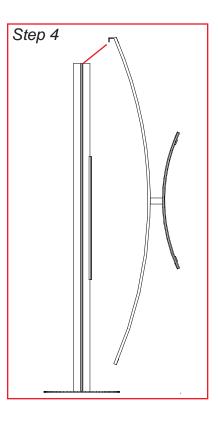


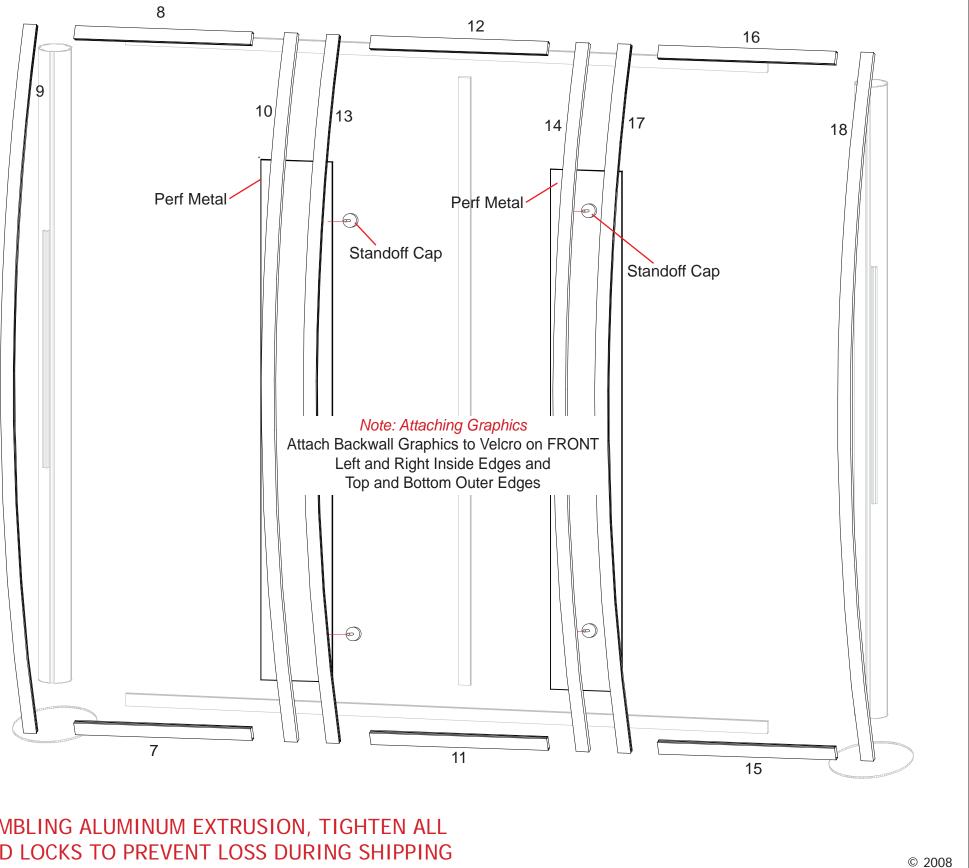

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com



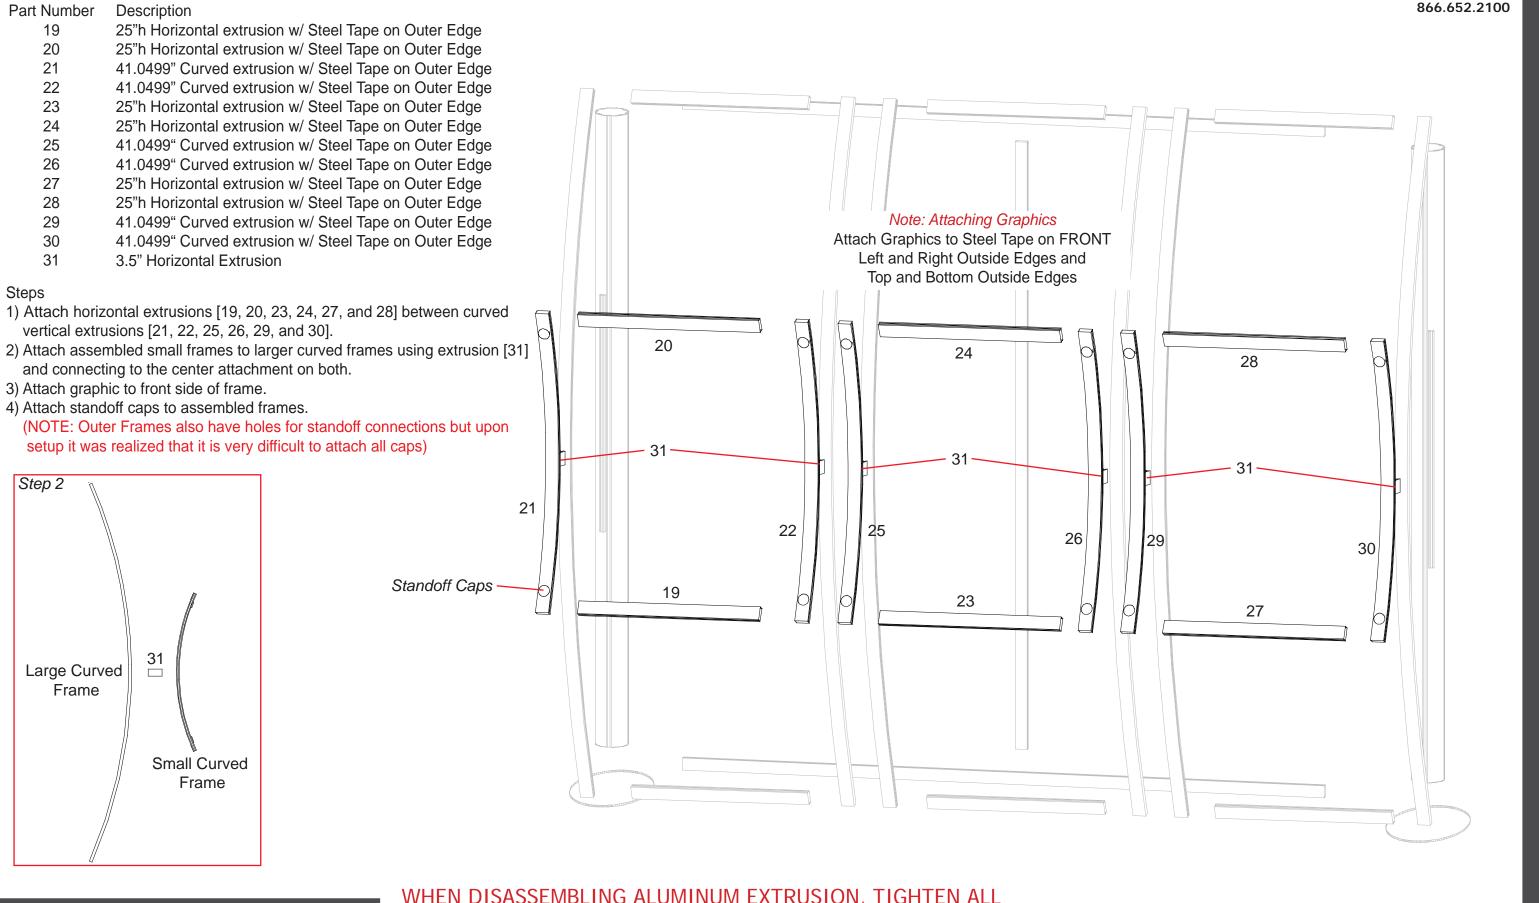


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

866.652.2100


© 2008

Page 3 of 6

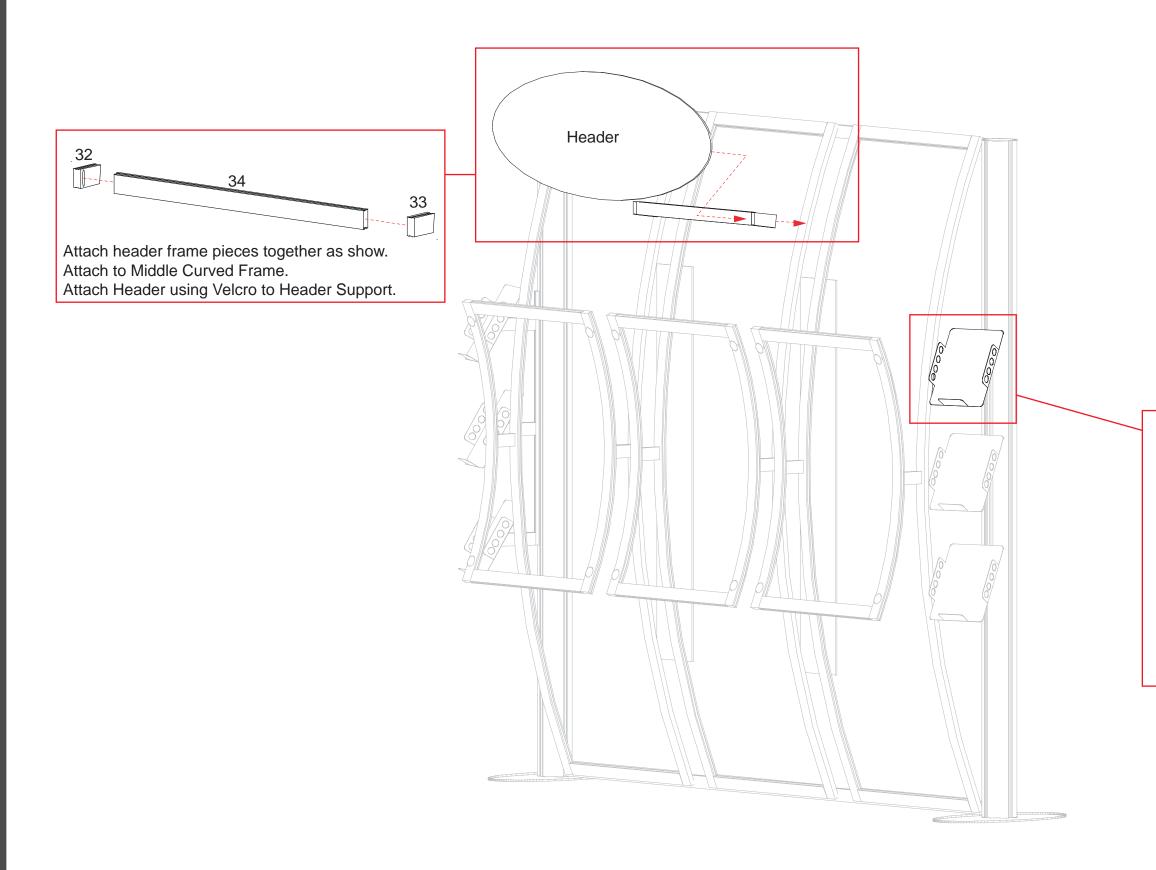



WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

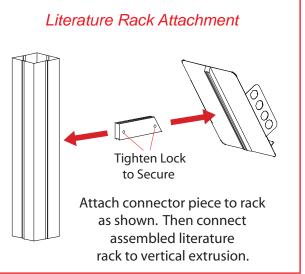

© 2008

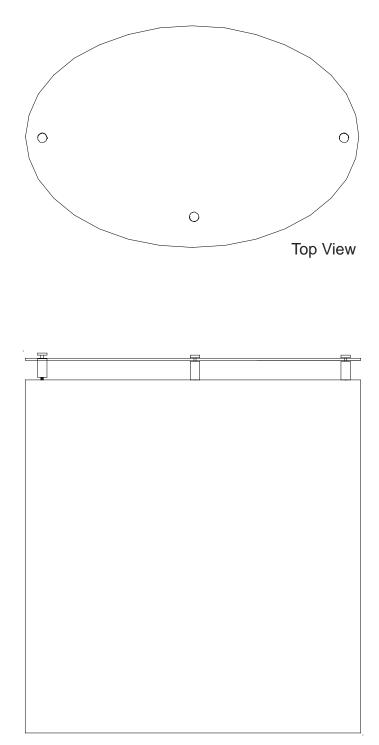

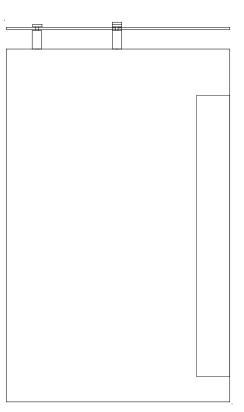


Front View

Back View

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


www.classicexhibits.com


866.652.2100

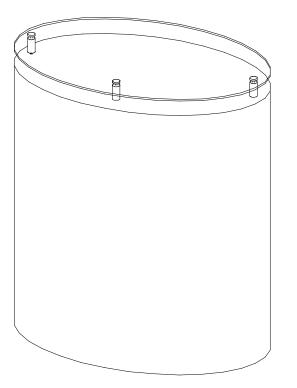

© 2008

Page 5 of 6

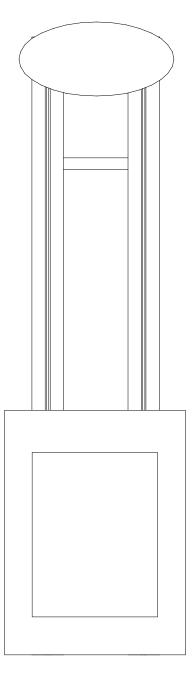

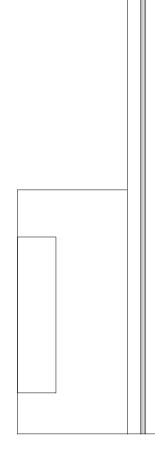


Front View

Back View

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

Step 6

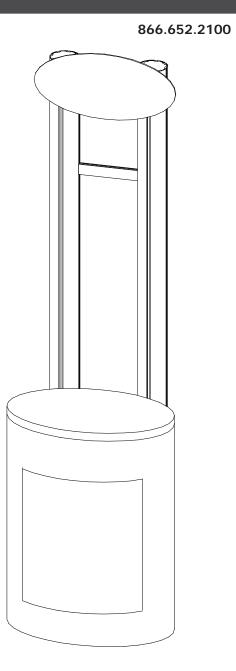

© 2008

Page 6 of 6