



euro It | HYBRIDS

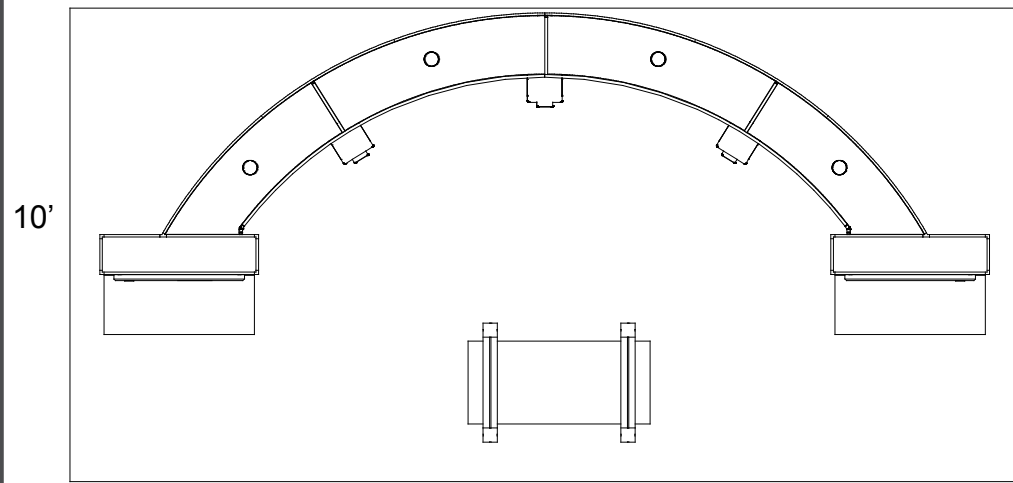

Plan View

20'

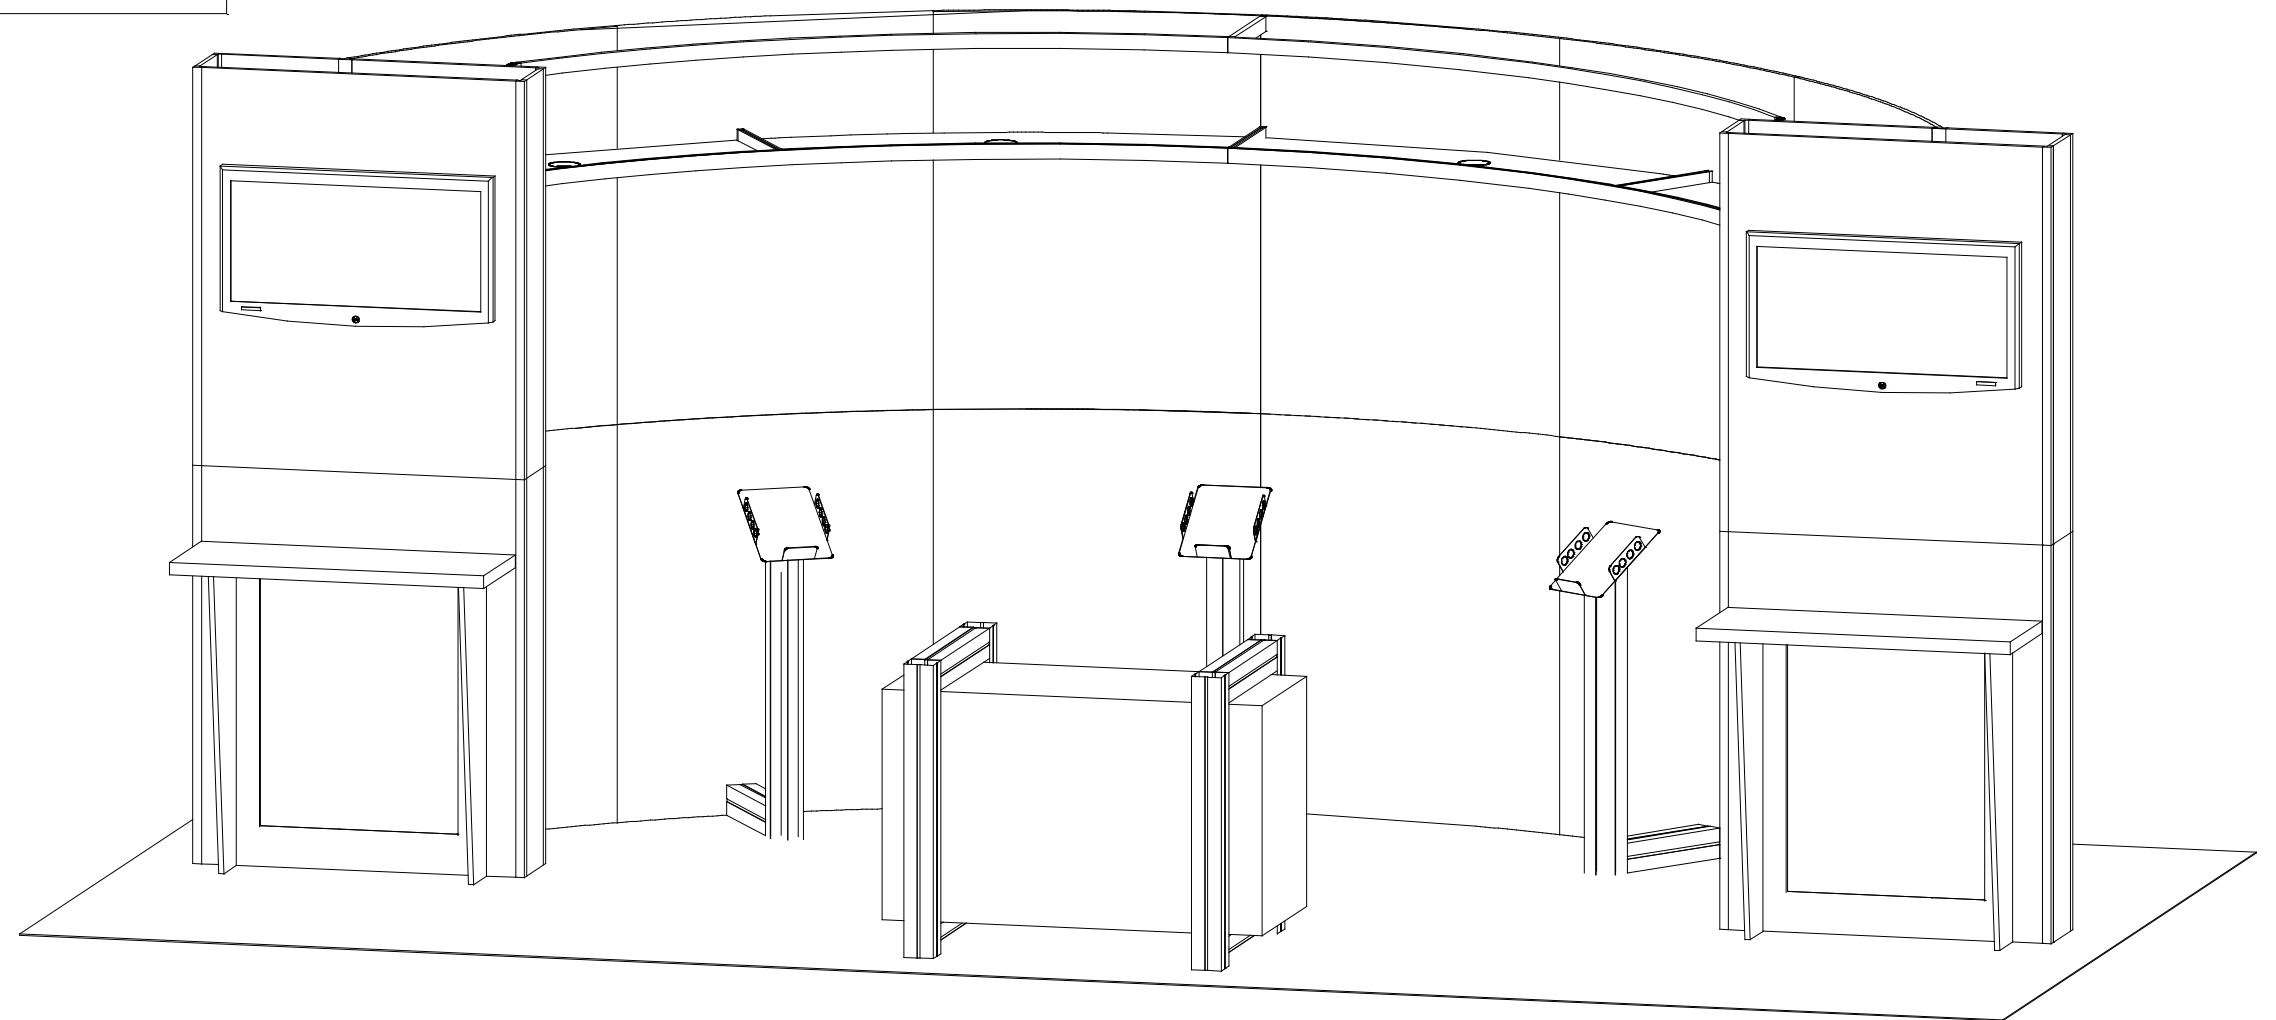

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

euro lt | HYBRIDS

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.


General Setup Instructions for Extrusion System




Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

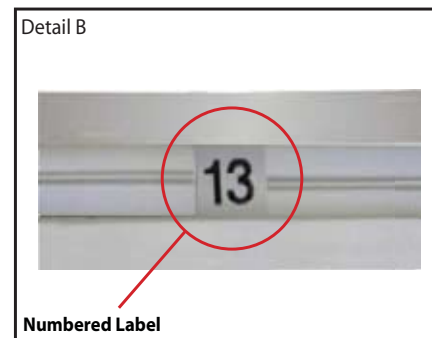


Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.

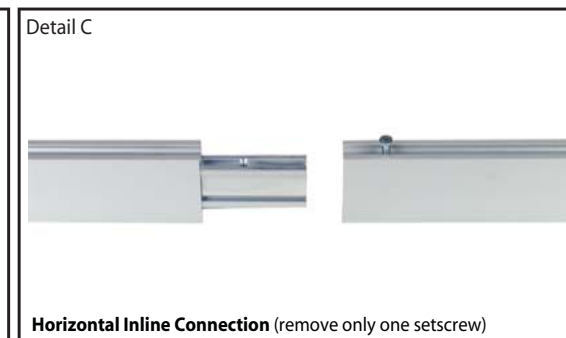

Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

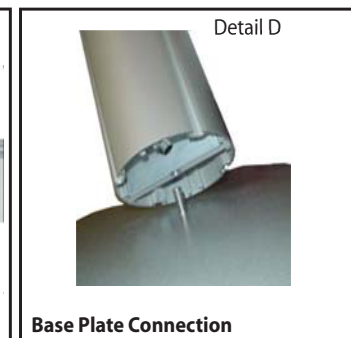


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

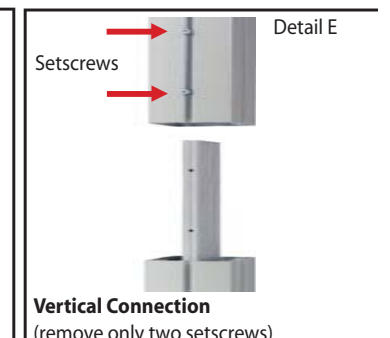


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.


Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

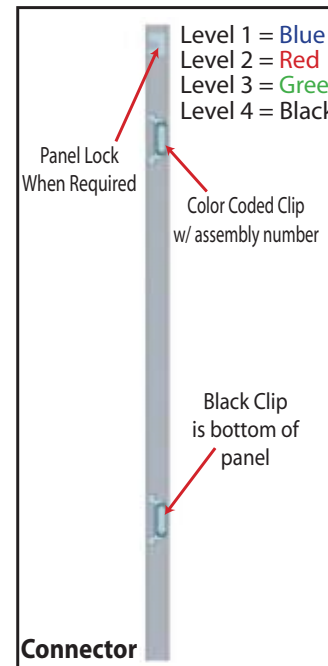


Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

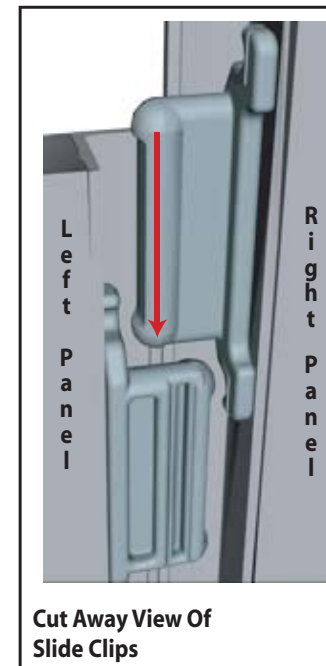

Components connect together by aligning them and sliding downward connecting clips together.

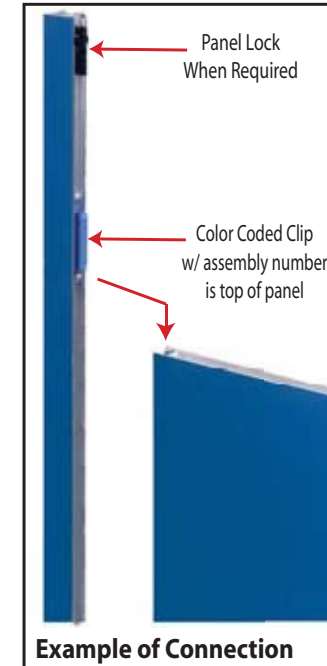

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

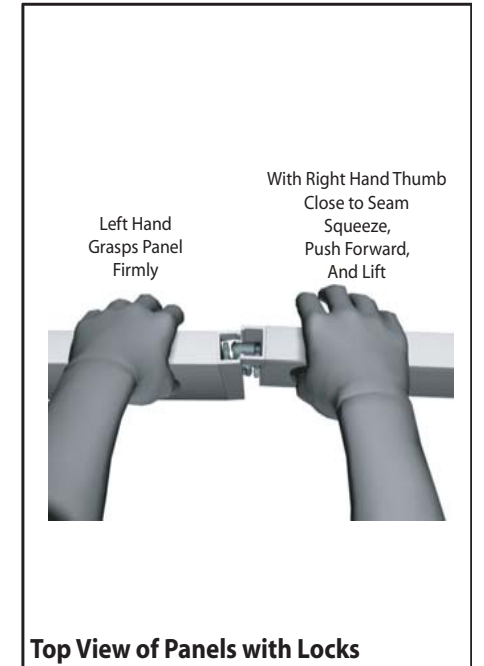


The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item Number	Description	Item Number	Description
1	47.5" h 3-way Connector	16	111.4172" r x 47.5" h Curved Panel
2	22.2219" w x 47.5" h Flat Panel	17	111.4172" r x 47.5" h Curved Panel
3	47.5" h 90° Connector	18	111.4172" r x 47.5" h Curved Panel
4	8" w x 47.5" h Flat Panel	19	47.5" h 3-way Connector
5	47.5" h 90° Connector	20	14.125" w x 47.5" h Flat Panel
6	38" w x 47.5" h Flat Panel w/Door	21	47.5" h 90° Connector
7	47.5" h 90° Connector	22	8" w x 47.5" h Flat Panel
8	8" w x 47.5" h Flat Panel	23	47.5" h 90° Connector
9	47.5" h 90° Connector	24	38" w x 47.5" h Flat Panel w/Door
10	14.125" w x 47.5" h Flat Panel	25	47.5" h 90° Connector
11	11" w x 38" h Tapered Panel	26	8" w x 47.5" h Flat Panel
12	11" w x 38" h Tapered Panel	27	47.5" h 90° Connector
13	111.4172" r x 47.5" h Curved Panel	28	22.2219" w x 47.5" h Flat Panel
14	111.4172" r x 47.5" h Curved Panel	29	11" w x 38" h Tapered Panel
15	111.4172" r x 47.5" h Curved Panel	30	11" w x 38" h Tapered Panel


Steps:
Connect panels together in numerical order as shown in illustrations.

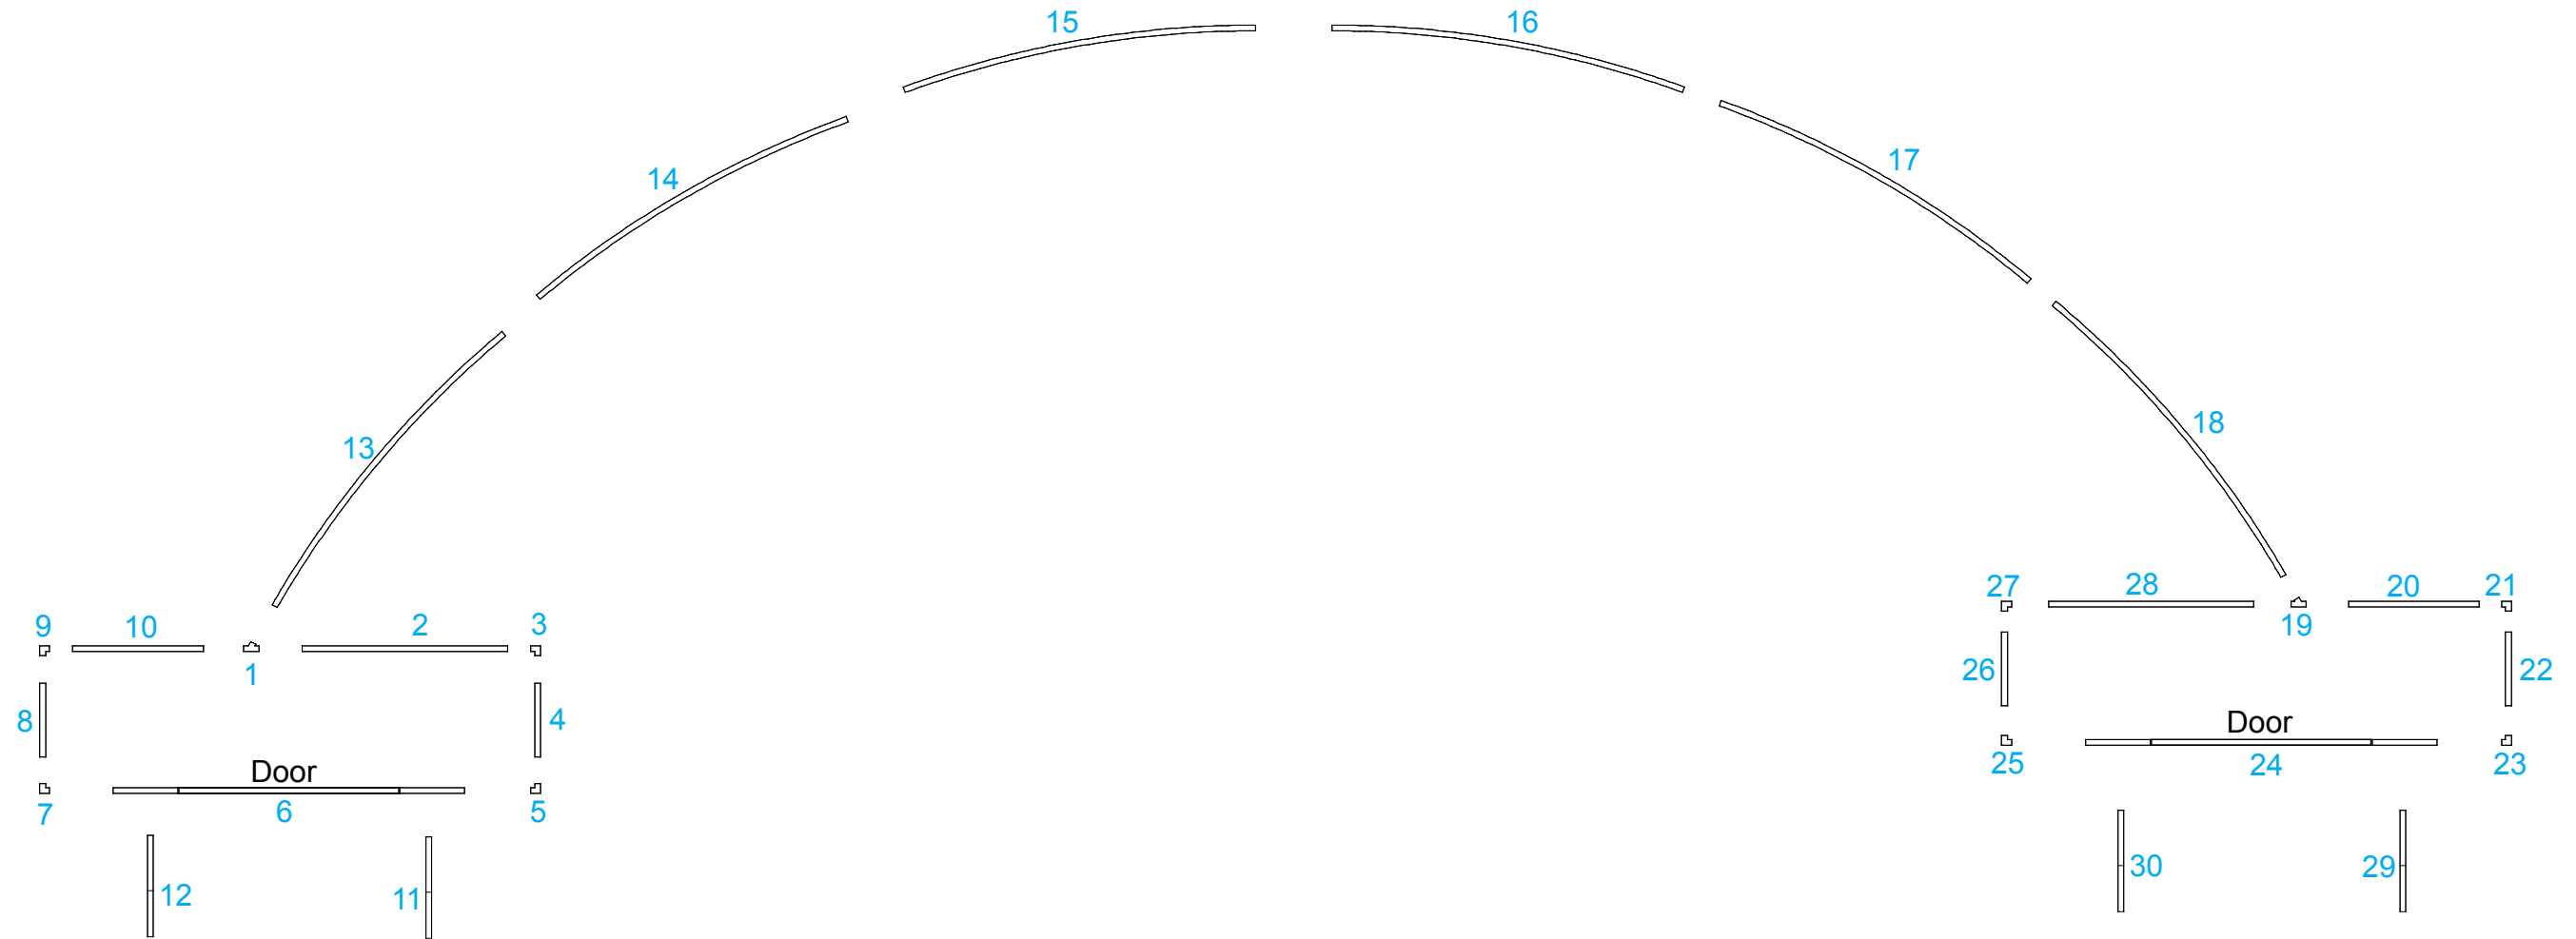

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item Number	Description	Item Number	Description
1	47.5" h 3-way Connector	16	111.4172" r x 47.5" h Curved Panel
2	22.2219" w x 47.5" h Flat Panel	17	111.4172" r x 47.5" h Curved Panel
3	47.5" h 90° Connector	18	111.4172" r x 47.5" h Curved Panel
4	8" w x 47.5" h Flat Panel	19	47.5" h 3-way Connector
5	47.5" h 90° Connector	20	14.125" w x 47.5" h Flat Panel
6	38" w x 47.5" h Flat Panel	21	47.5" h 90° Connector
7	47.5" h 90° Connector	22	8" w x 47.5" h Flat Panel
8	8" w x 47.5" h Flat Panel	23	47.5" h 90° Connector
9	47.5" h 90° Connector	24	38" w x 47.5" h Flat Panel
10	14.125" w x 47.5" h Flat Panel	25	47.5" h 90° Connector
13	111.4172" r x 47.5" h Curved Panel	26	8" w x 47.5" h Flat Panel
14	111.4172" r x 47.5" h Curved Panel	27	47.5" h 90° Connector
15	111.4172" r x 47.5" h Curved Panel	28	22.2219" w x 47.5" h Flat Panel


Steps:
Connect panels together in numerical order as shown in illustrations.

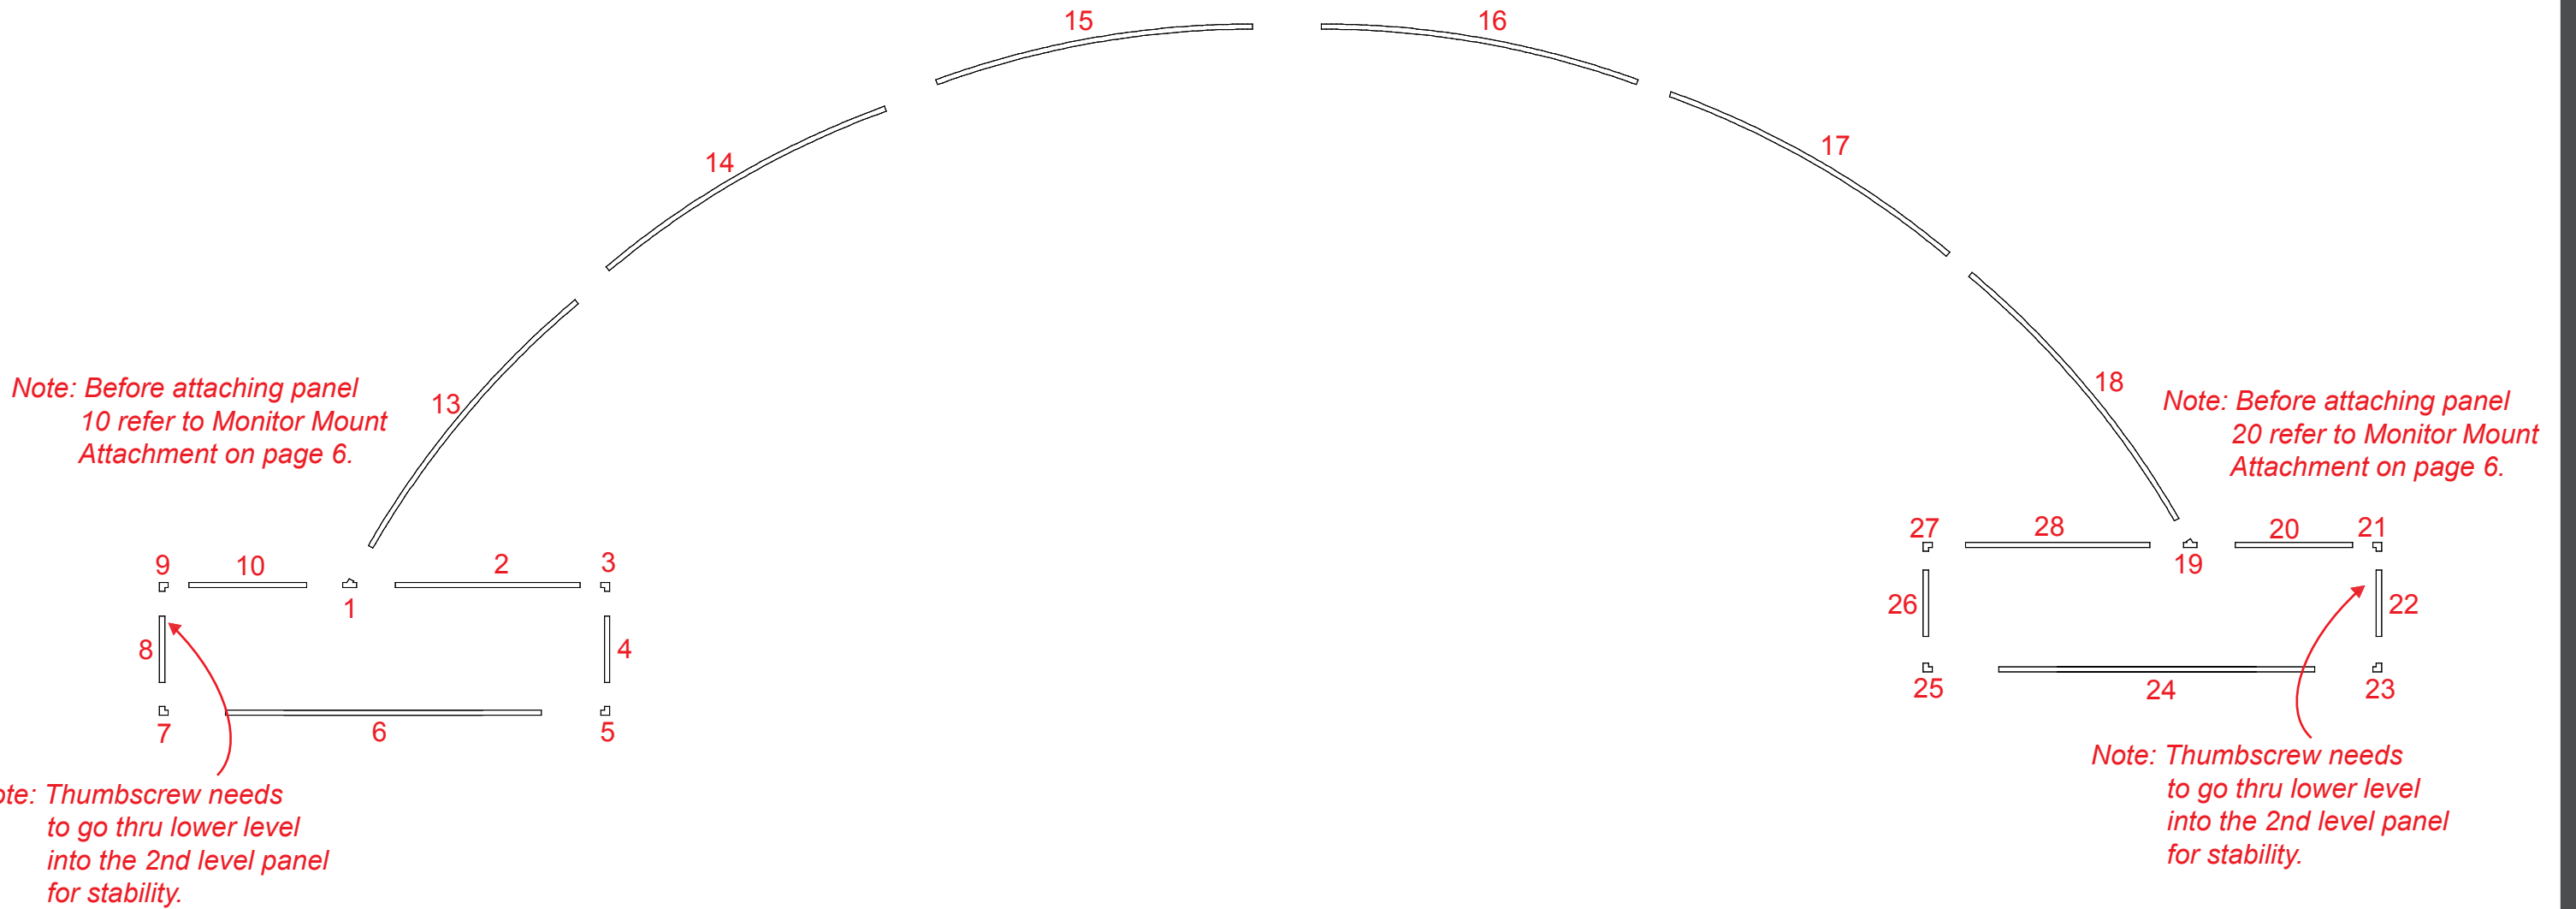

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING



866.652.2100

Part	Qty	Description
3	1	88.4726" Curved Extrusion
4	1	88.4726" Curved Extrusion
5	1	88.4726" Curved Extrusion
6	1	88.4726" Curved Extrusion
7	3	14.5" Extrusion
7a	1	11.4" Extrusion
8	1	14.5" Extrusion
9	2	15" Hinged Assembly

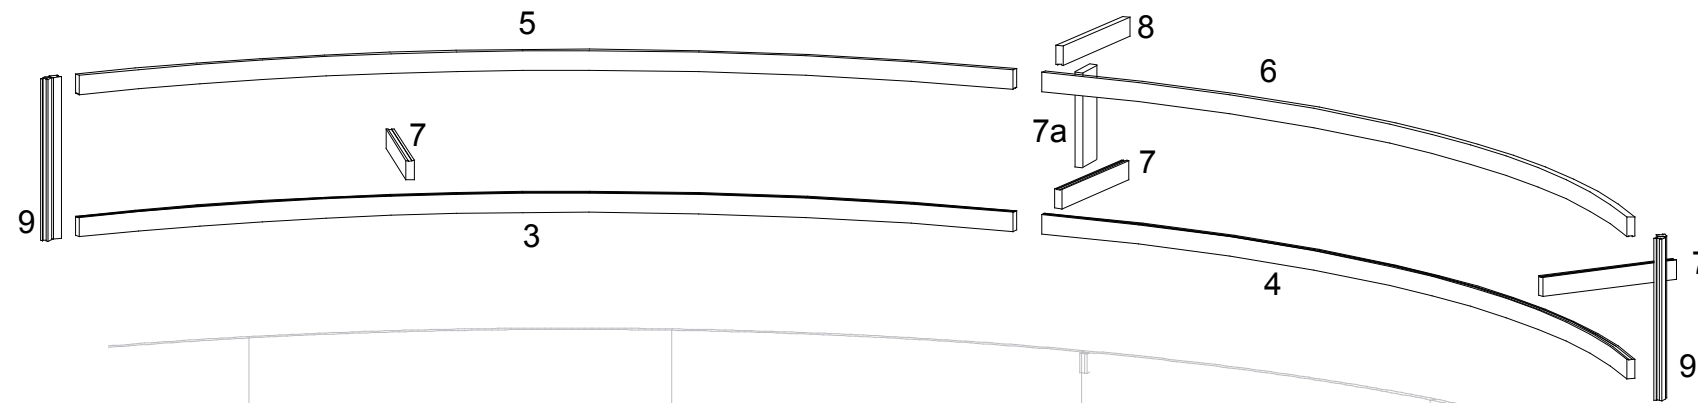


Steps

- 1) Connect hinged assemblies [9] to back panels per detail below.
- 2) Connect curved extrusions [3 to 4 and 5 to 6].
- 3) Attach curved assemblies between vertical hinged assemblies [9] making sure they are flush with the top and the bottom.
- 4) Connect horizontal extrusions [7 and 8] between backwall and curved extrusions.
- 5) Connect vertical extrusion [7a] between [7 and 8] as shown.

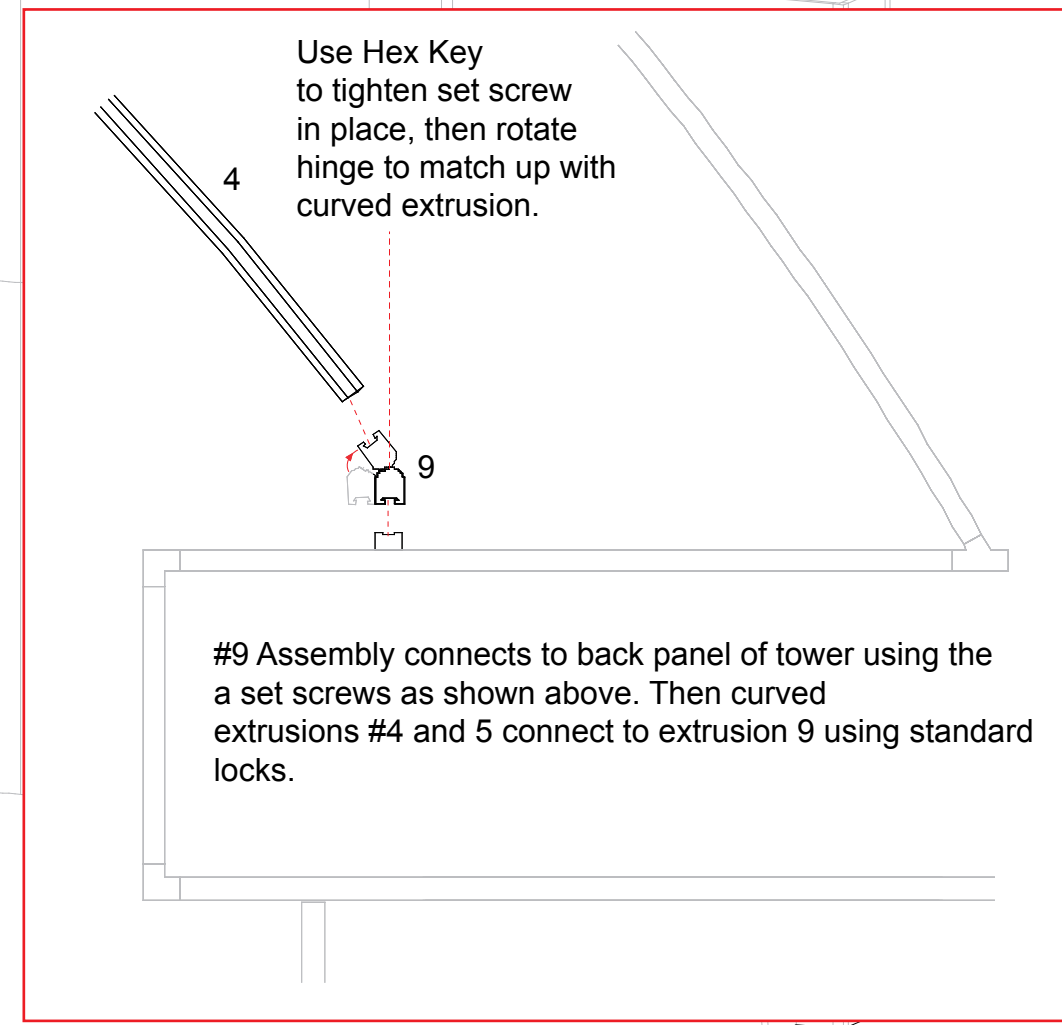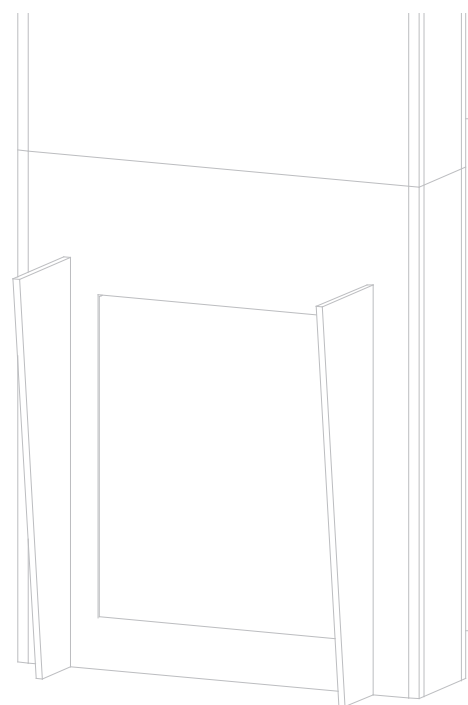

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Set Ceiling into place atop pins on lower section of header frames.

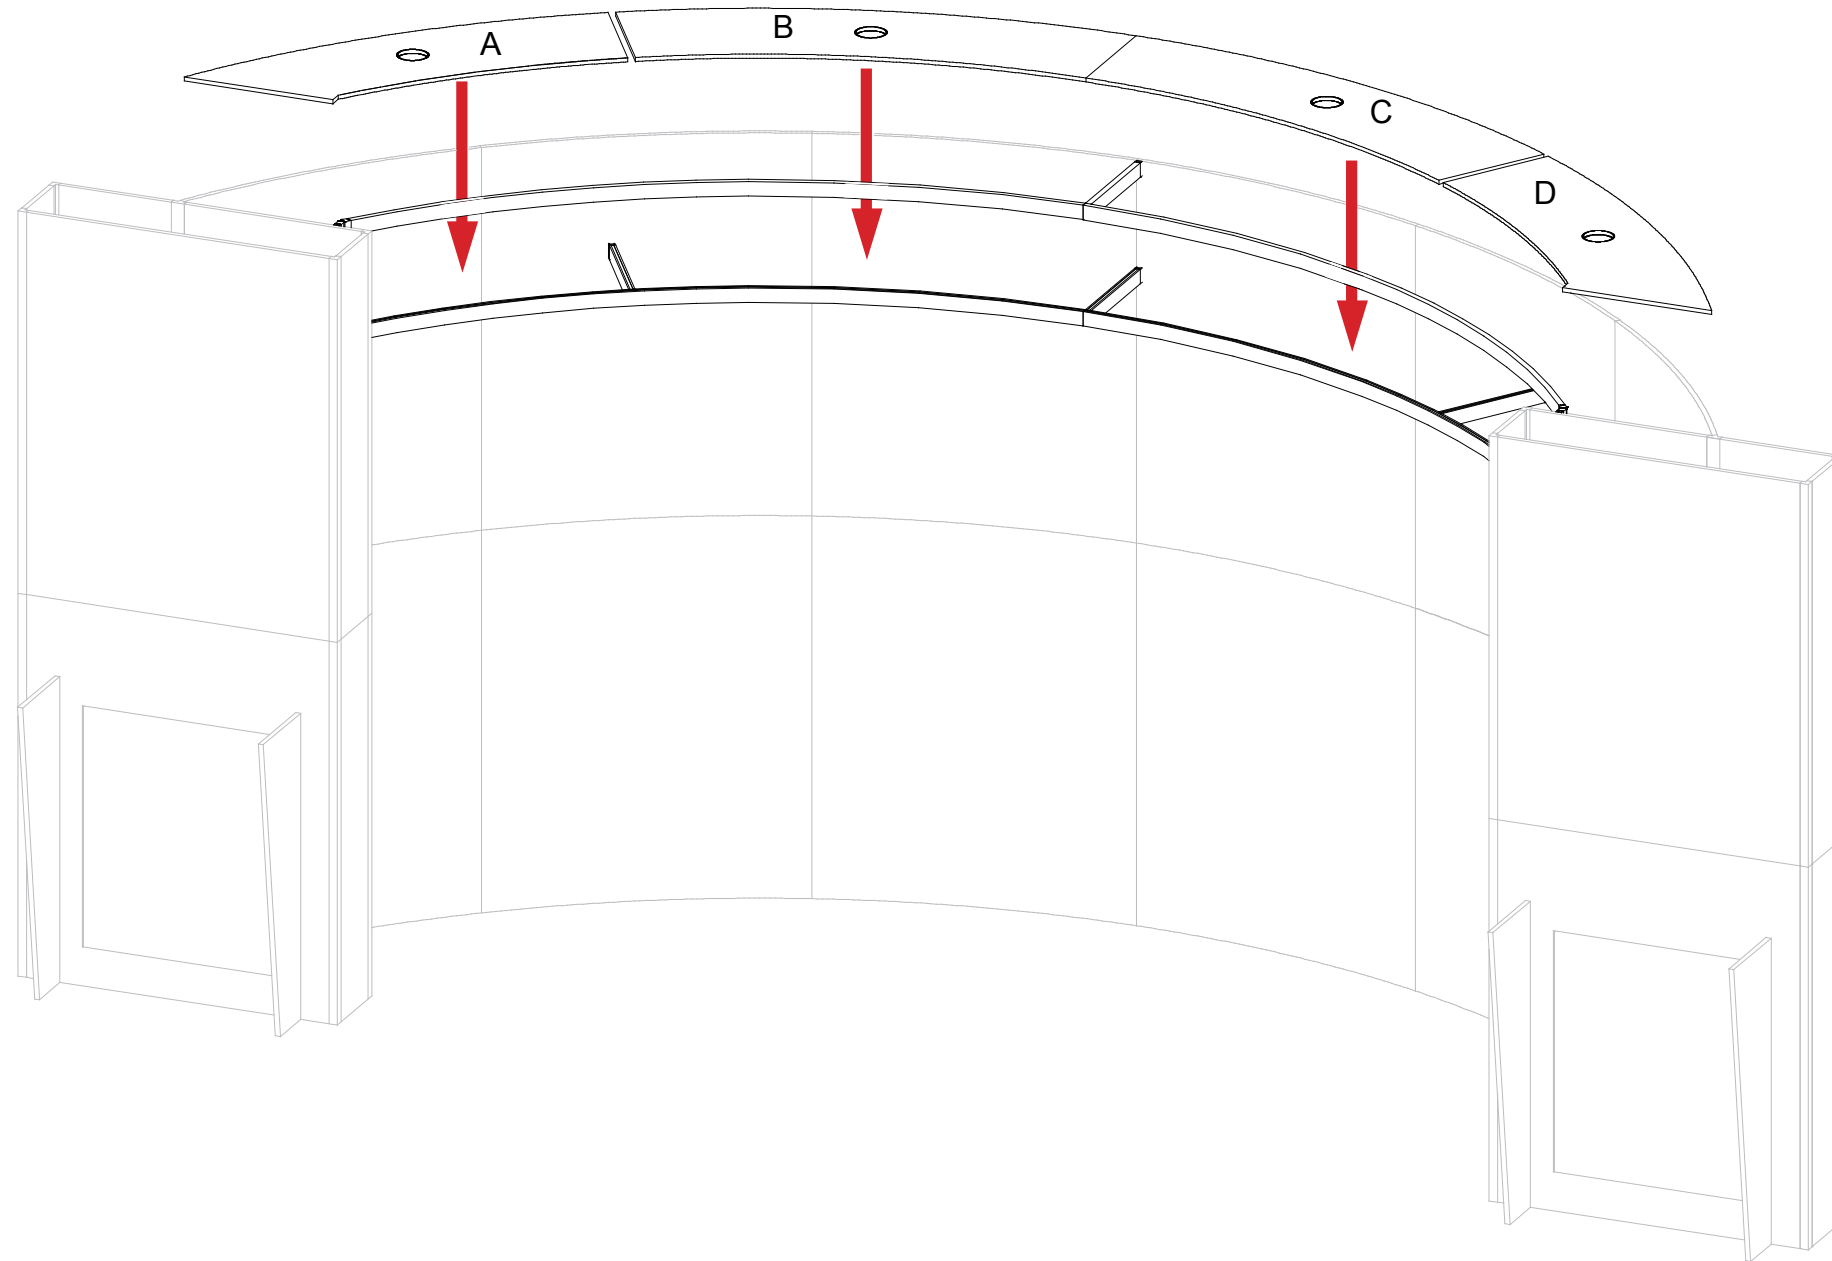

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Modul Attached Display Stand

Backwall Panel

Lit Rack

1

2

Attach Vertical post [2] to horizontal post [1] as shown. Refer to General Info page for Lock connection detail.

Attach assembly to backwall panels referring to detail at left and General Info page.

Attach Lit Rack by referring to detail above.

Repeat for all 3 assemblies.

Literature Rack Attachment

Tighten Lock to Secure

Attach rack as shown to vertical extrusion.


Place Counters atop panels as shown and secure to backwall using hardware provided.



Place Counters atop panels as shown and secure to backwall using hardware provided.


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Attach Rollable Graphic Panels to Backwal via magnet to steel tape.
Also attach Rollable Header Graphic using the same method.

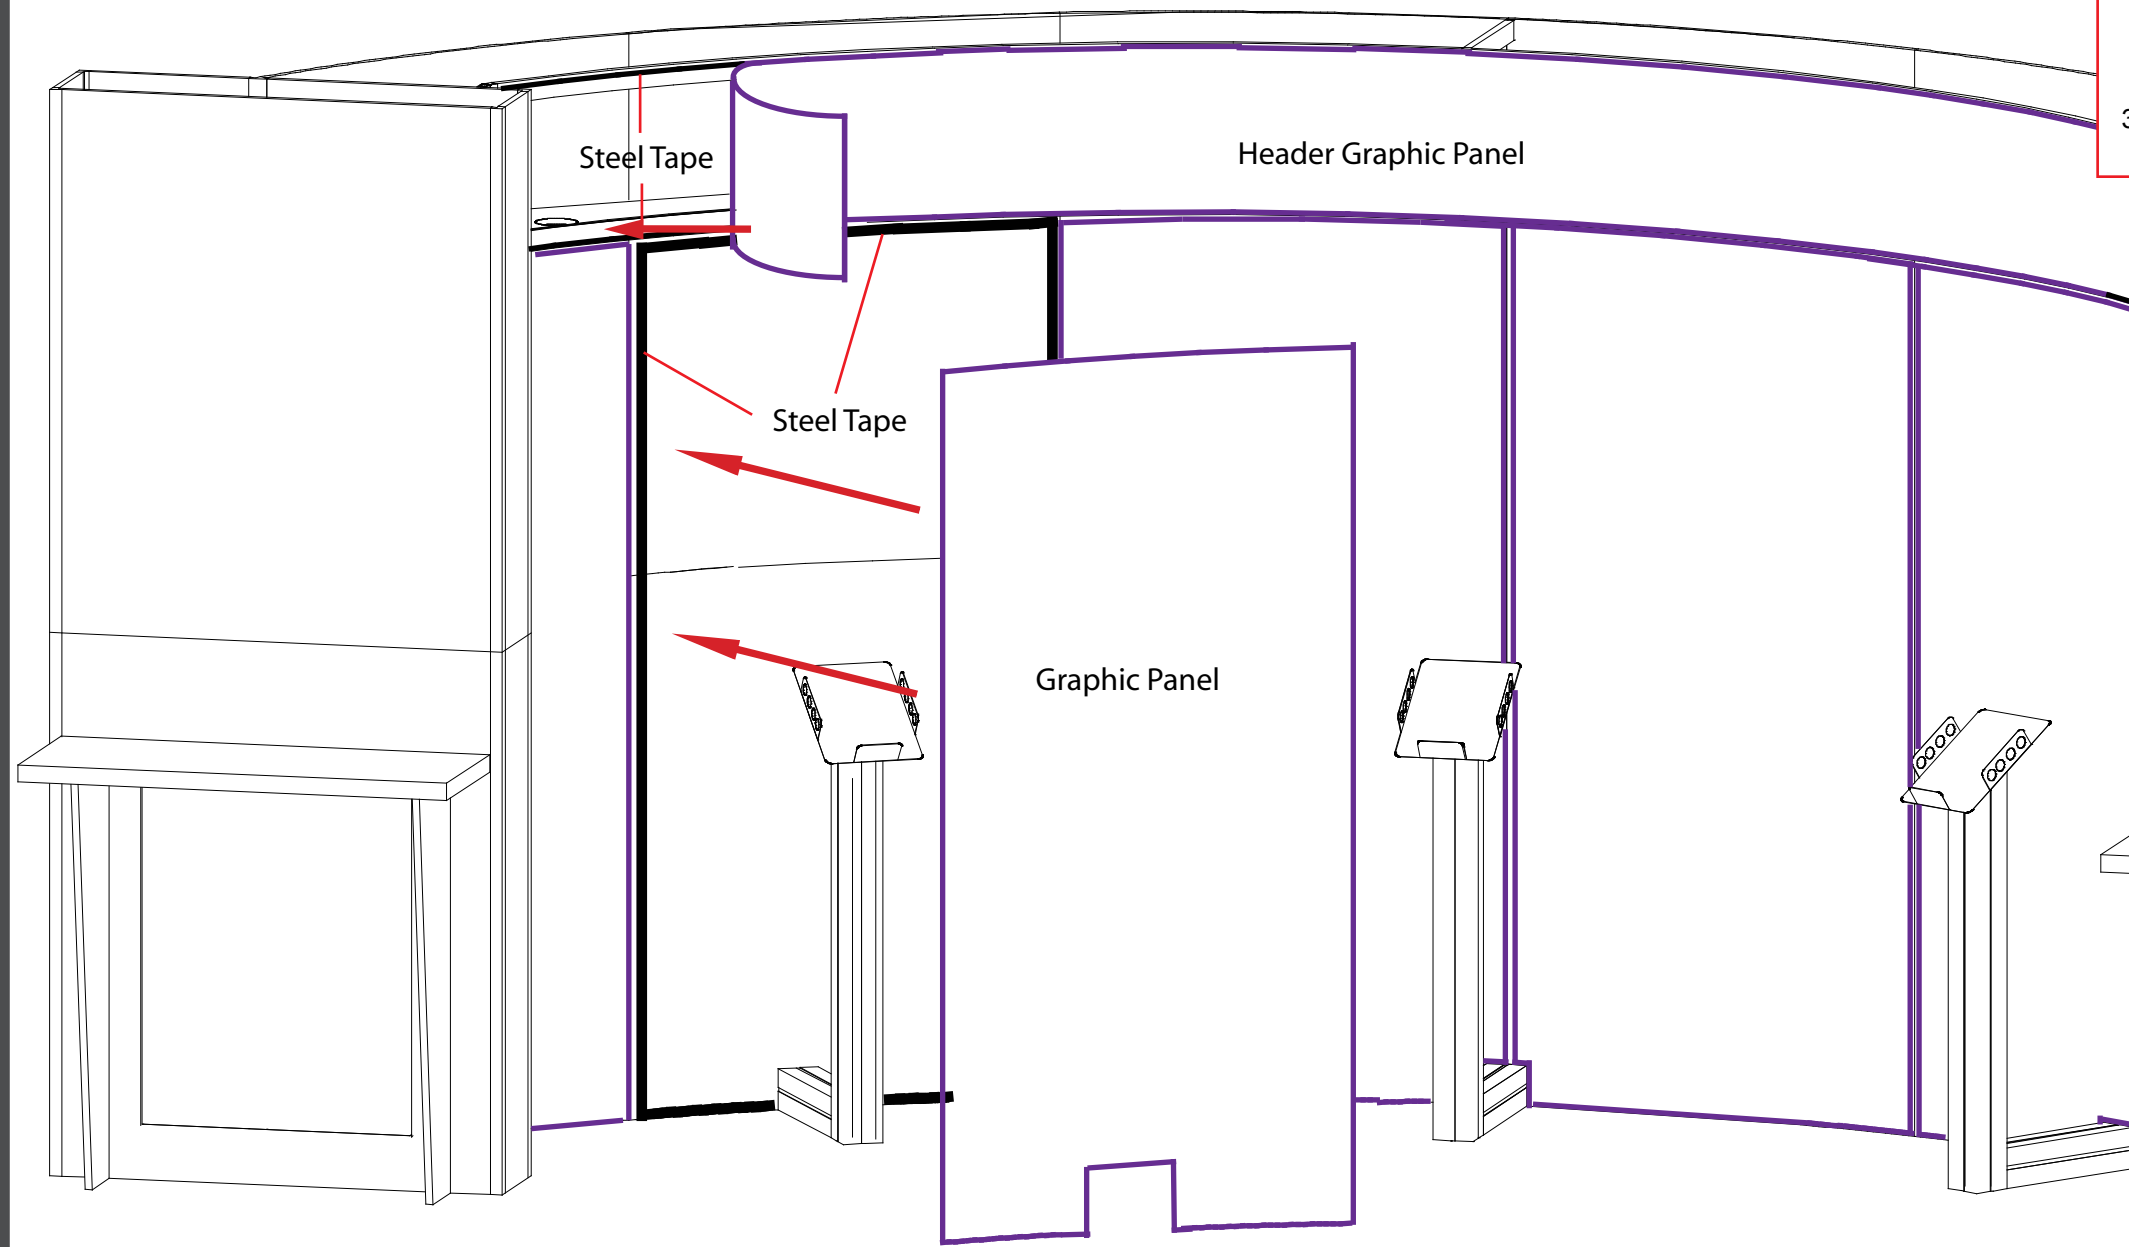

*** Monitor Mount**



- 1) Attach Plate to Panel
- 2) Attach monitor brackets to back of monitor.
- 3) Hook monitor brackets over top of wall plate, then secure with safety bolts to bottom of monitor brackets.

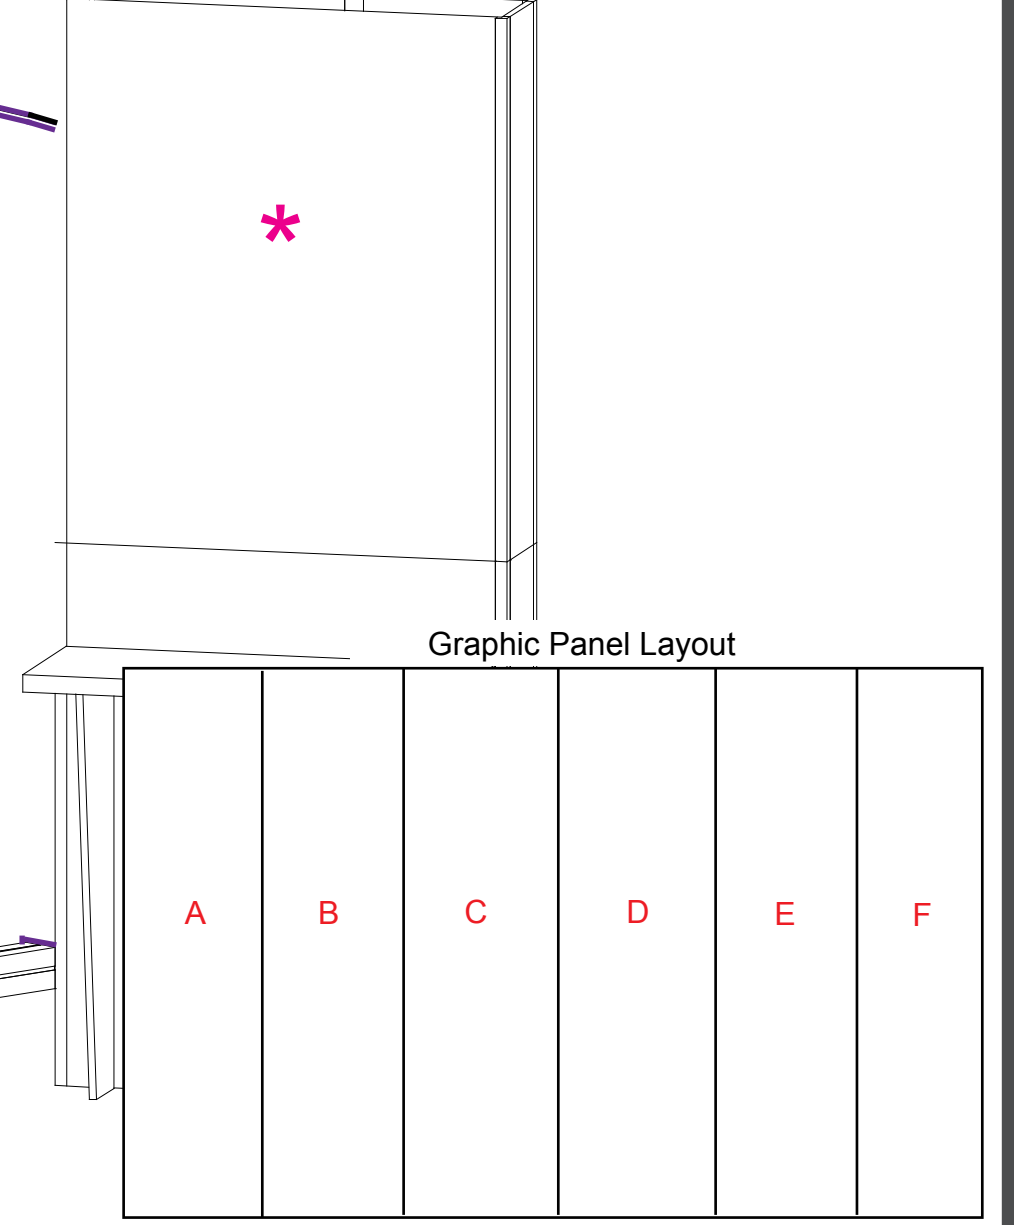


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING




Front View

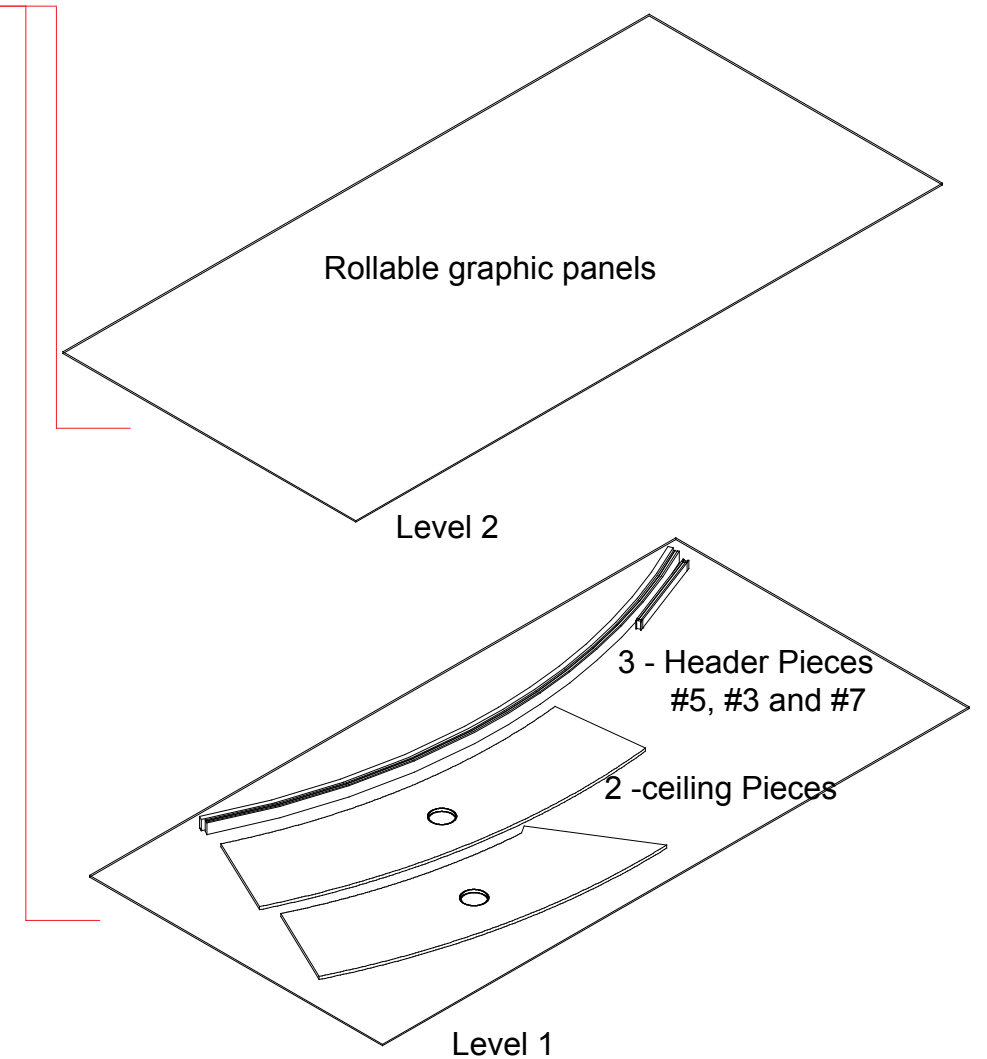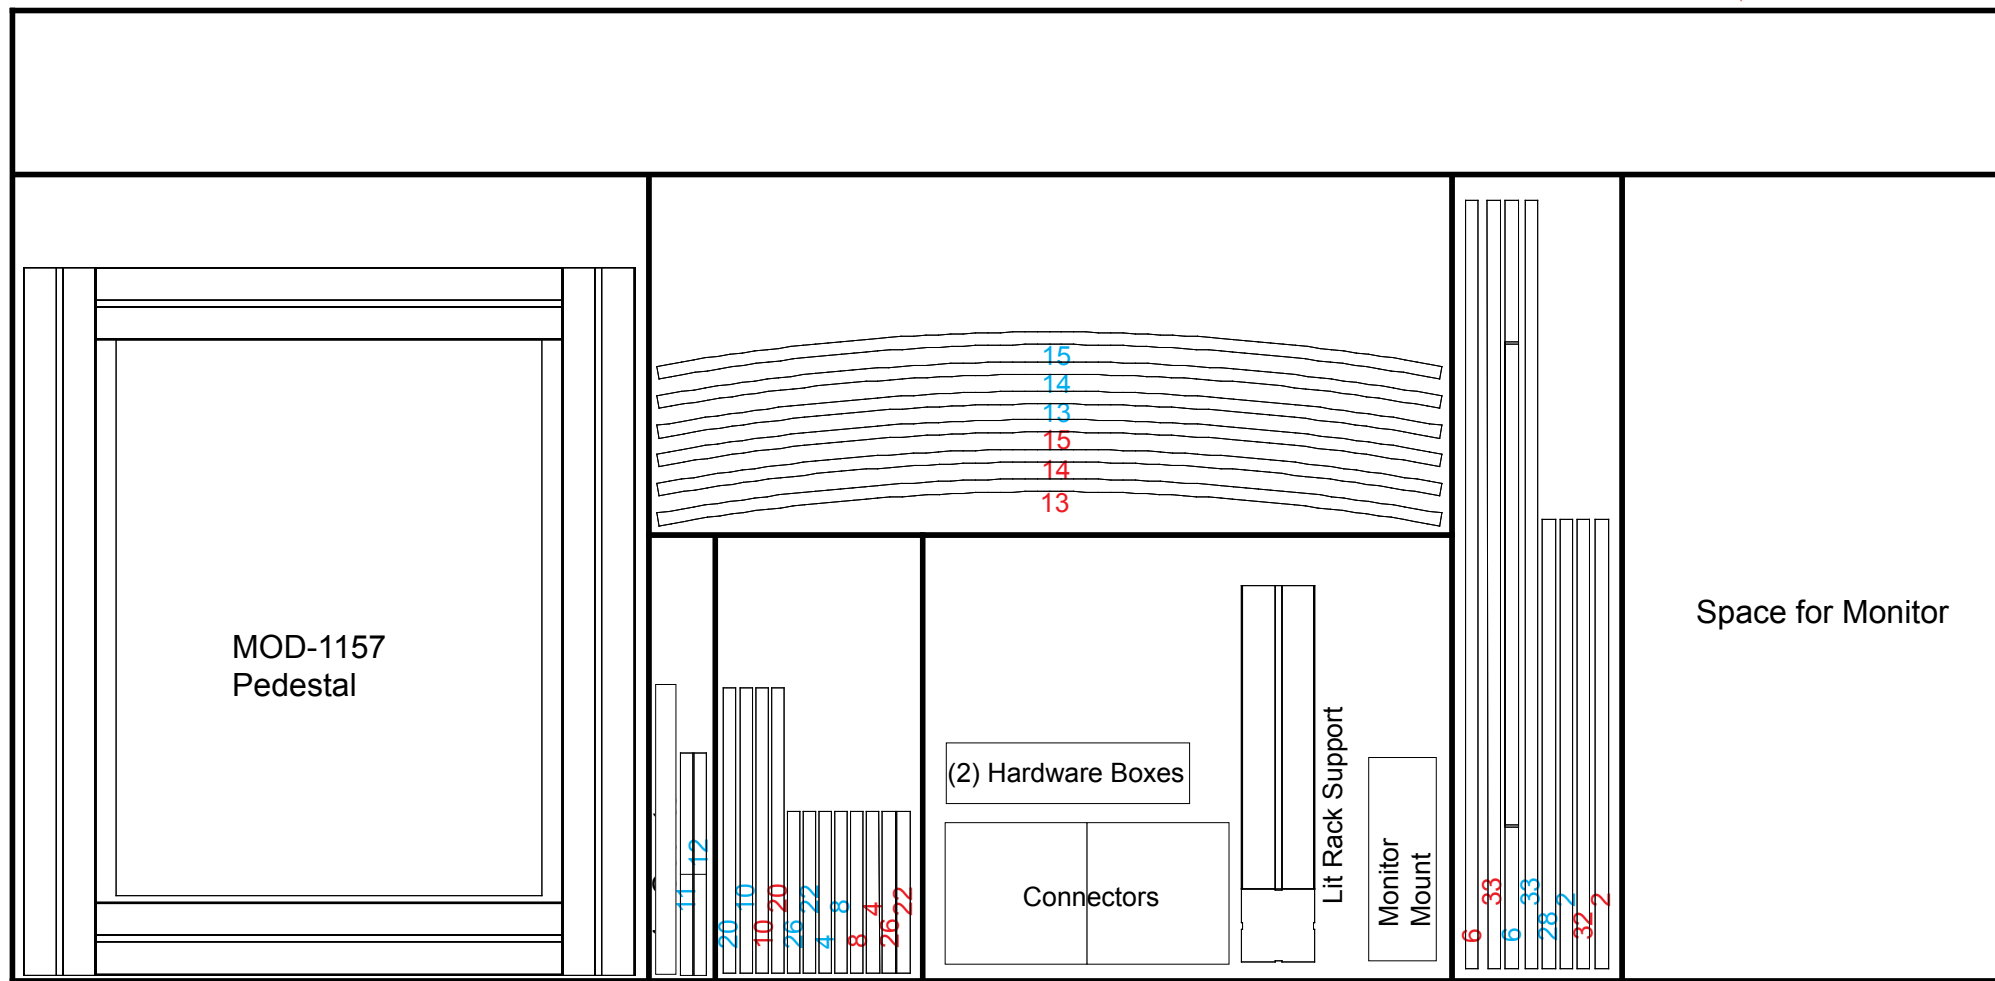

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

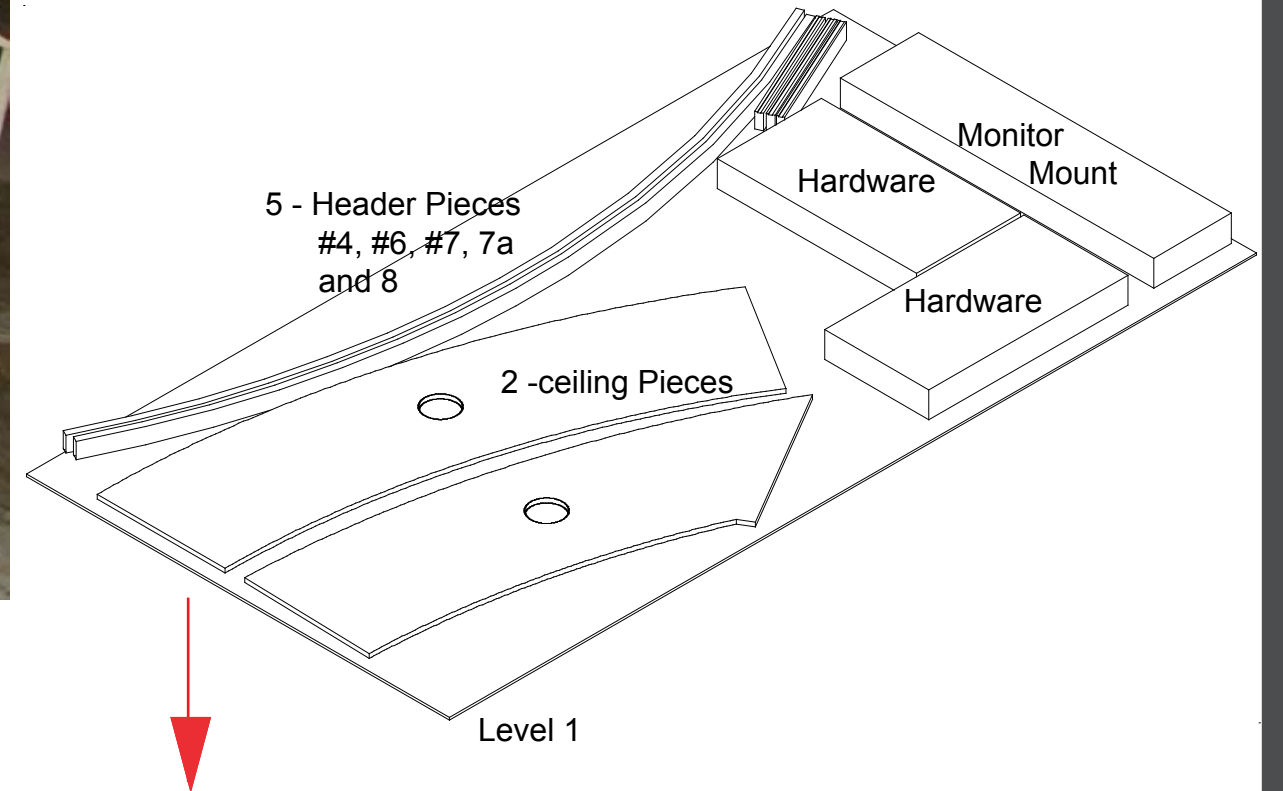

Front View

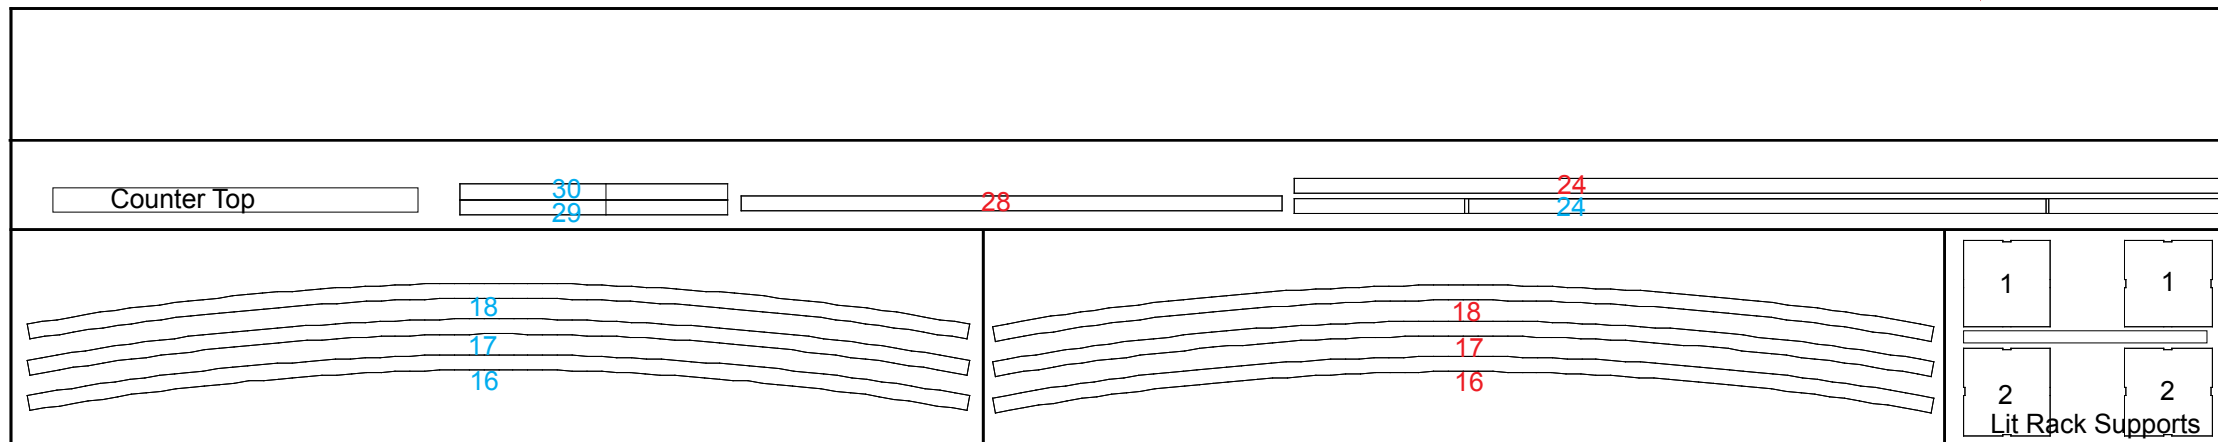

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING