
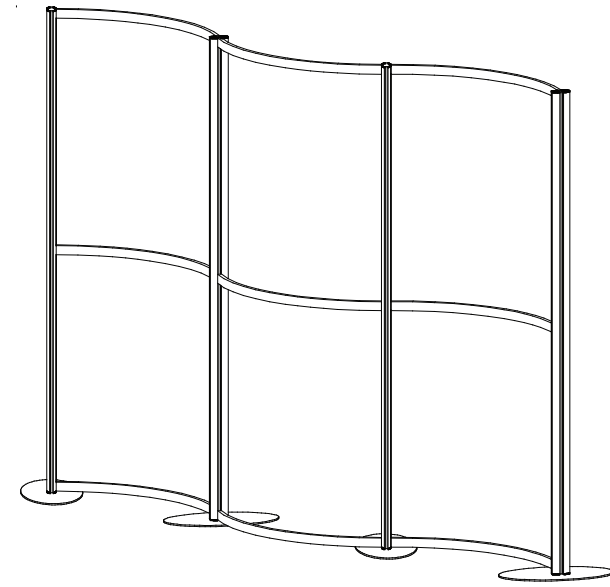


General Layout - Order #26044 - Additional Sections

Item	Quantity	Description
1	1	Base Plate
2	1	Base Plate
3	2	96"h Vertical Extrusion
4	4	40.2368"w Horizontal Formed Extrusion
4a	2	40.2368"w Horizontal Formed Extrusion

Steps:

- 1) Attach base plates #1 and #2 to vertical extrusions #3.
- 2) Connect horizontal extrusions #4 and 4a between vertical extrusions #3 as shown in illustration, inserting sentra panels where indicated.

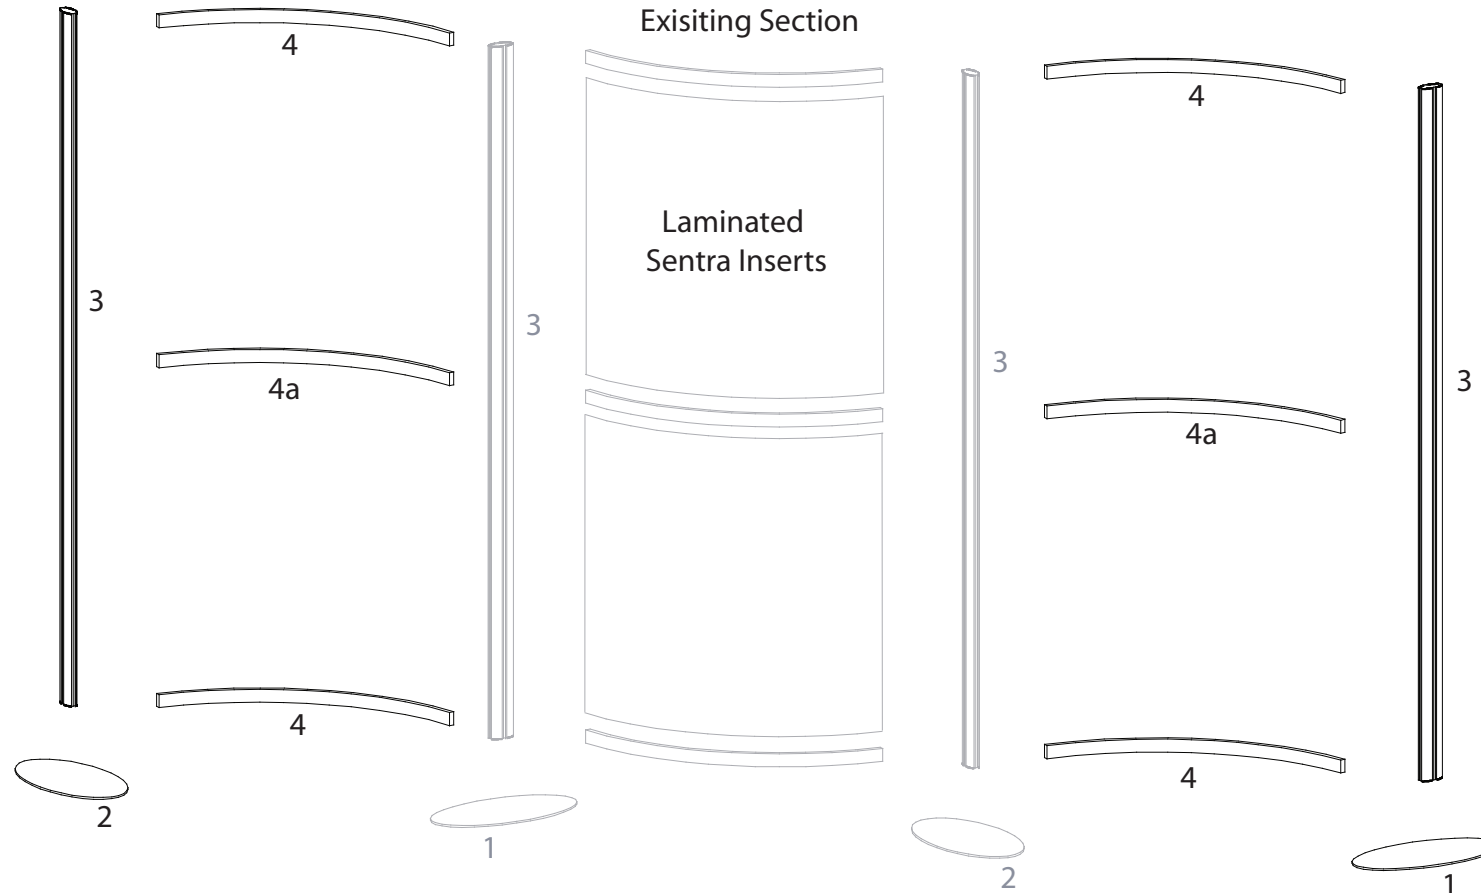

NOTE: WHEN DISASSEMBLING EXTRUSION TIGHTEN ALL LOCKS TO PREVENT LOSS OF SETSCREWS

