


# Perfect 10 Hybrid Displays

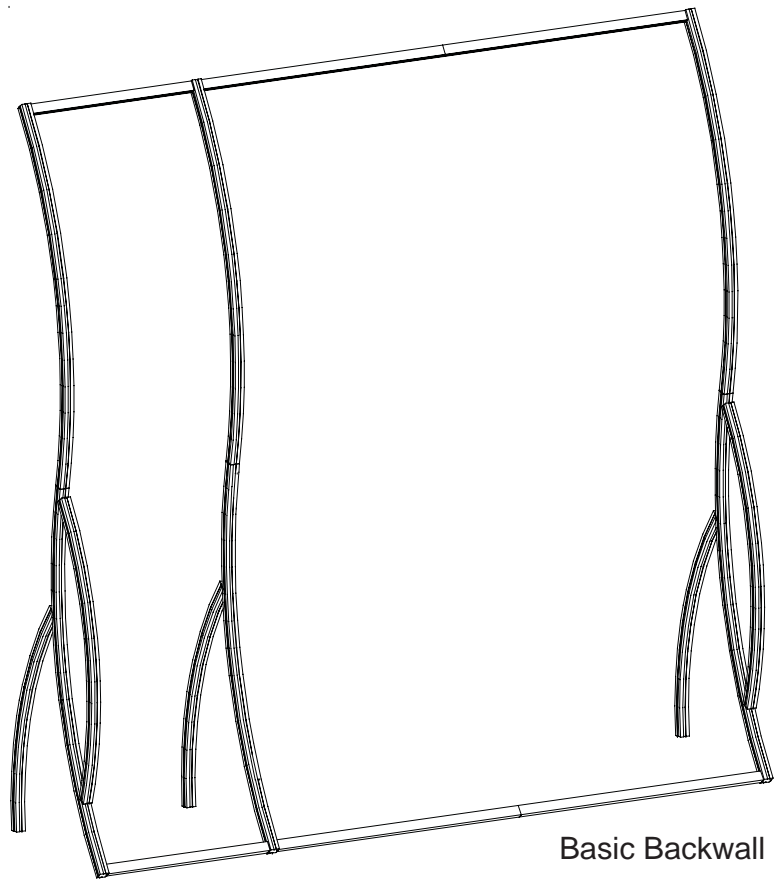

Basic Backwall Frame Only



WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Part Number	Qty for Step	Description
1	1	Left Leg Assembly
2	1	Middle Leg Assembly
3	1	Right Leg Assembly
4	3	Upper Curved Vertical
5	2	23" w Horizontal
6	2	69" w Horizontal

Steps:





NOTE: Assembly may be easiest if assembled face down on floor then lifted upright.

1) Connect vertical extrusions [4] to leg assemblies [1 - 3] as shown.

2) Connect horizontal extrusions [5 and 6] between vertical assemblies by slightly tightening BLACK knobs on backside of extrusion as shown.

NOTE: Make sure Velcro faces toward back and knobs face horizontally as shown in detail.

**\*\* Various Accessories Available \*\***

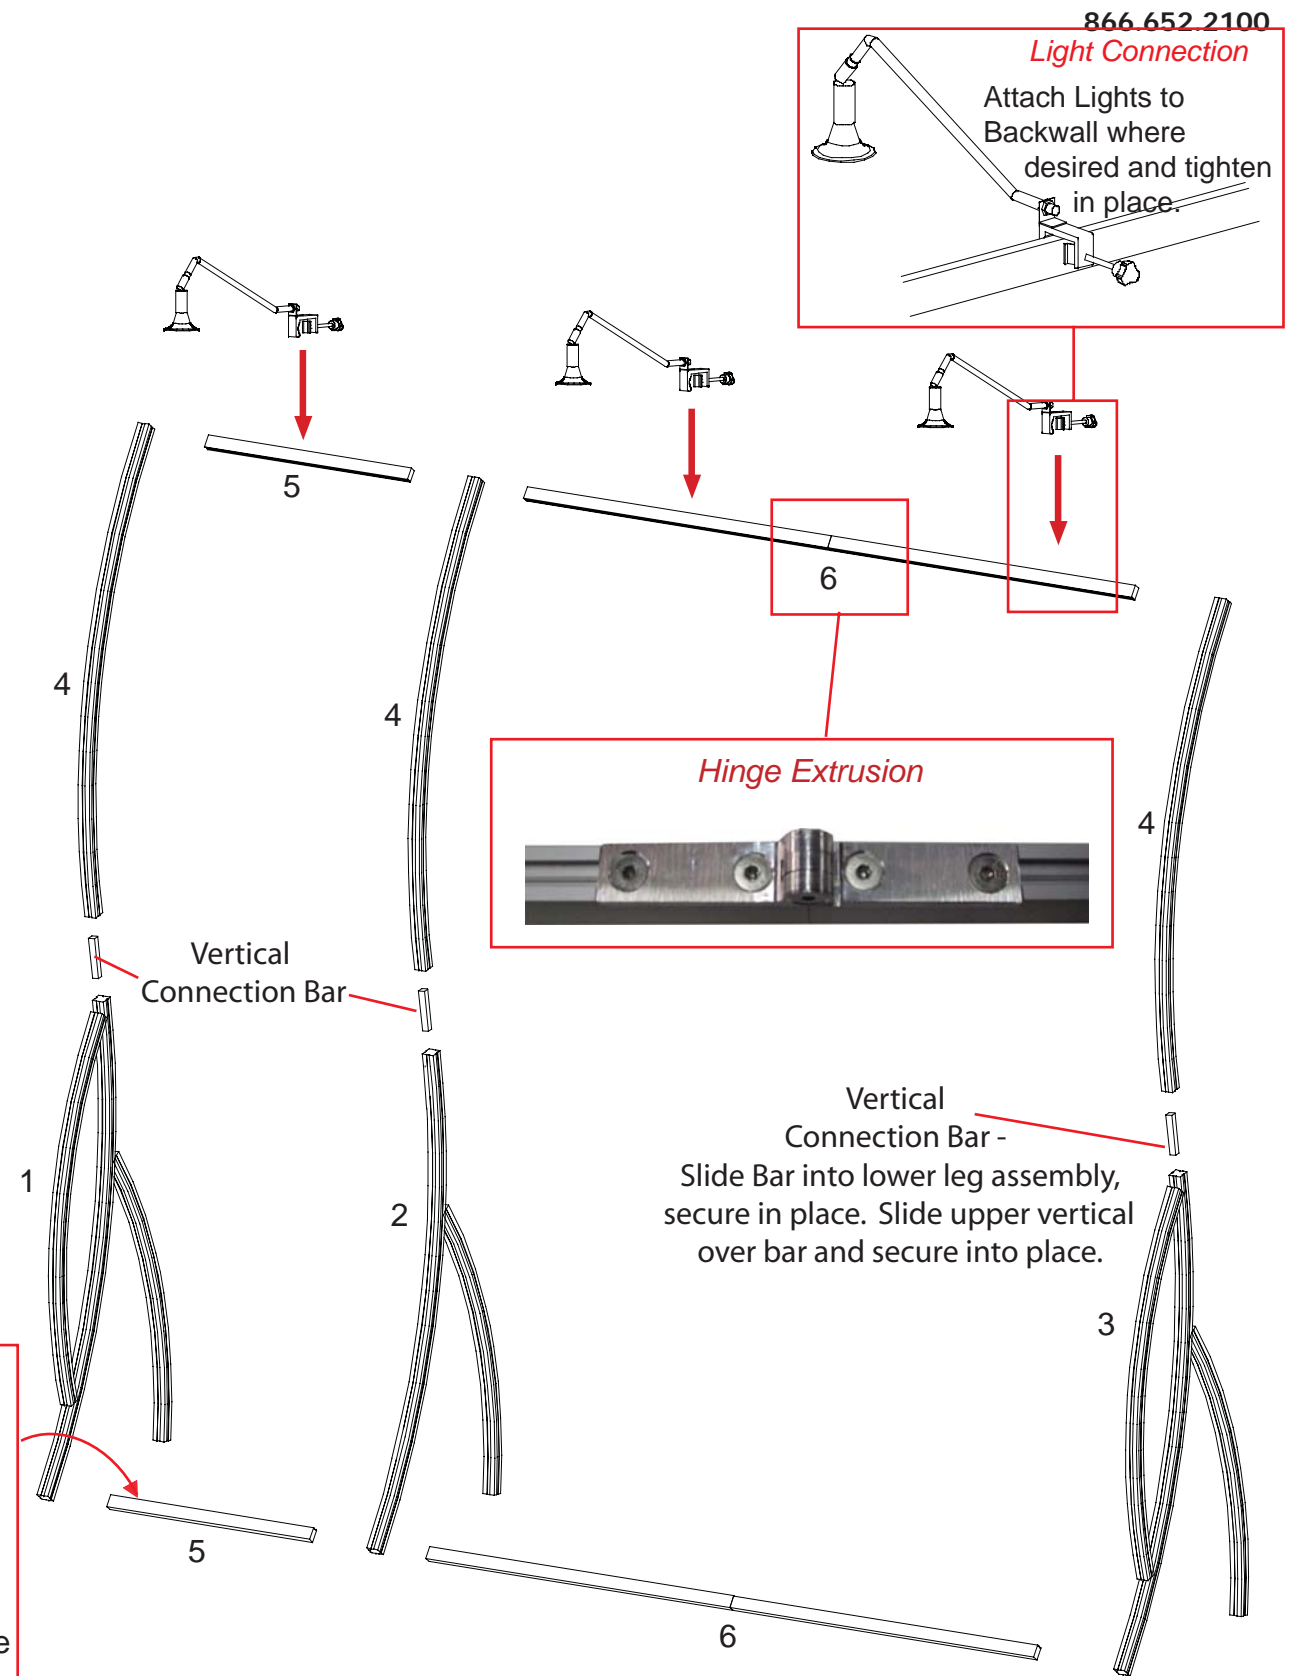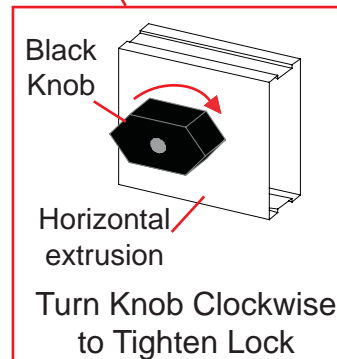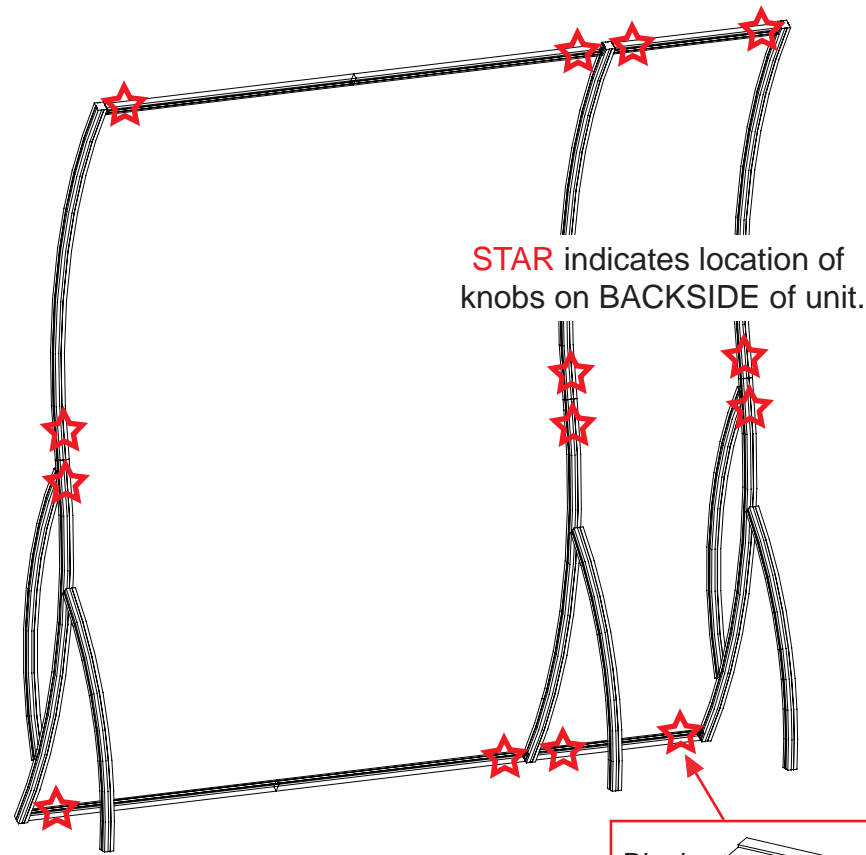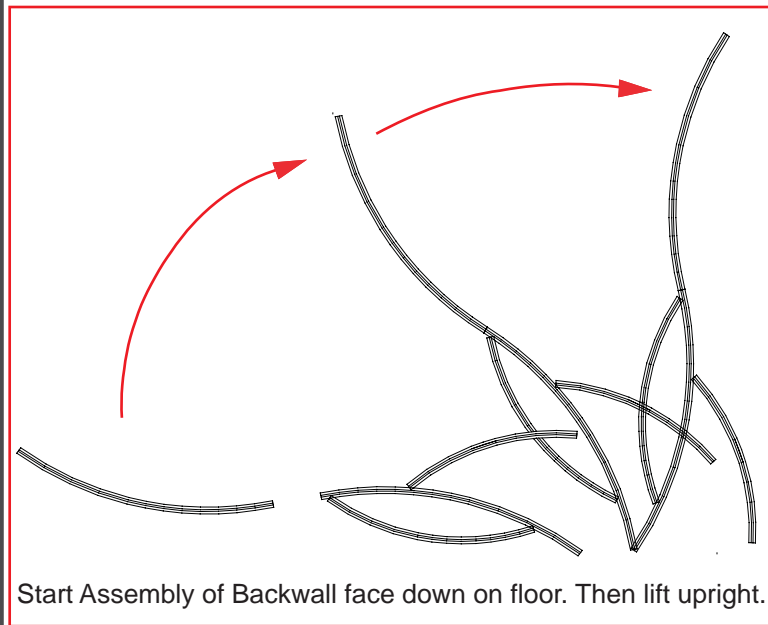

**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**