


Perfect

10 Hybrid Displays

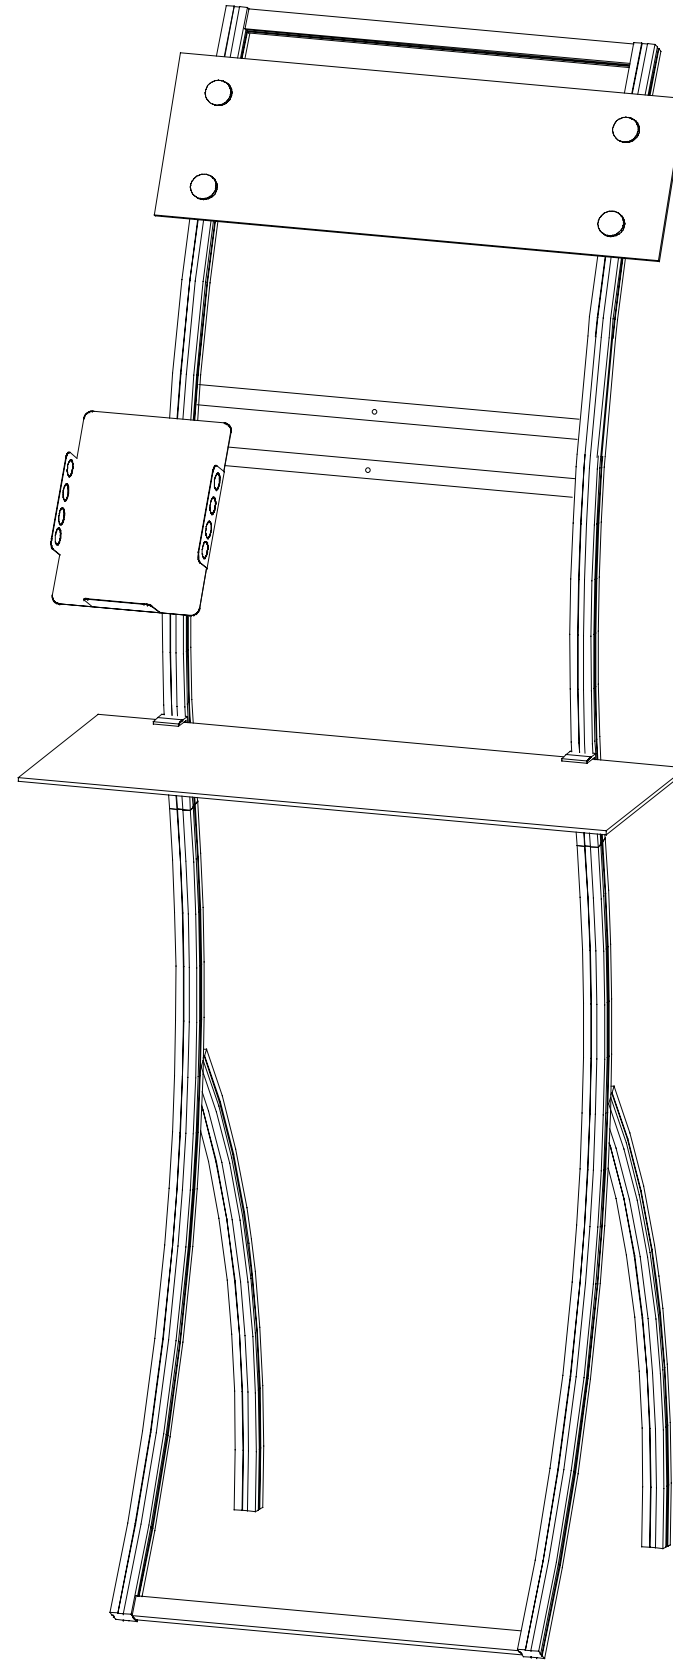

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100






Part Number	Qty for Step	Description
1	1	Left Leg Assembly
2	1	Right Leg Assembly
4	1	Upper Curved Vertical
5	2	23"w Horizontal
6	2	Monitor Mount Extrusion

Steps:

NOTE: Assembly may be easiest if assembled face down on floor then lifted upright.


- 1) Connect vertical extrusions [4] to leg assemblies [1 and 2] as shown.
- 2) Connect horizontal extrusions [5 and 6] between vertical assemblies by slightly tightening BLACK knobs on backside of extrusion.

NOTE: Make sure Velcro faces toward back and knobs face horizontally as shown in detail.

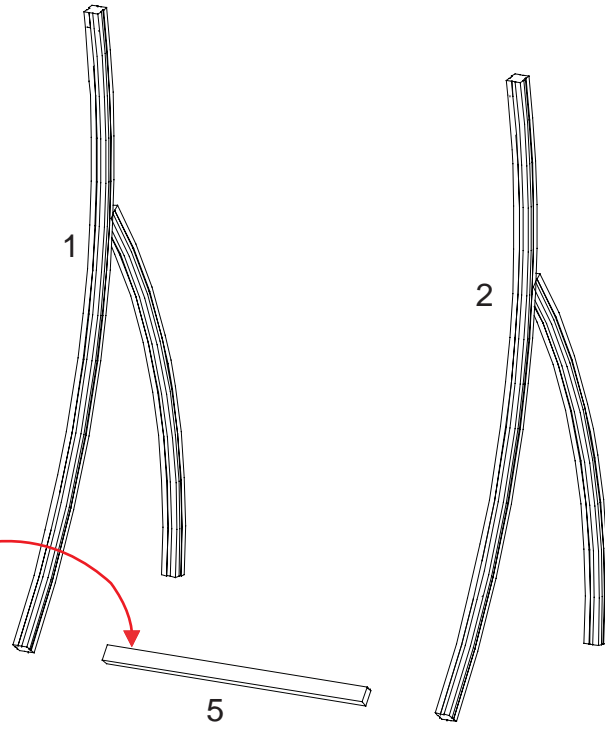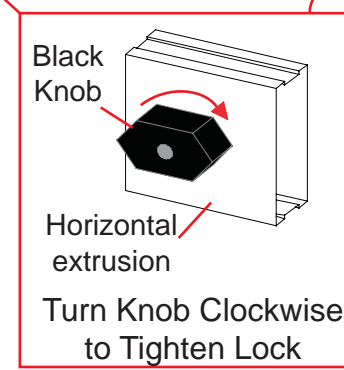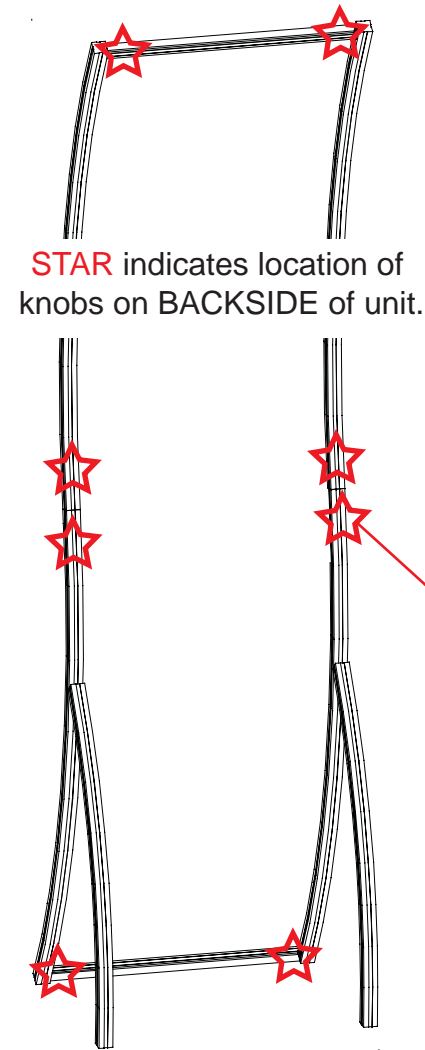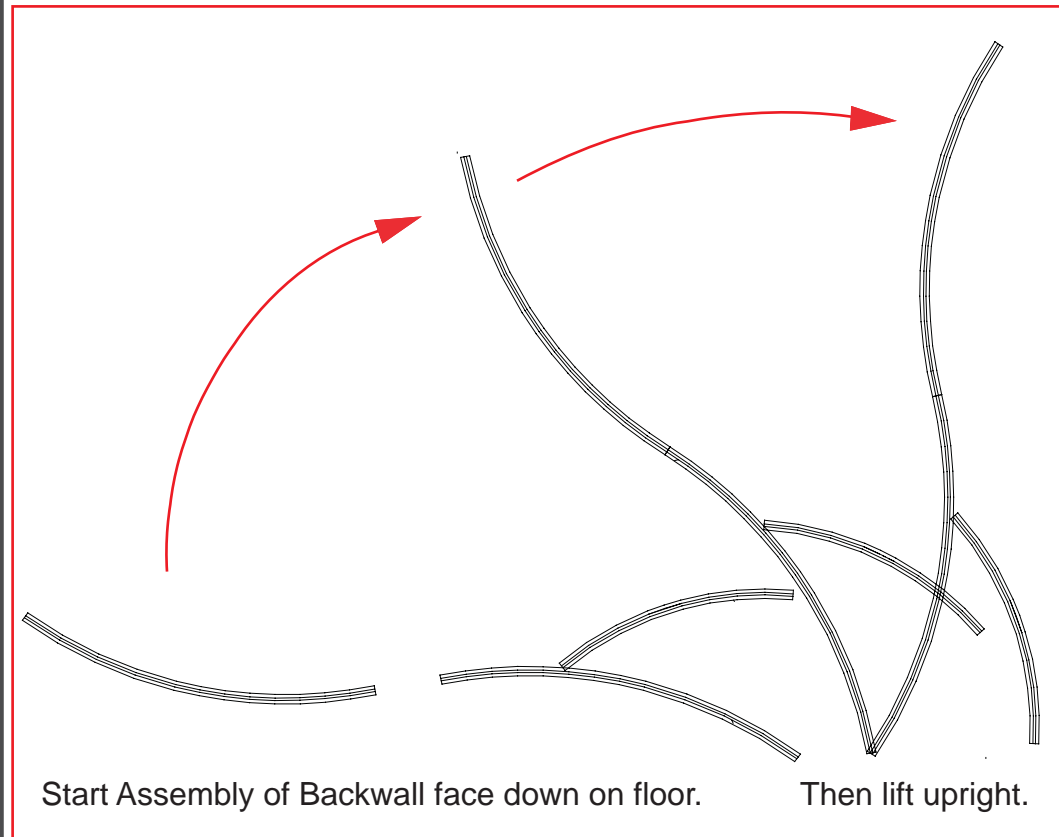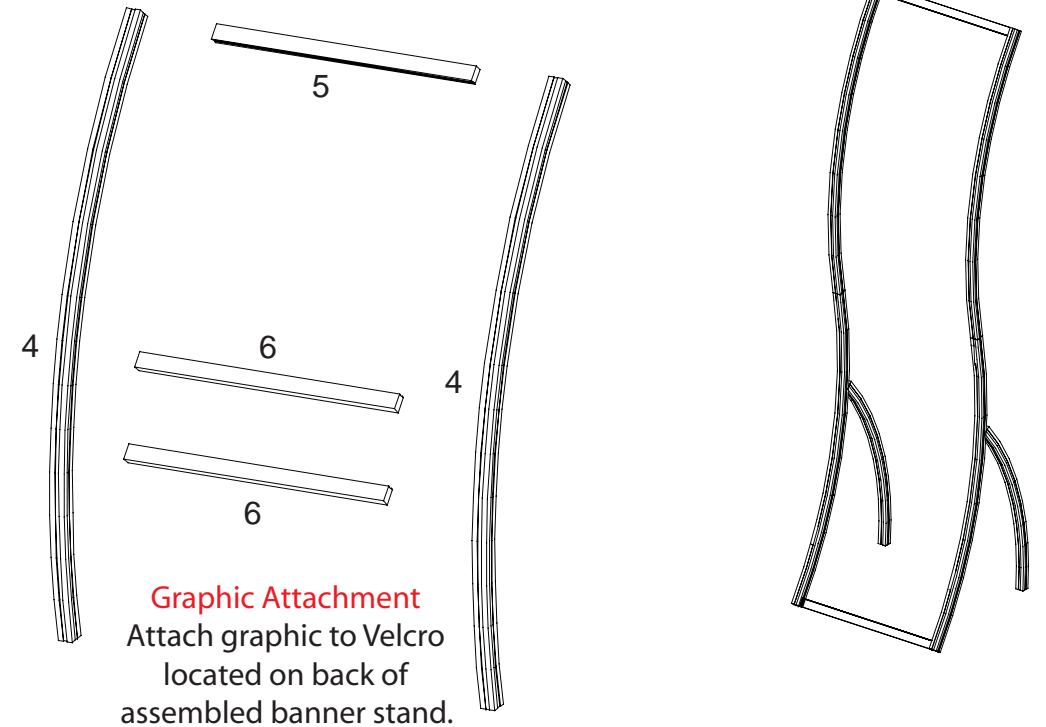

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Attach Header to Banner Station using standoff caps as shown.

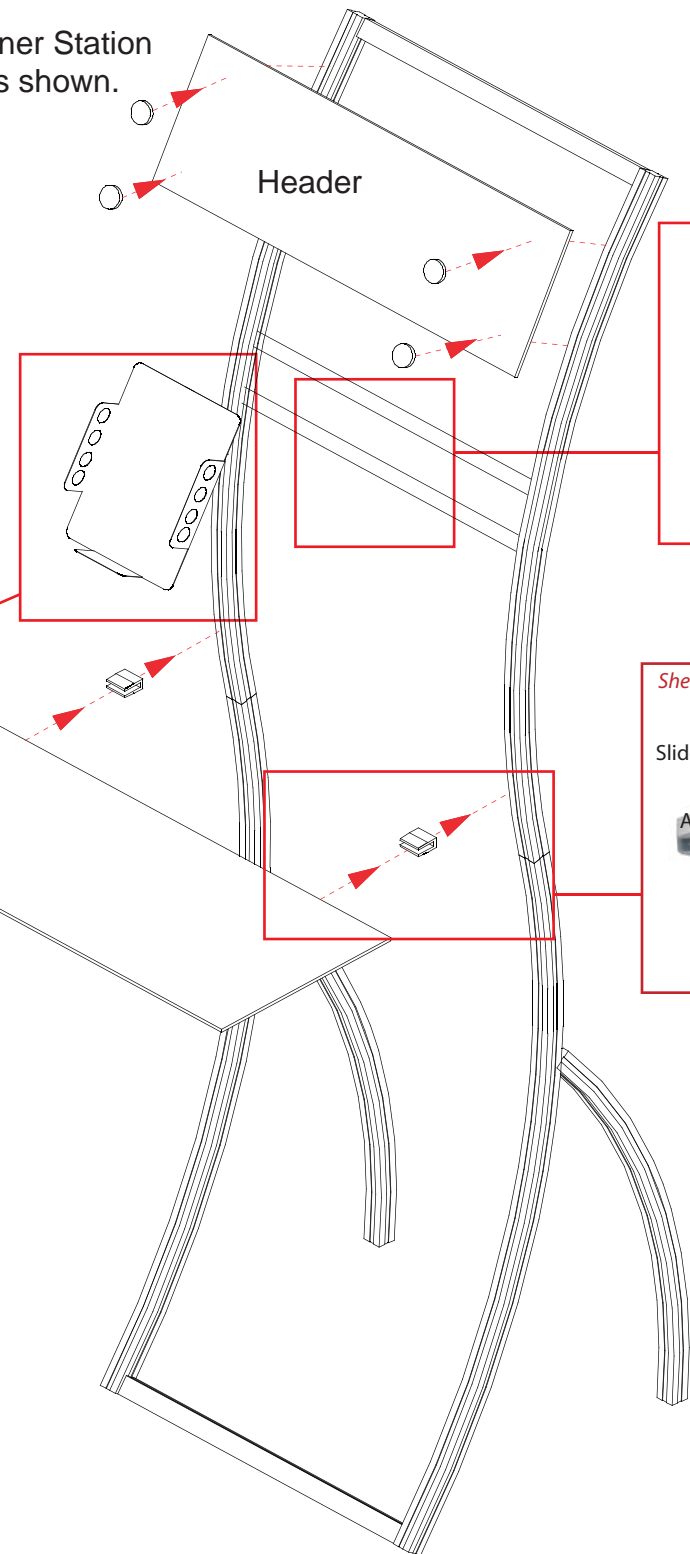

Connect Monitor Mount back plate to extrusions 6 then slide top plate attached to Monitor and tighten screws to secure.

extrusion 6

Monitor Back Plate

Literature Rack Attachment

Tighten Lock to Secure

Attach connector piece to rack as shown. Then connect assembled literature rack to vertical extrusion.

Shelf Attachment

Slide A10 Clamp into groove of square extrusion.

A10

When desired location is found, tighten set screw to secure.

Set-Screw

Tighten black plastic set screw to secure shelf in place.

Black Plastic Set-screw

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING