


Perfect 10 Hybrid Displays

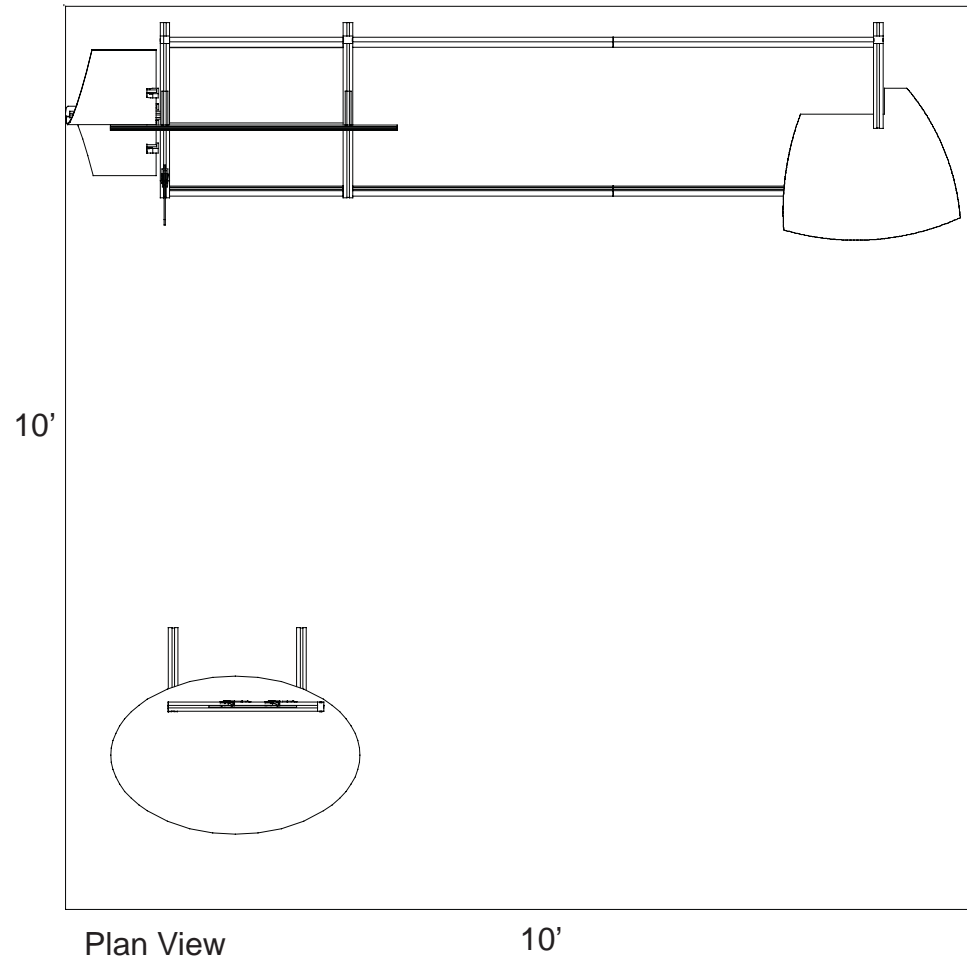

WHEN DISASSEMBLING, TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100


Part Number	Description
1	Left Leg Assembly w/ A10 Clamps Attached
2	Middle Leg Assembly
3A	Upper Curved Vertical w/ A10 Clamps Attached
3	Upper Curved Vertical
4	23" w Horizontal





Step 1:
NOTE: Can be assembled either face down on floor then lifted upright or upright as shown in drawings.

- A) Connect vertical leg assemblies [1 and 2] together by connecting horizontal extrusions [4] between assemblies tightening BLACK knobs on backside of extrusion making sure Velcro faces toward BACK and placing it about one inch up from bottom and tightening.
- B) Connect vertical extrusions [3 and 3A] to leg assemblies [1 and 2] using vertical connection bar as shown.
- C) Connect upper horizontal extrusion [4] between verticals [3 and 3A] placing it about one inch down from top.


NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.

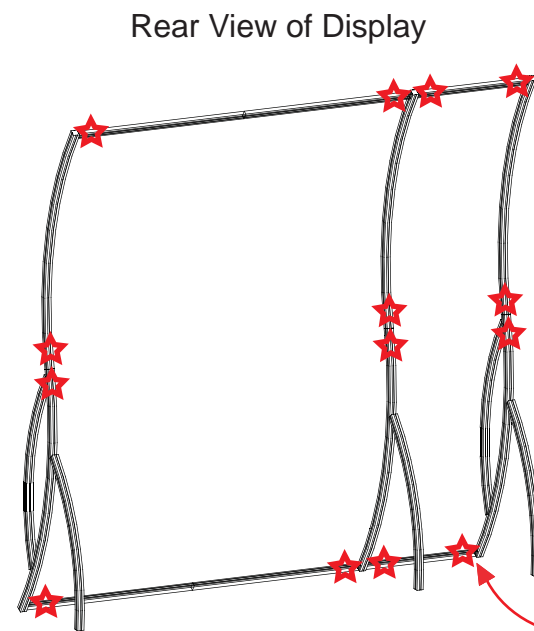

STAR indicates location of knobs on BACKSIDE of unit.

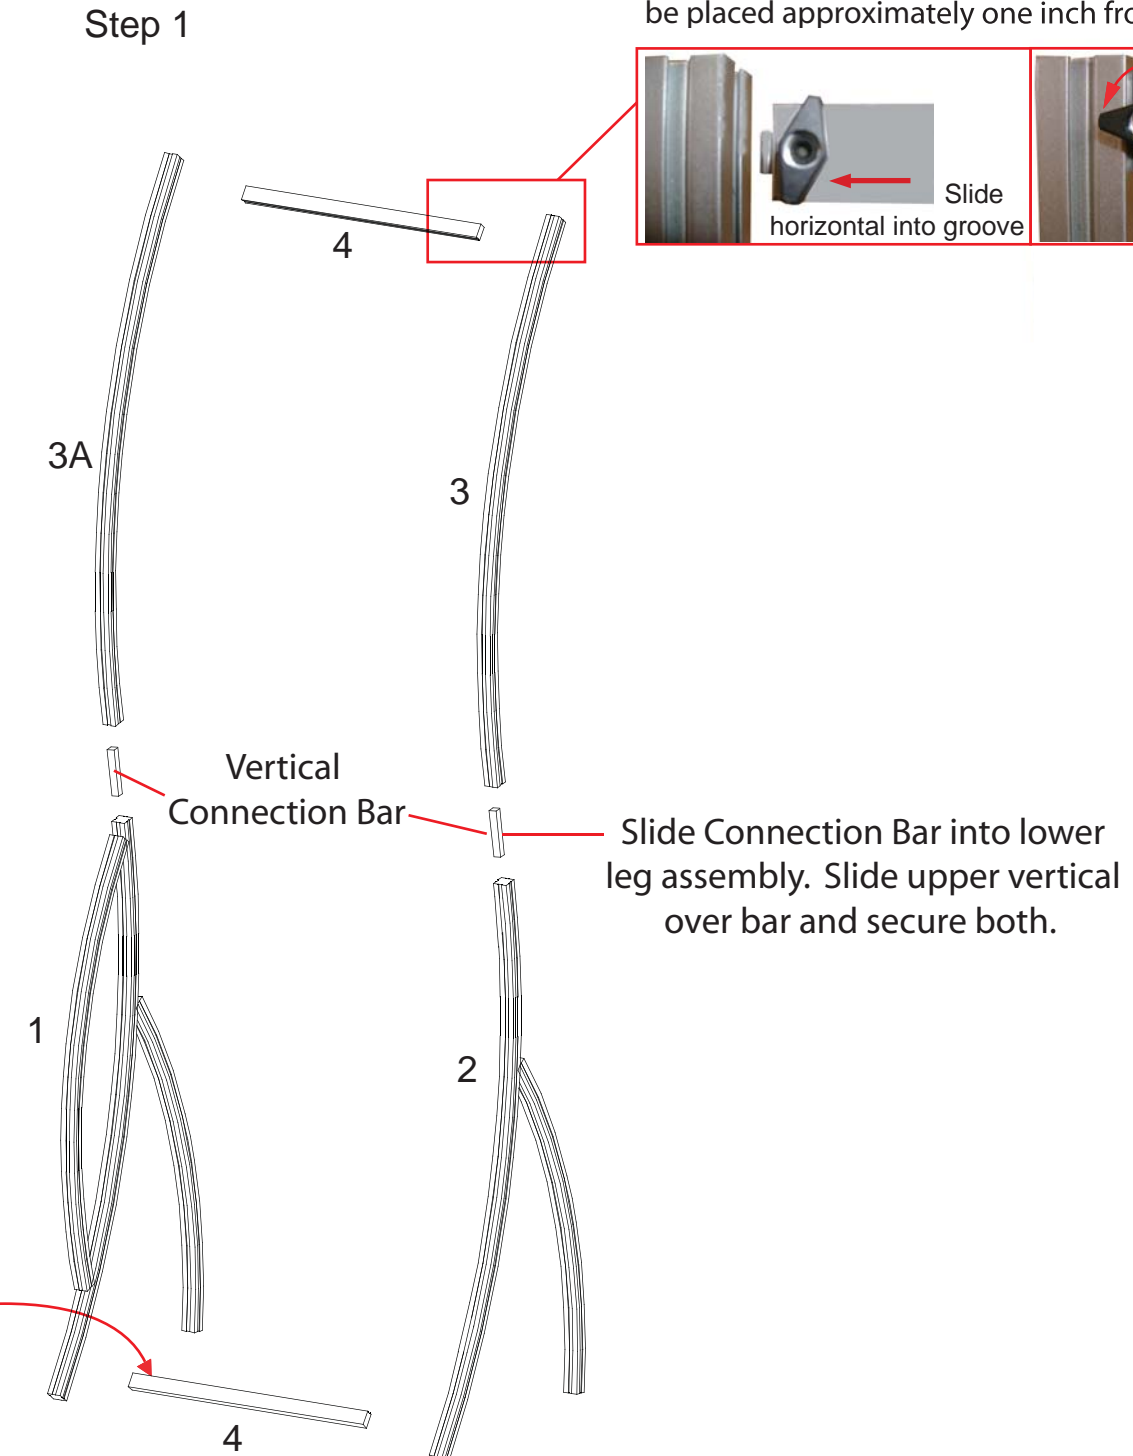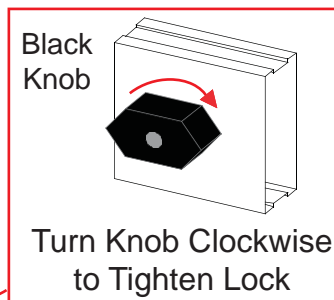

NOTE: When assembling horizontals they should be placed approximately one inch from TOP and BOTTOM.

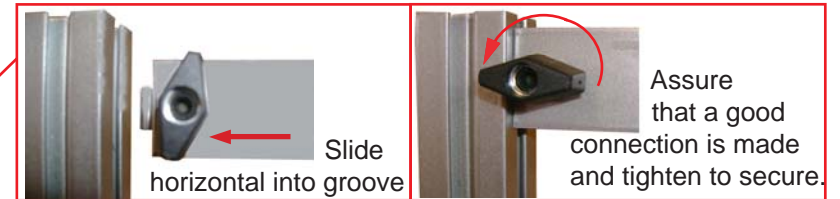

Slide Connection Bar into lower leg assembly. Slide upper vertical over bar and secure both.

WHEN DISASSEMBLING, TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

Part Number	Description
5	Right Leg Assembly
6	Upper Curved Vertical
7	69" w Horizontal w/ Hinge Facing UP
8	69" w Horizontal w/ Hinge Facing DOWN

Step 2:


NOTE: Can be assembled either face down on floor then lifted upright or upright as shown in drawings.

- A) Connect vertical extrusion [6] to leg assembly [5] using vertical connection bar as shown.
- B) Connect horizontal extrusions [7 and 8] between vertical assemblies by tightening BLACK knobs on backside of extrusion making sure Velcro faces toward BACK.


NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.



Step 2

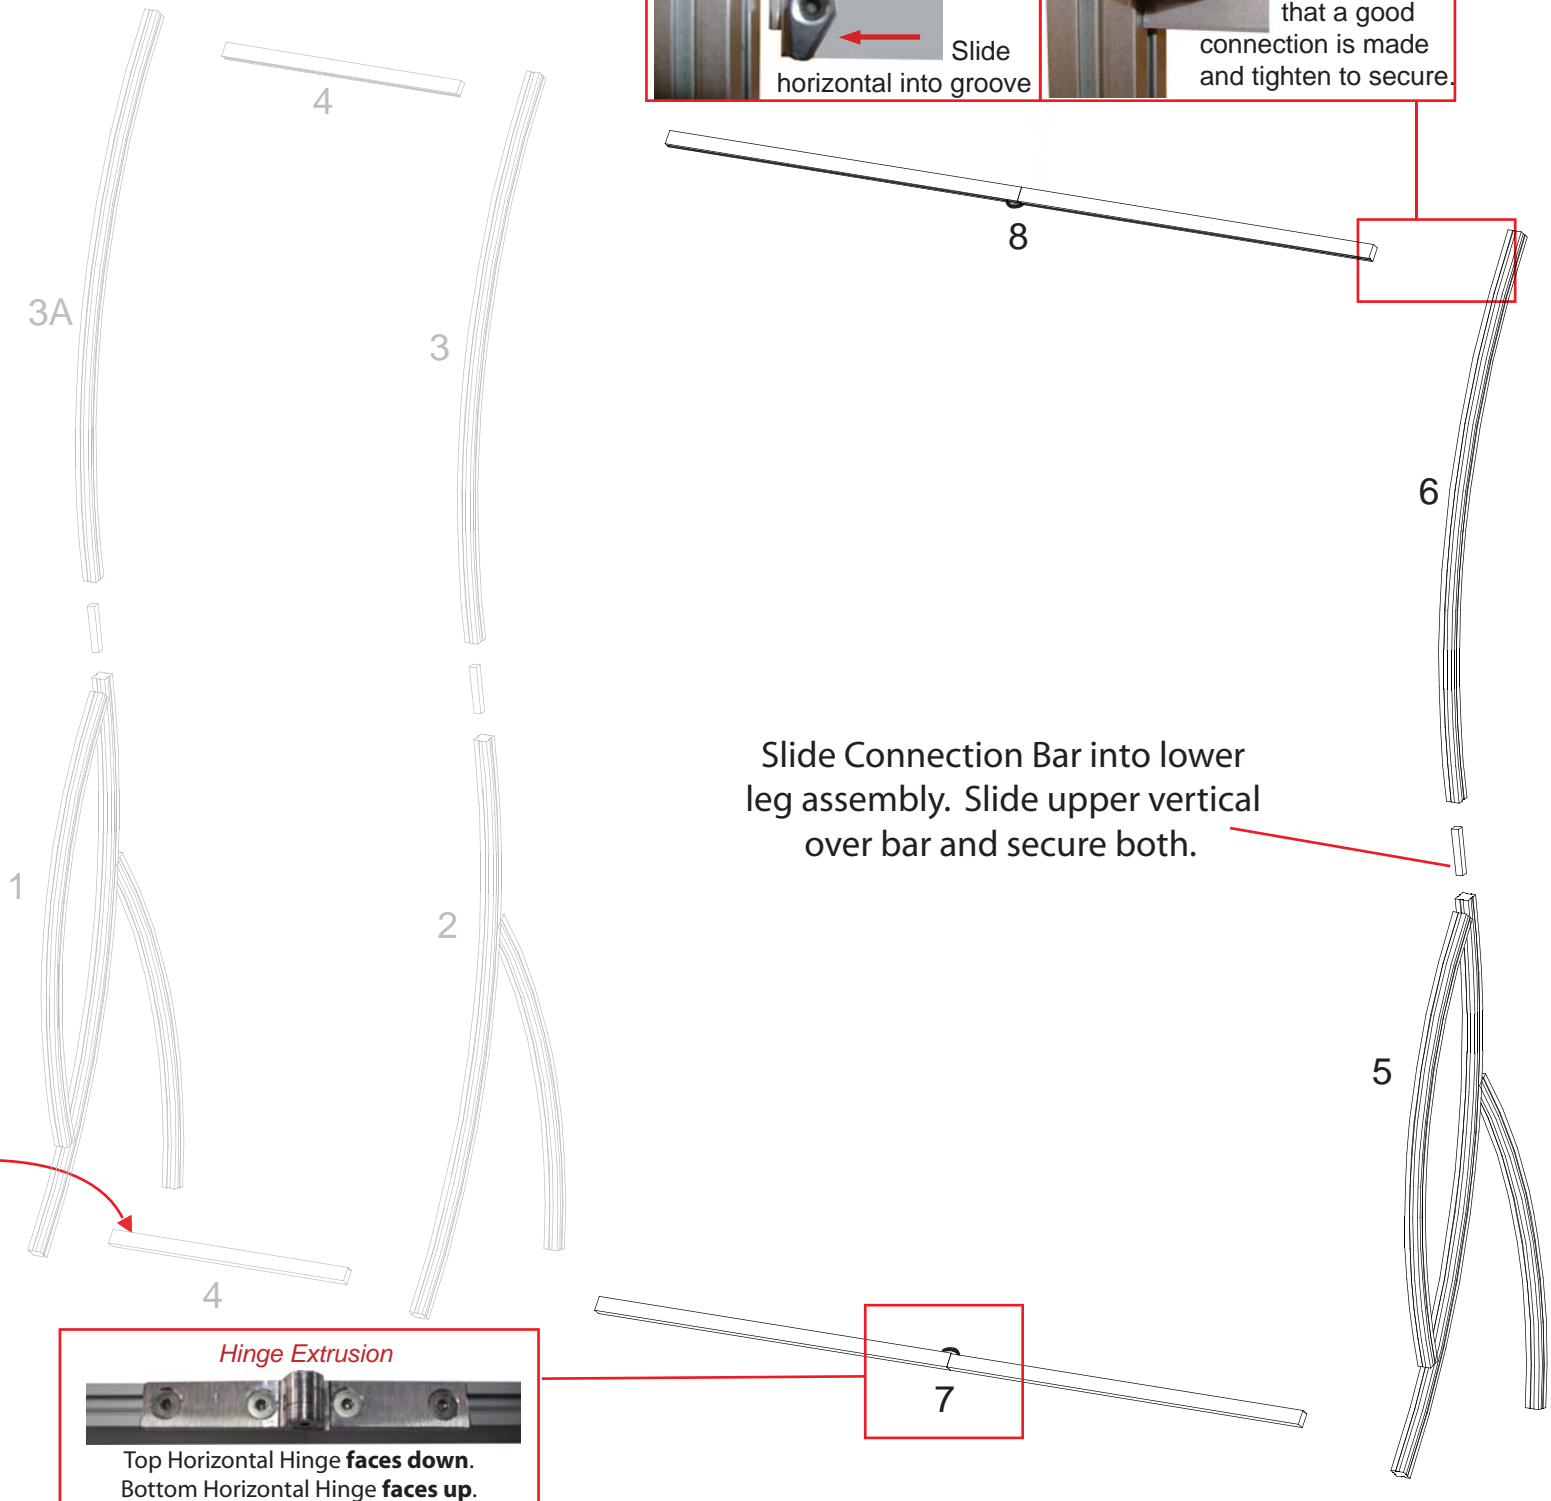


NOTE: When assembling horizontals they should be placed approximately one inch from TOP and BOTTOM.

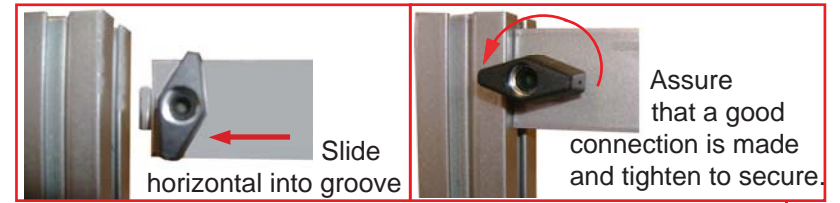


Slide Connection Bar into lower leg assembly. Slide upper vertical over bar and secure both.


Rear View of Display

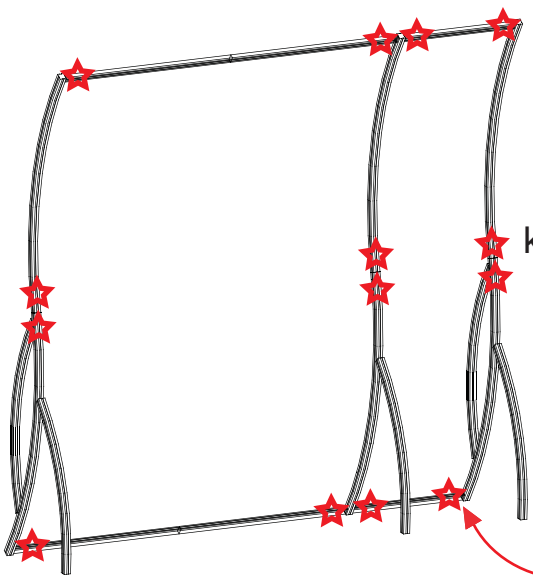


STAR indicates location of knobs on BACKSIDE of unit.

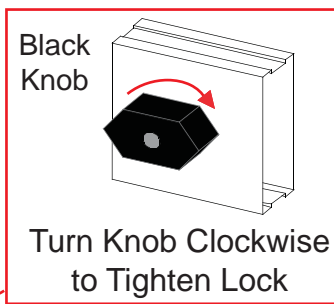


WHEN DISASSEMBLING, TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING



Attach decorative wing and blades to A10's attached to Backwall as shown.

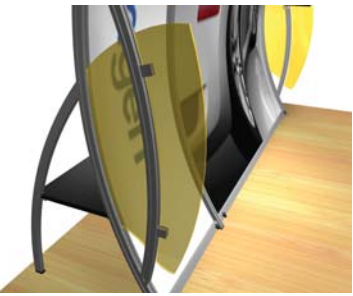


Decorative Blade Attachment (if accidentally removed)
Slide A10 Clamp into groove of square extrusion.

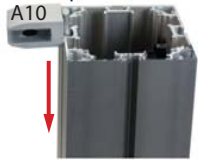


A10

When desired location is found, tighten set screw to secure.




Set-Screw

Tighten black plastic set screw to secure Wing in place.



Black Plastic Set-screw

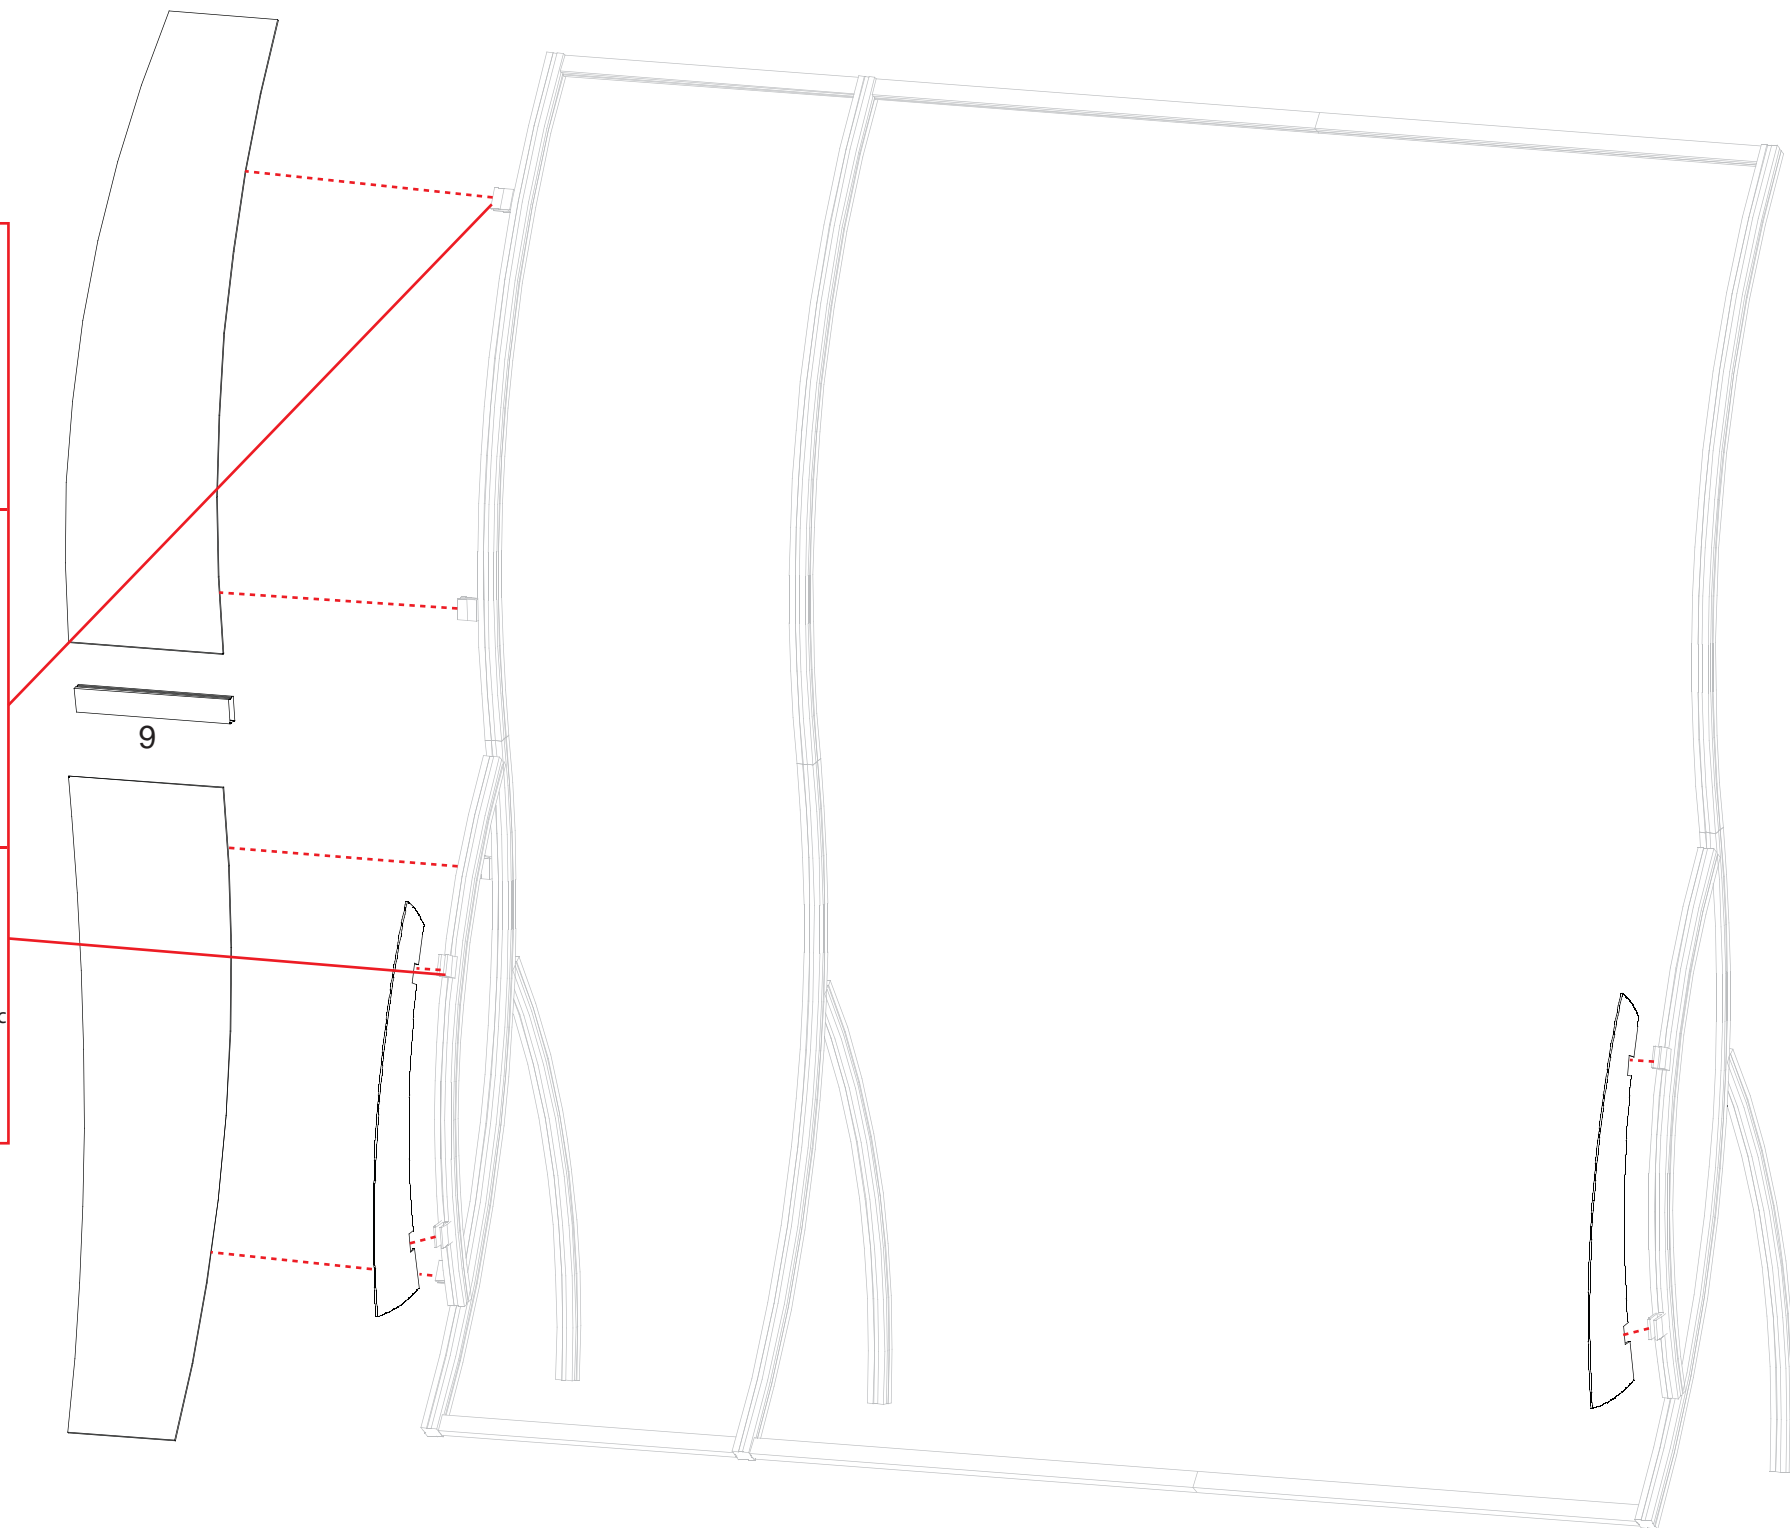


WHEN DISASSEMBLING, TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Accessory Attachment
Attach Header support then Slide header into Groove

Header

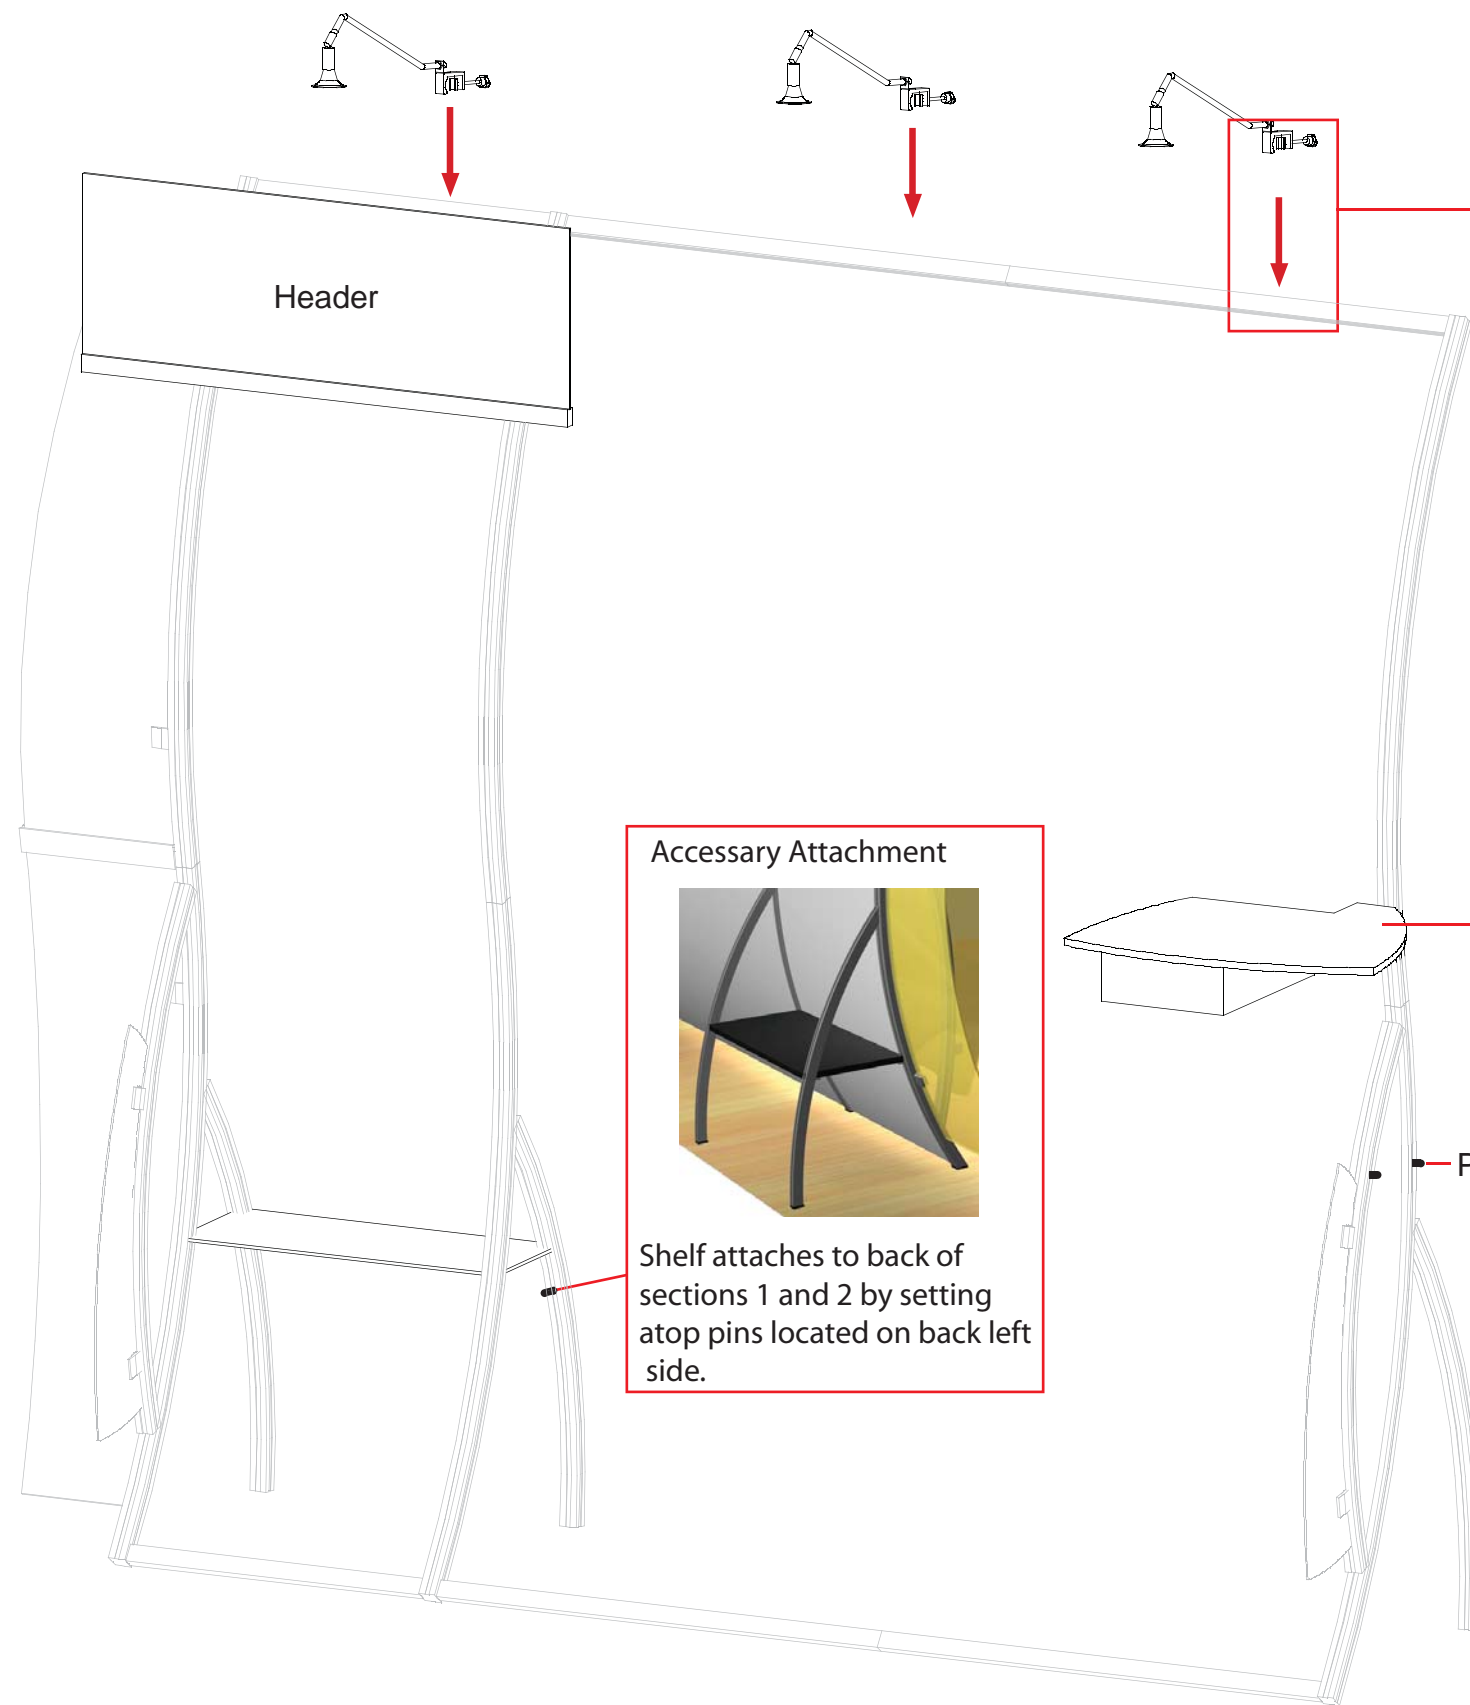

Light Connection
Attach Lights to Backwall where desired and tighten in place.

Accessory Attachment

Shelf attaches to back of sections 1 and 2 by setting atop pins located on back left side.

Cubby Attachment

Shelf attaches to section 5 by setting atop pins located on right side and securing into place with thumbscrew on left.

Pins

Slide onto back pin first.

When attaching counter you will need to first slide shelf onto back pin then set down on front pin.

WHEN DISASSEMBLING, TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100


Part Number	Description
A	Left Leg Assembly
B	Right Leg Assembly
C	Horizontal Extrusion
D	Horizontal Extrusion w/ Door Stopper
E	Horizontal Extrusion
F	Horizontal Extrusion
G	Curved Montior Mount Extrusion

Step 3:


- A) Connect lower horizontal extrusion [C] between leg assemblies [A and B] as shown.
- B) Insert laminated infill into grooves of leg extrusions and set atop lower horizontal extrusion [C].
- C) Attach upper horizontal extrusion w/ door stopper [D] between leg assemblies [A and B], and set flush with top of legs [A and B].
- D) Attach extrusion door between leg assemblies [A and B] and atop laminated infill.
- E) Attach lower horizontal extrusions [E] between leg assemblies [A and B] as shown.
- F) Insert laminated infill into grooves of leg extrusions and set atop lower horizontal extrusion [E].
- G) Attach upper horizontal extrusion [F] between leg assemblies [A and B] and atop laminated infill as shown.

Decorative Wing Attachment


Slide A10 Clamp into groove of square extrusion.

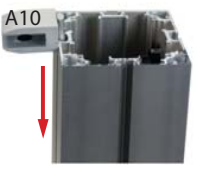

When desired location is found, tighten set screw to secure.

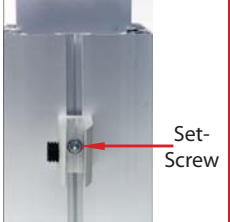


Tighten black plastic set screw to secure Wing in place.

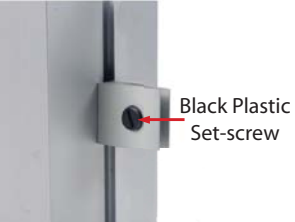

MONITOR MOUNT


Attach monitor mount to vertical extrusions after assembly.




Slide Mount into Groove of Vertical Extrusion.

Tighten Setscrew

Attach top Plate and tighten screws


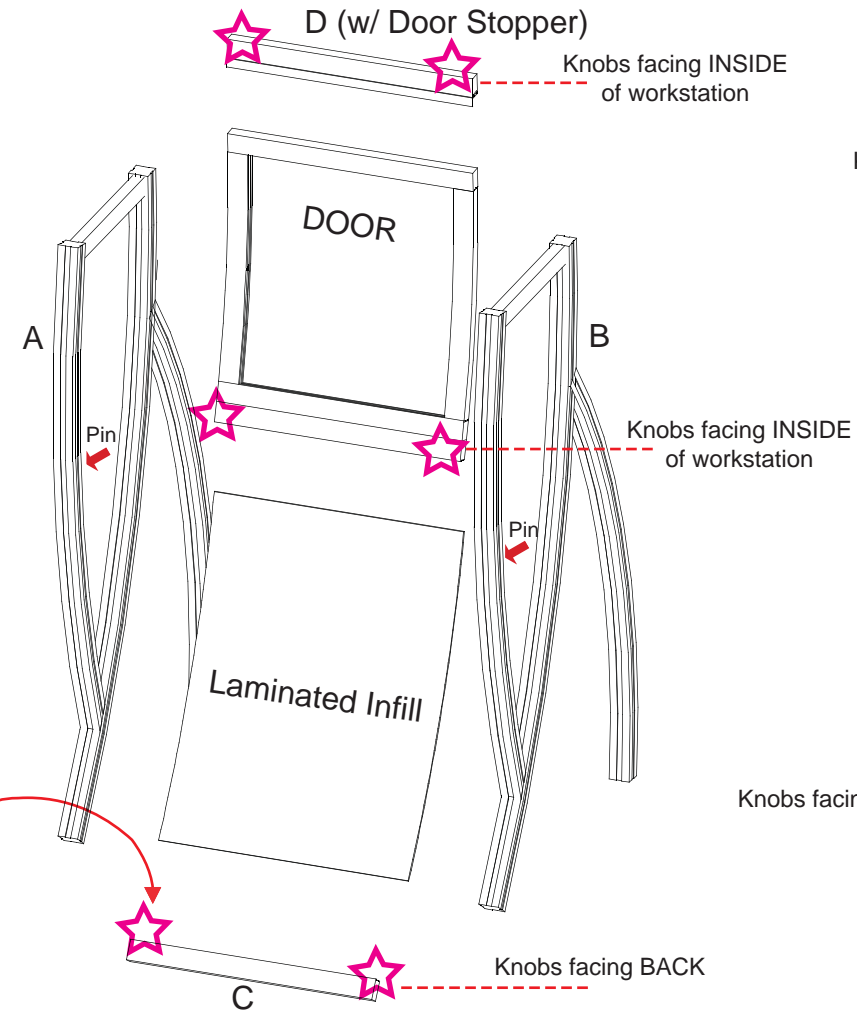


Black Knob

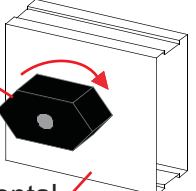

Horizontal extrusion

Turn Knob Clockwise to Tighten Lock

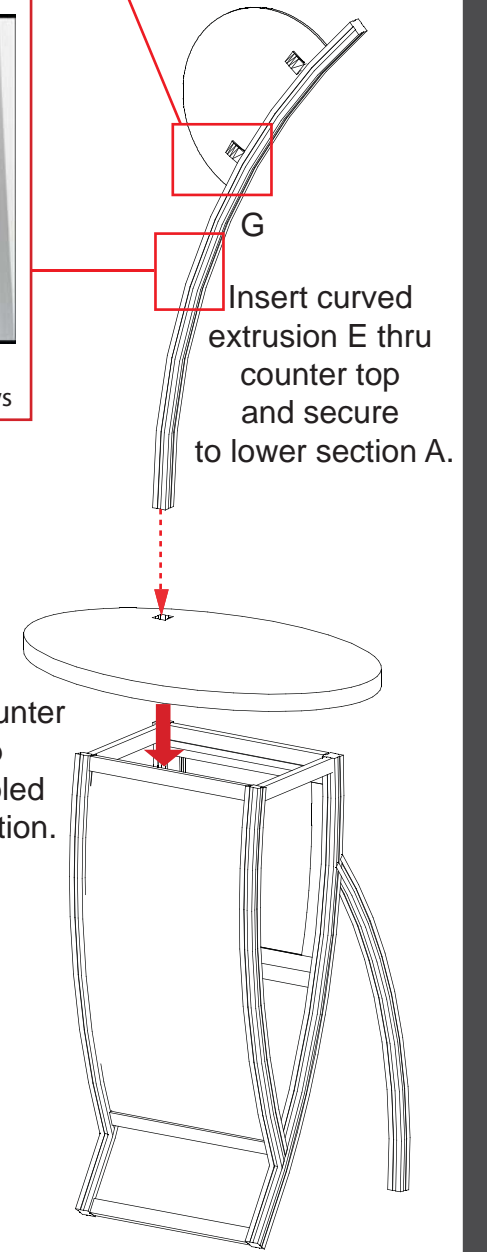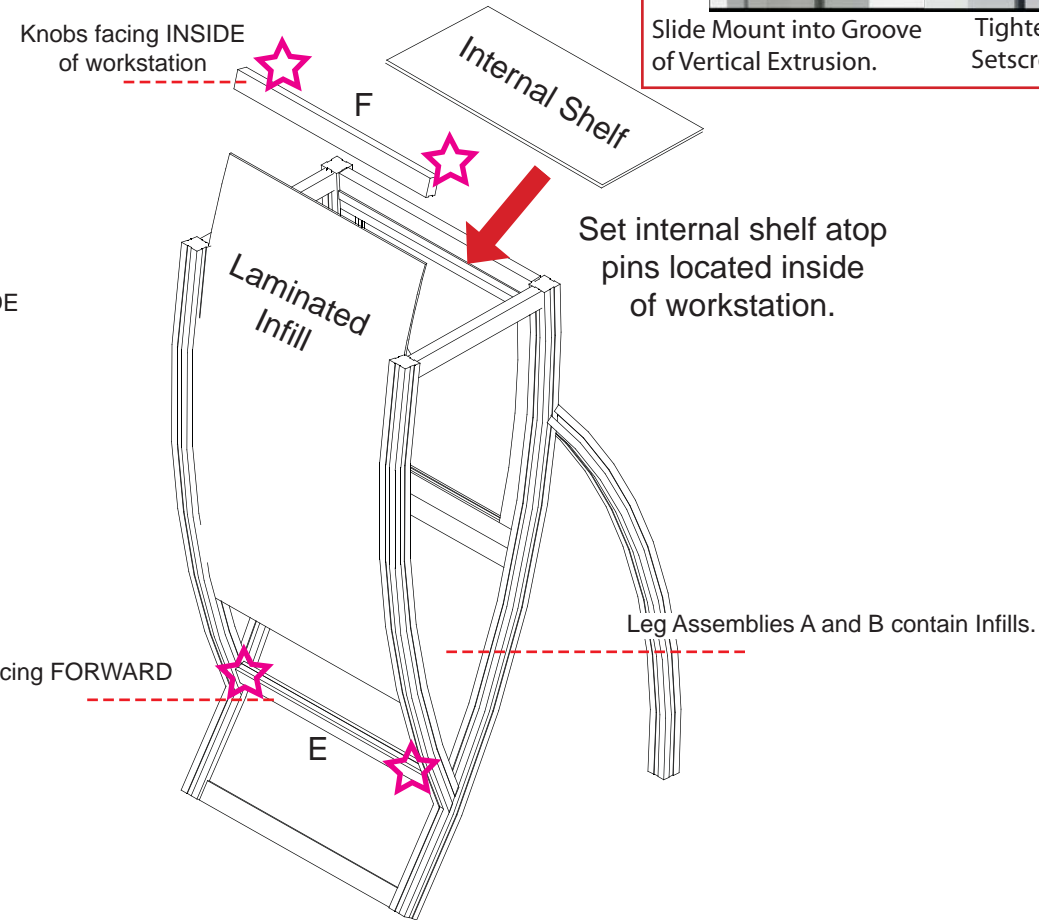

WHEN DISASSEMBLING, TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING