


Plan View

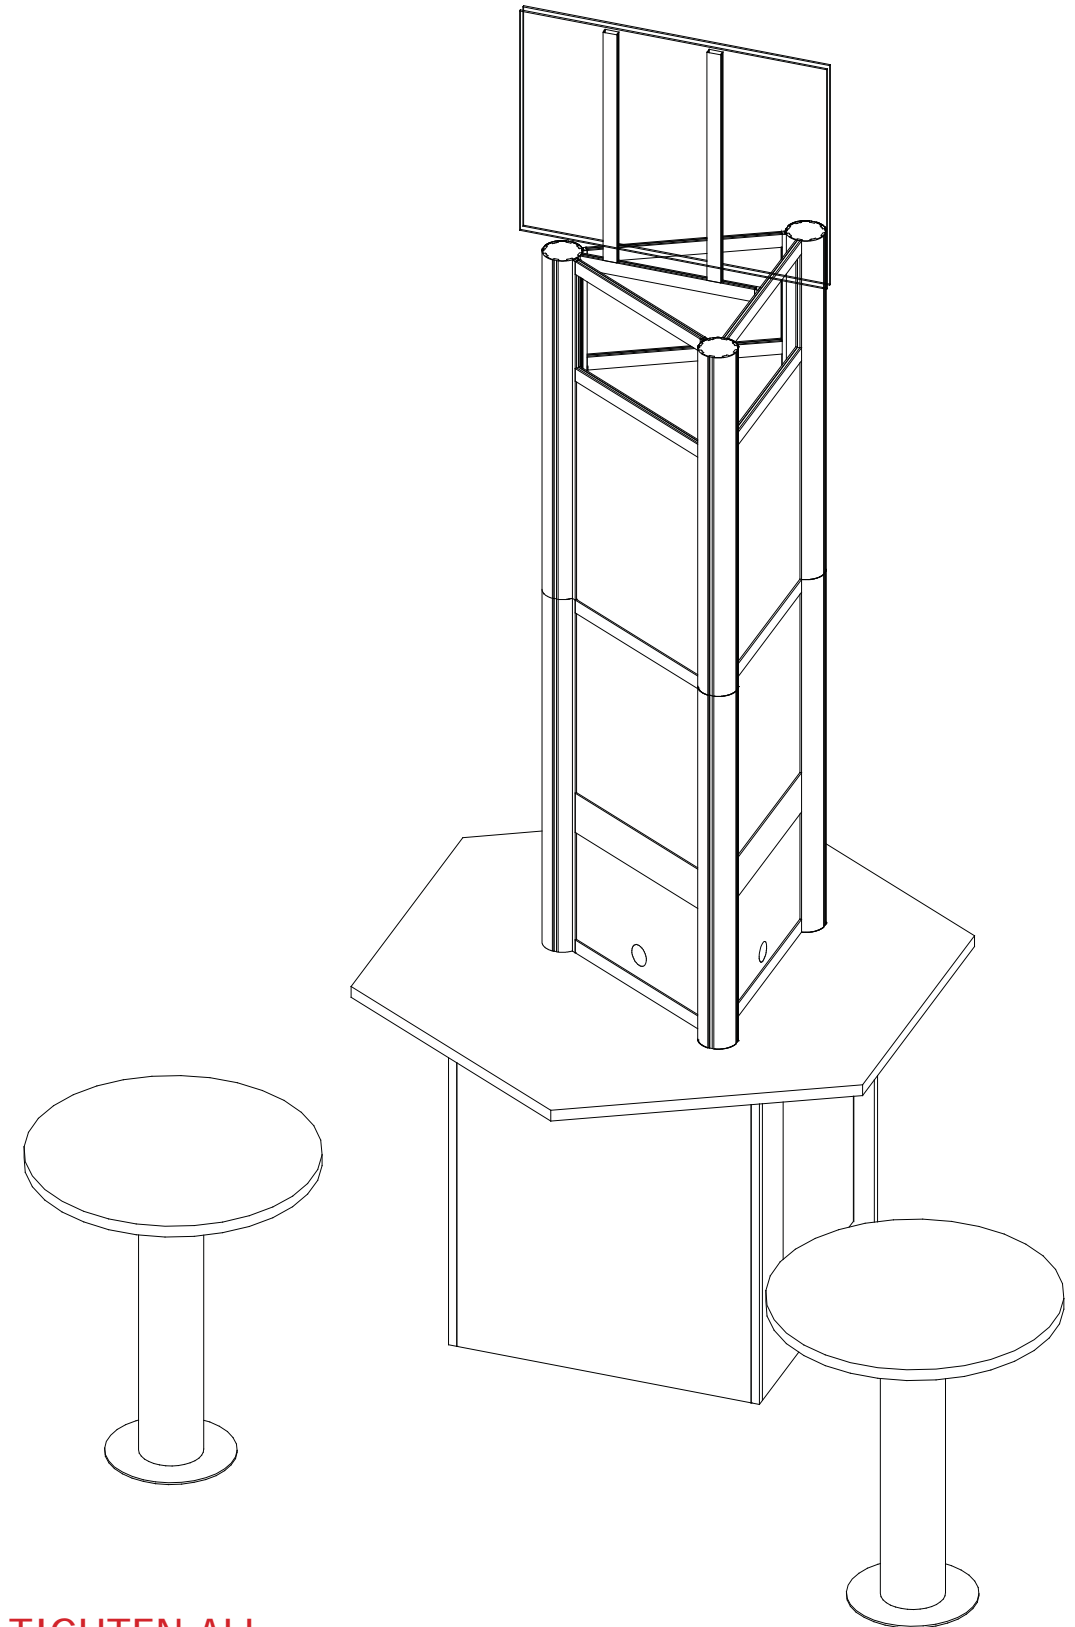

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING



Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

General Setup Instructions for Extrusion System



The Tool

Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Typical Connection

Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.



Typical Connection (cont'd)

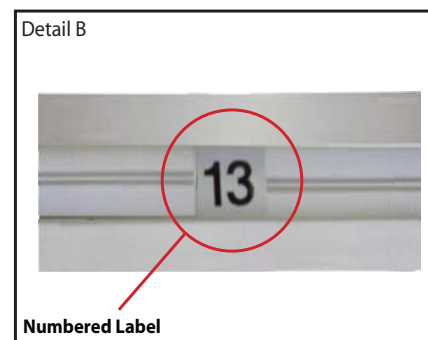


Numbered Label

Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.




Horizontal Inline Connection (remove only one setscrew)

Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

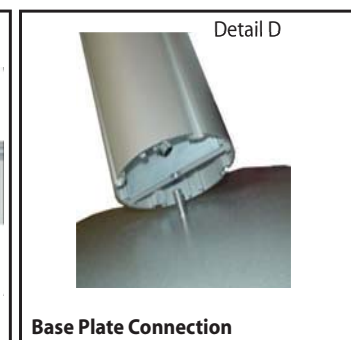

Base Plate Connection


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

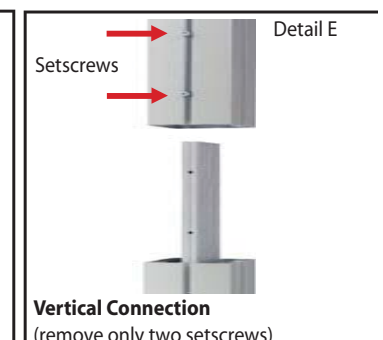

Vertical Connection (remove only two setscrews)


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.

Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

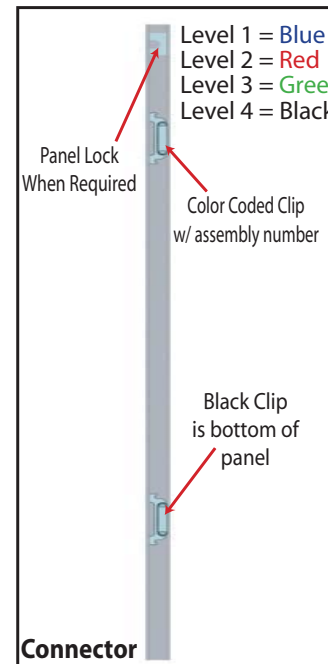


Connector

Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

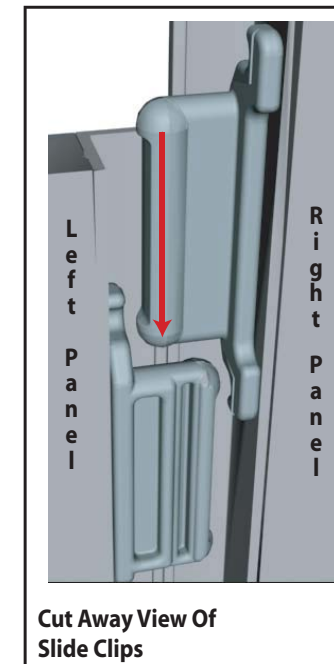


Cut Away View Of Slide Clips

Components connect together by aligning them and sliding downward connecting clips together.

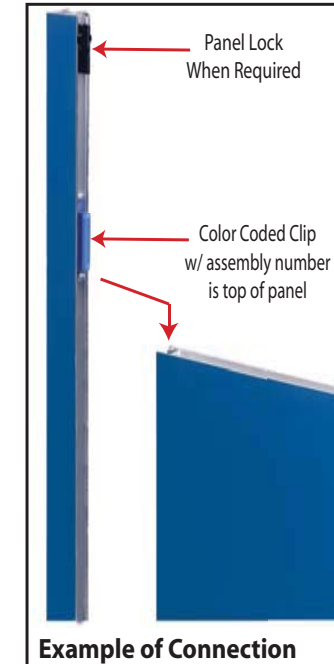

Example of Connection

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

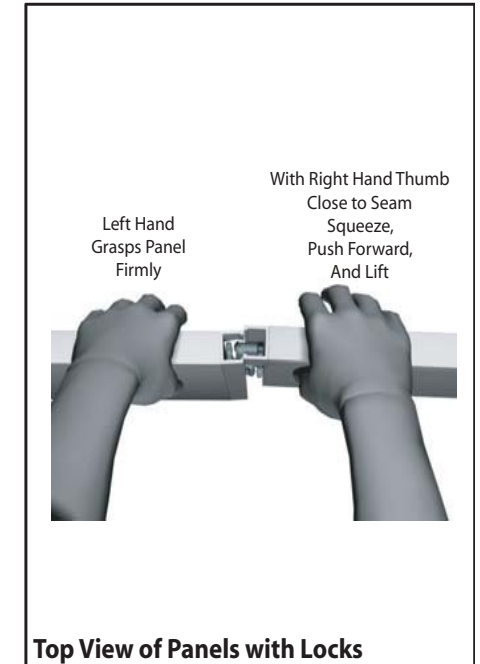

Top View of Panels with Locks



The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item Number	Description
1	38" w x 46" h Flat Panel
2	46" h 90° Connector
3	38" w x 46" h Flat Panel
4	46" h 90° Connector
5	38" w x 46" h Flat Panel w/ Door
6	46" h 90° Connector
7	38" w x 46" h Flat Panel
8	46" h 90° Connector

Steps:

- 1) Assemble by starting at panel #1* and continue in numerical order.

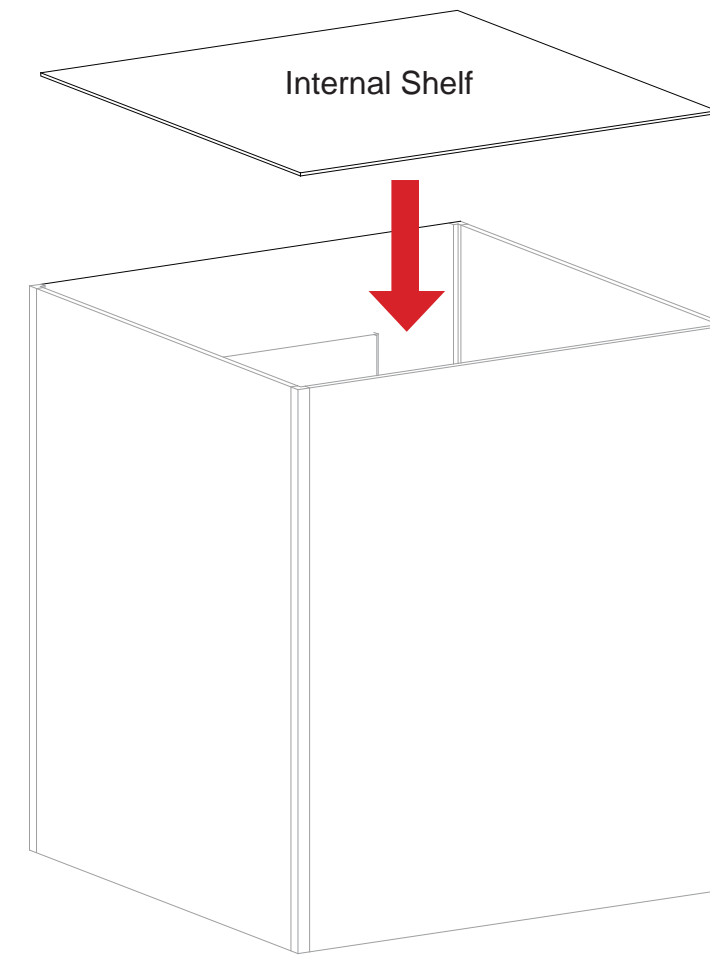
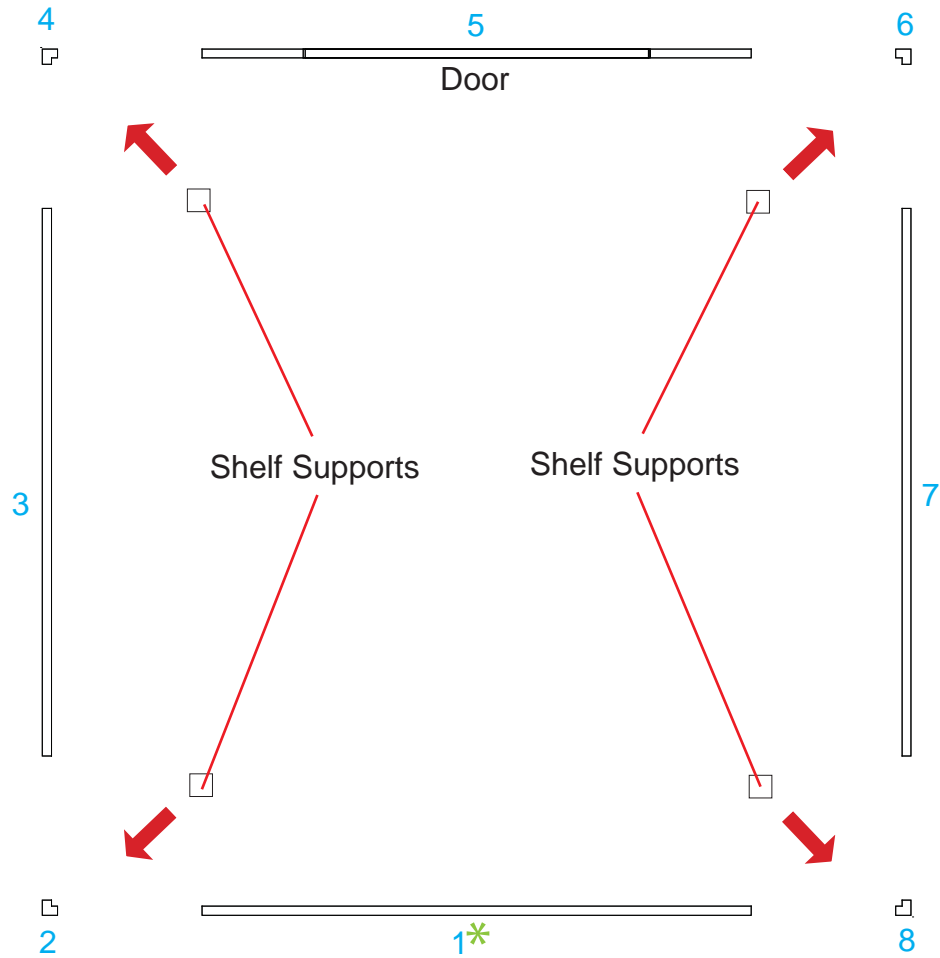


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item	Qty.	Description
1	1	49.5"h Lower Vertical Extrusion w/ Connector Attached
2	1	47.5"h Upper Vertical Extrusion w/ Connector Attached
3	1	49.5"h Lower Vertical Extrusion w/ Connector Attached
4	1	47.5"h Upper Vertical Extrusion w/ Connector Attached
5	3	24.928"w Horizontal Extrusion
5a	1	24.928"w Horizontal Extrusion for Monitor Mount Attachment
5b	1	24.928"w Horizontal Extrusion w/ Connector Attached

Steps:

- 1) Attach lower vertical extrusions [1 and 3] to counter top using screws provided.
- 2) Attach upper vertical extrusions atop lower extrusions [2 to 1 and 4 to 3]
- 3) Attach horizontal extrusions [5, 5a and 5b] between vertical assemblies [1/2 and 3/4], placing inserts as indicated.

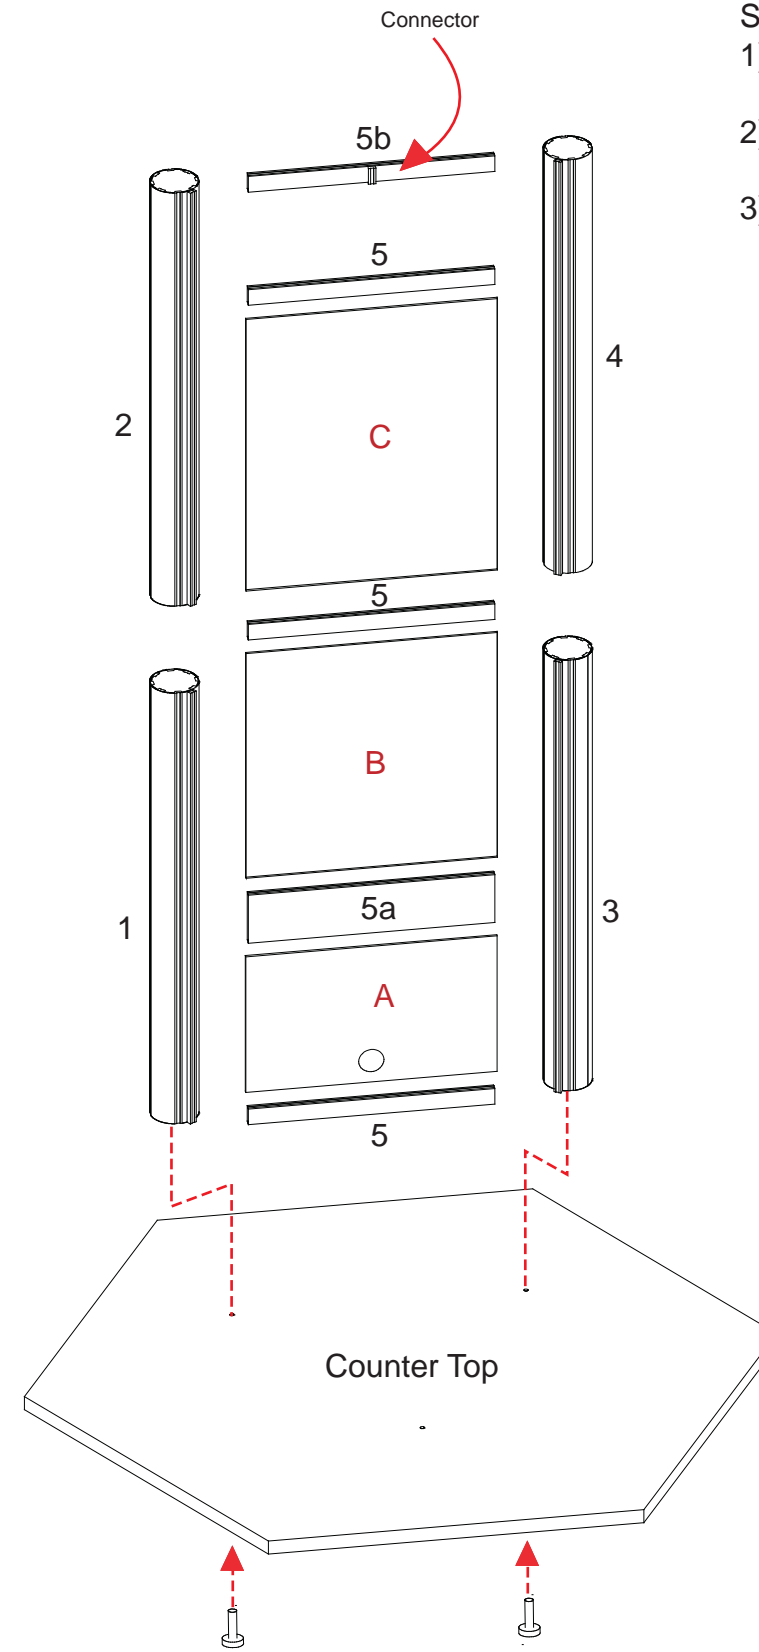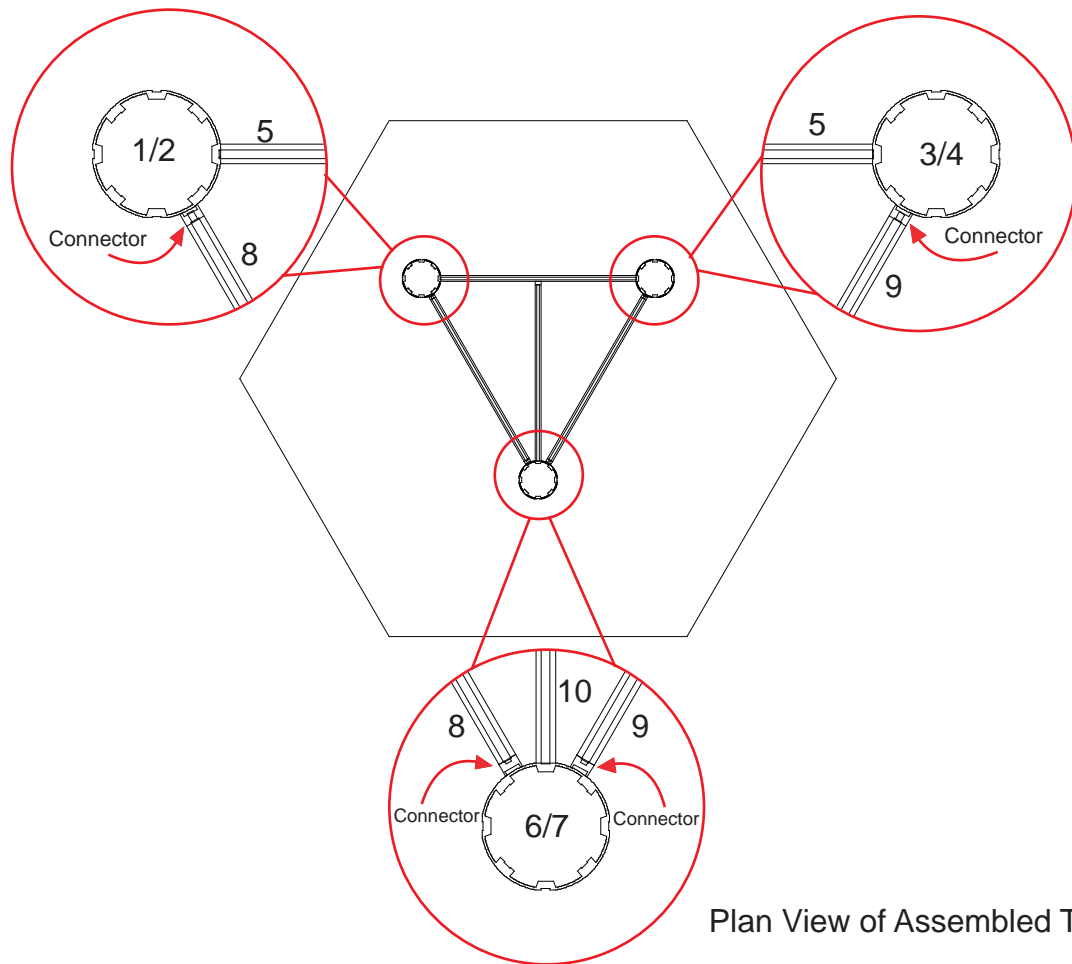

Laminated Inserts:

A - 25.428"w x 15.575"h

Perforated Inserts:

B - 25.428"w x 25.831"h

C - 25.428"w x 31.209"h

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


Item	Qty.	Description
6	1	49.5"h Lower Vertical Extrusion w/ Connector Attached
7	1	47.5"h Upper Vertical Extrusion w/ Connector Attached
8	4	49.5"h Lower Vertical Extrusion w/ Connector Attached
8a	1	49.5"h Upper Vertical Extrusion w/ Connector Attached
9	4	24.928"w Horizontal Extrusion
9a	1	24.928"w Horizontal Extrusion for Monitor Mount Attachment
10	1	22.5"w Horizontal Extrusion w/ Connector Attached

Steps:


- 1) Attach lower vertical extrusions [6] to counter top using screws provided.
- 2) Attach upper vertical extrusions atop lower extrusions [6 to 7].
- 3) Attach horizontal extrusions [8 and 8a] between vertical assemblies [1/2 and 6/7], placing inserts as indicated.

Note: Complete wire management before continuing with third side.

- 4) Attach horizontal extrusions [9 and 9a] between vertical assemblies [3/4 and 6/7], placing inserts as indicated.
- 5) Attach extrusion [10] between connector and vertical [7].

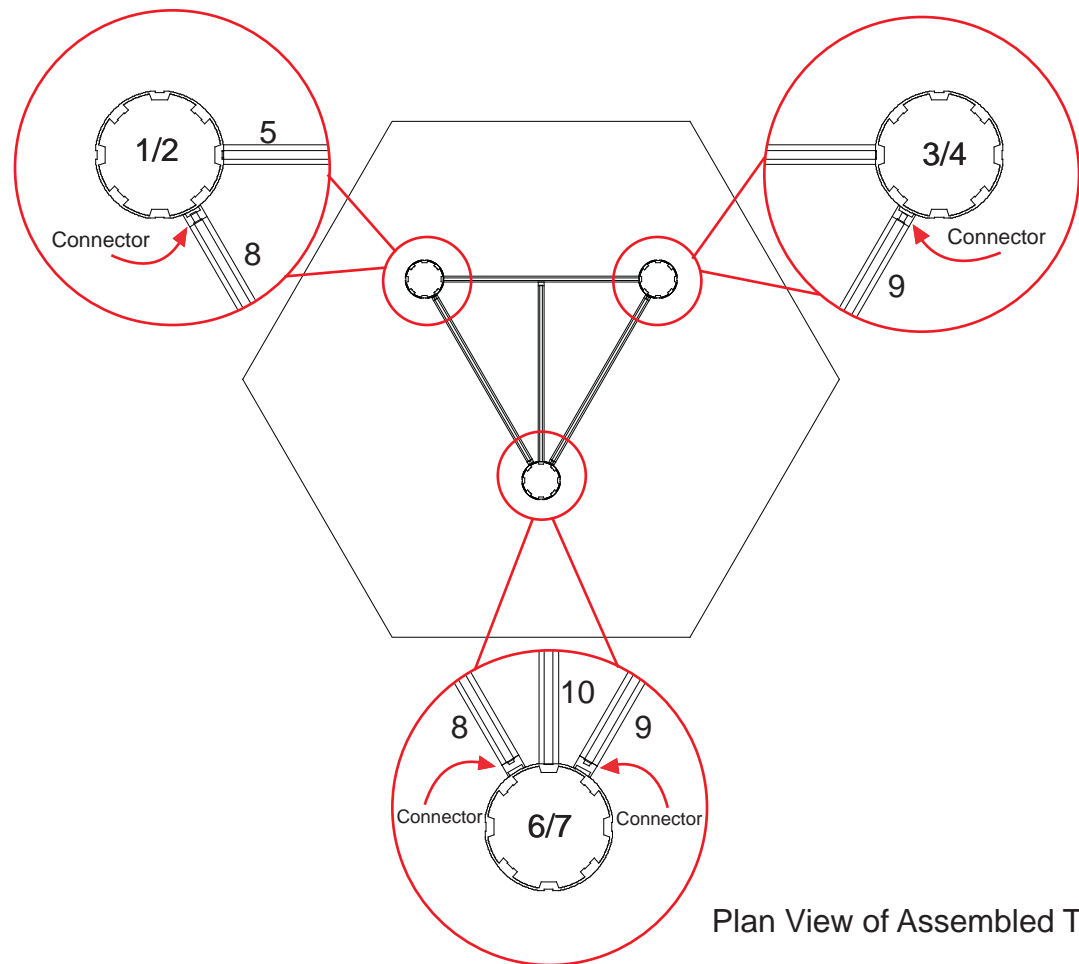

Plan View of Assembled Tower

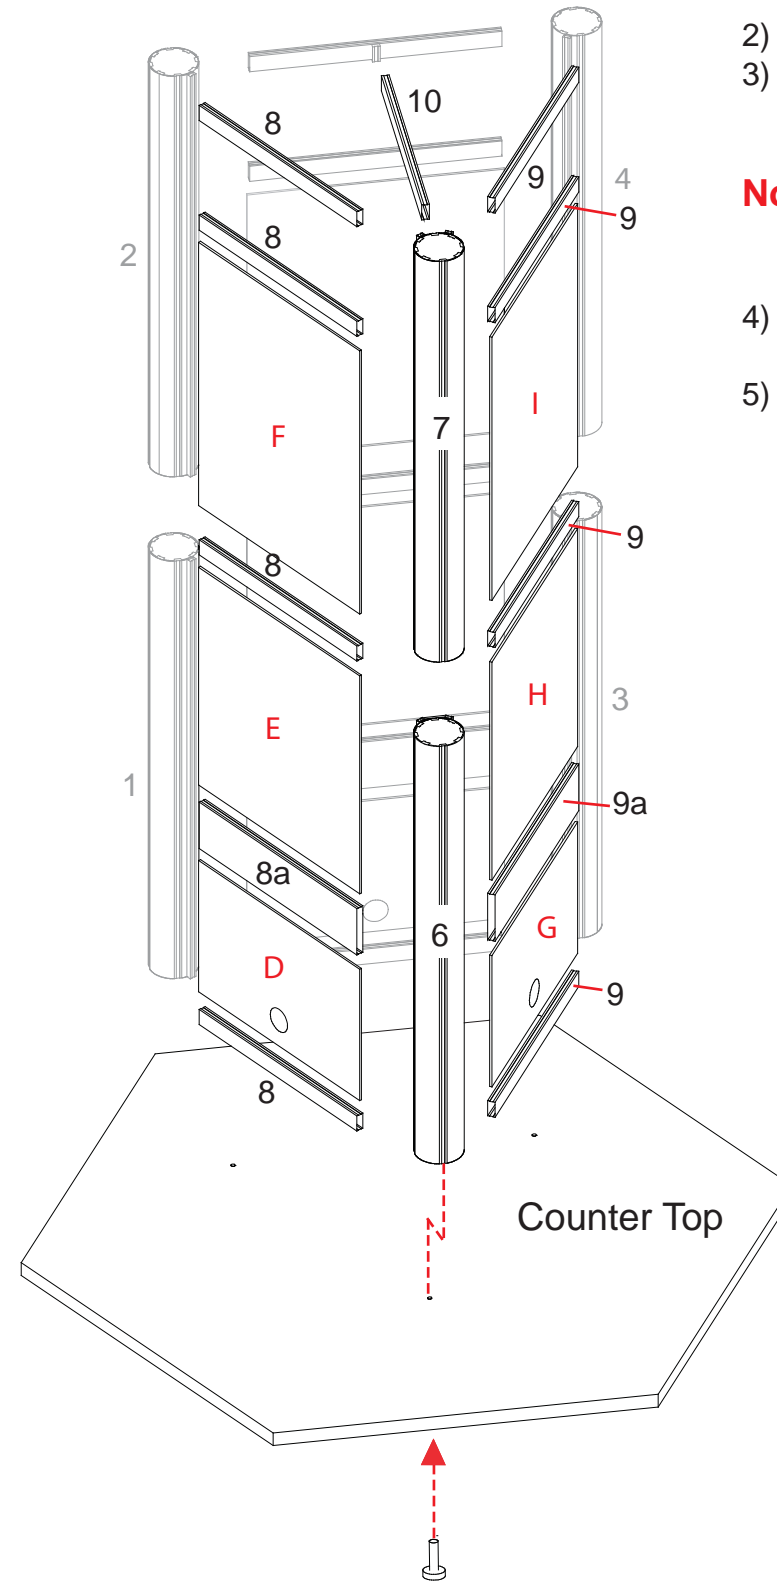

Laminated Inserts:

- D - 24.336"w x 15.575"h
- G - 24.359"w x 15.575"h

Perforated Inserts:

- E - 24.336"w x 25.831"h
- F - 24.336"w x 31.209"h
- H - 24.359"w x 25.831"h
- I - 24.359"w x 31.209"h

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


866.652.2100

Item	Qty.	Description
11	2	32"h Vertical Extrusion

Note: Black Sintras and Vertical Extrusion remain assembled when shipping


Steps:

- 1) Attach vertical extrusions with Sintras attached to extrusion [10], tighten locks to secure.


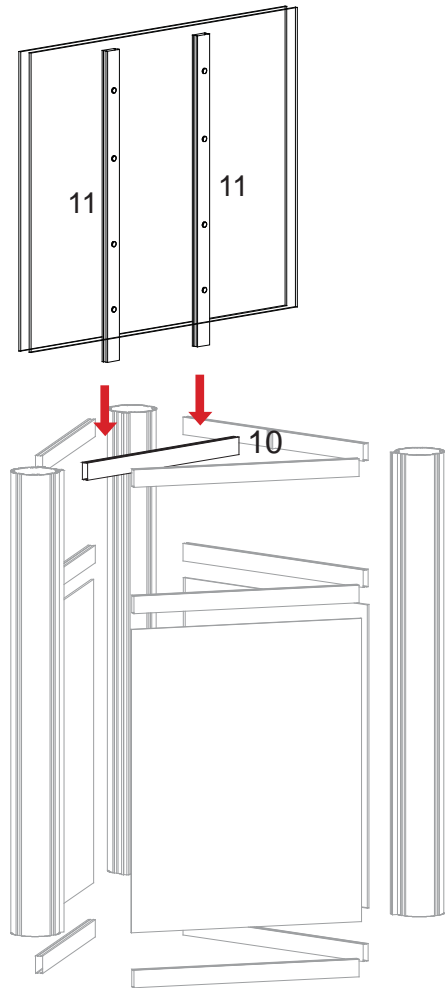


Steps:

- 2) Velcro Graphic Signs to Sintras

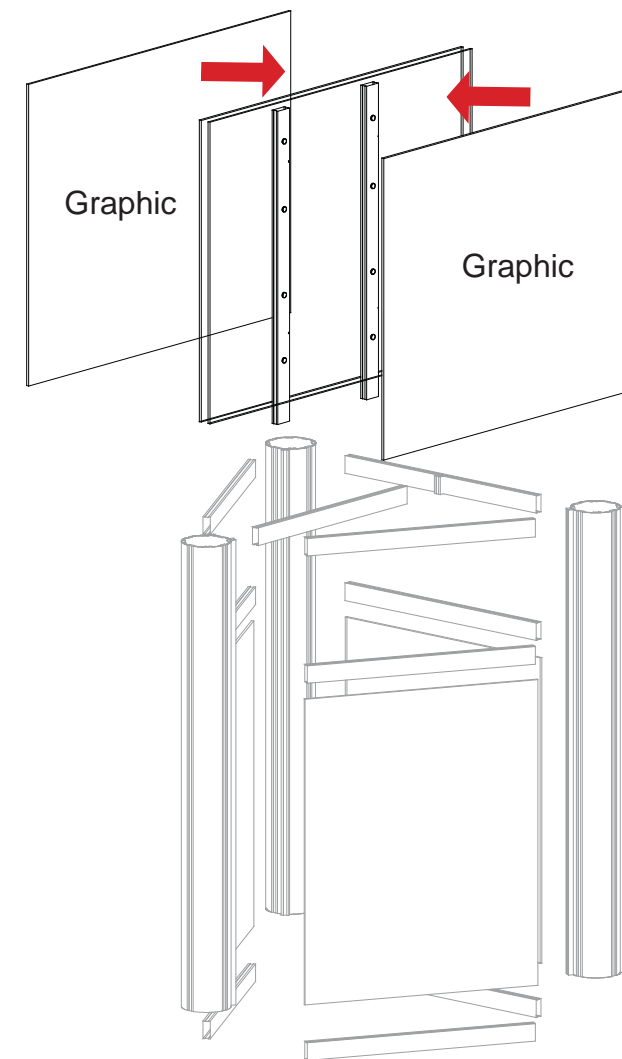

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

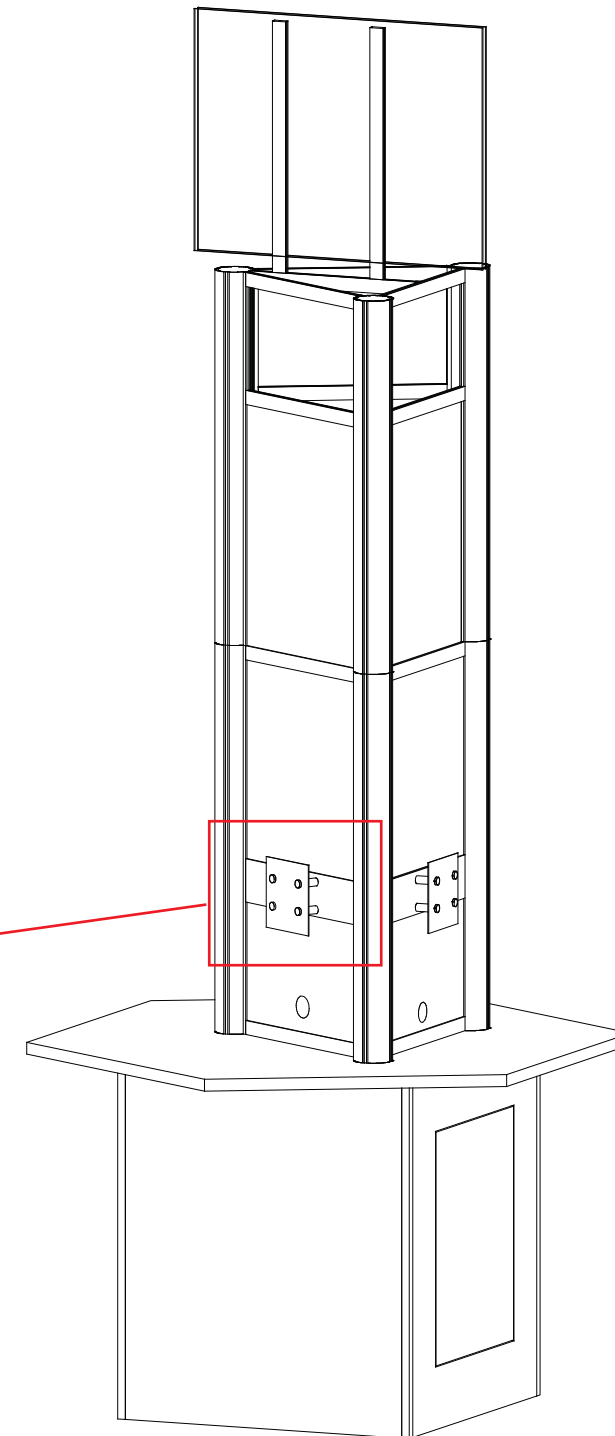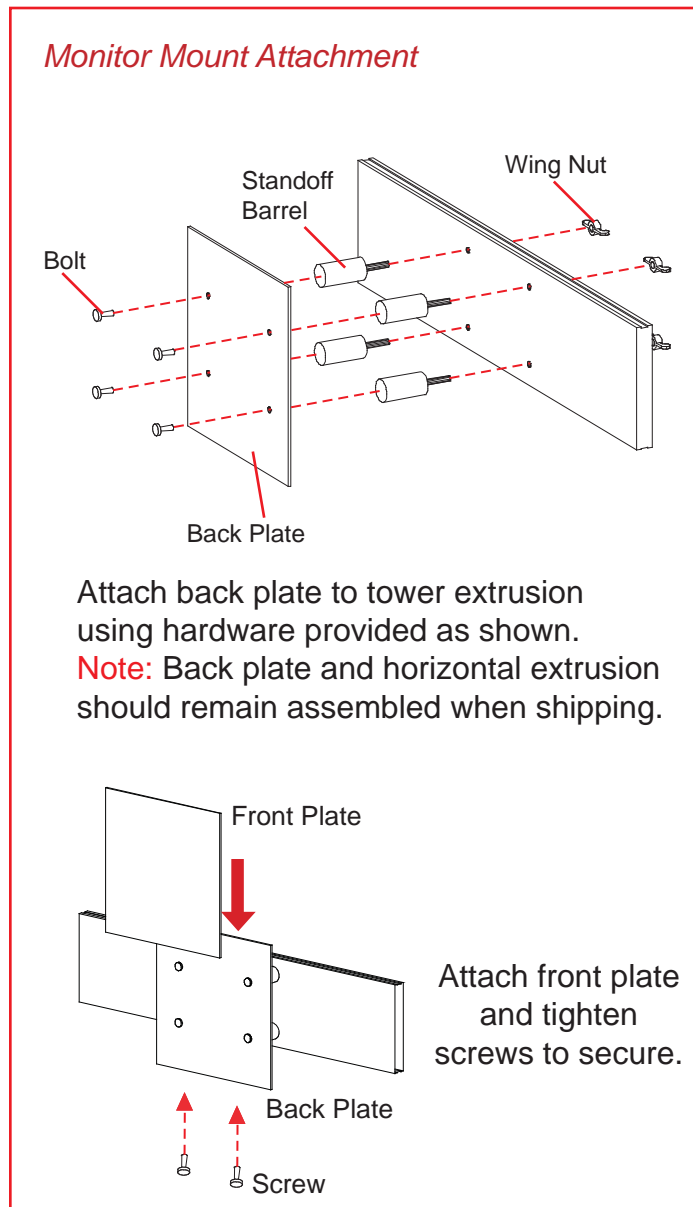



WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100



Steps:

- 1) Attach conference table leg 13 to base plate 12, see detail D on General info page.
- 2) Attach counter to table leg with supplied hardware.




Repeat steps for additional table.

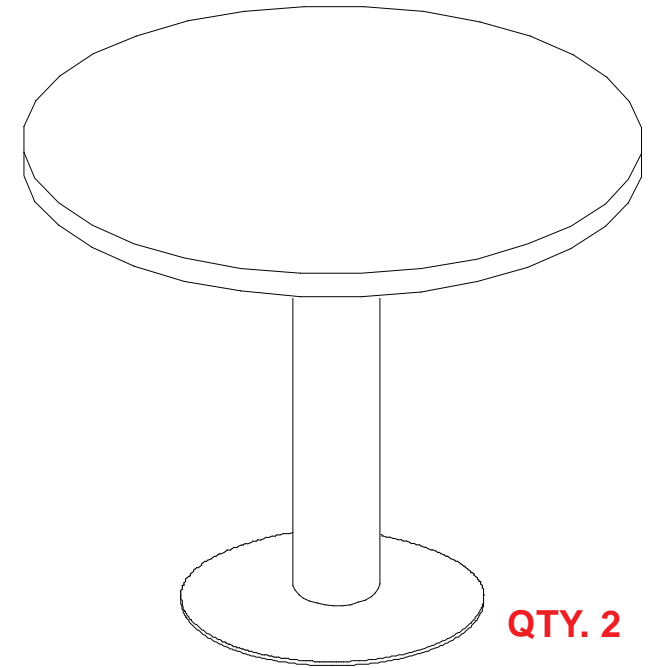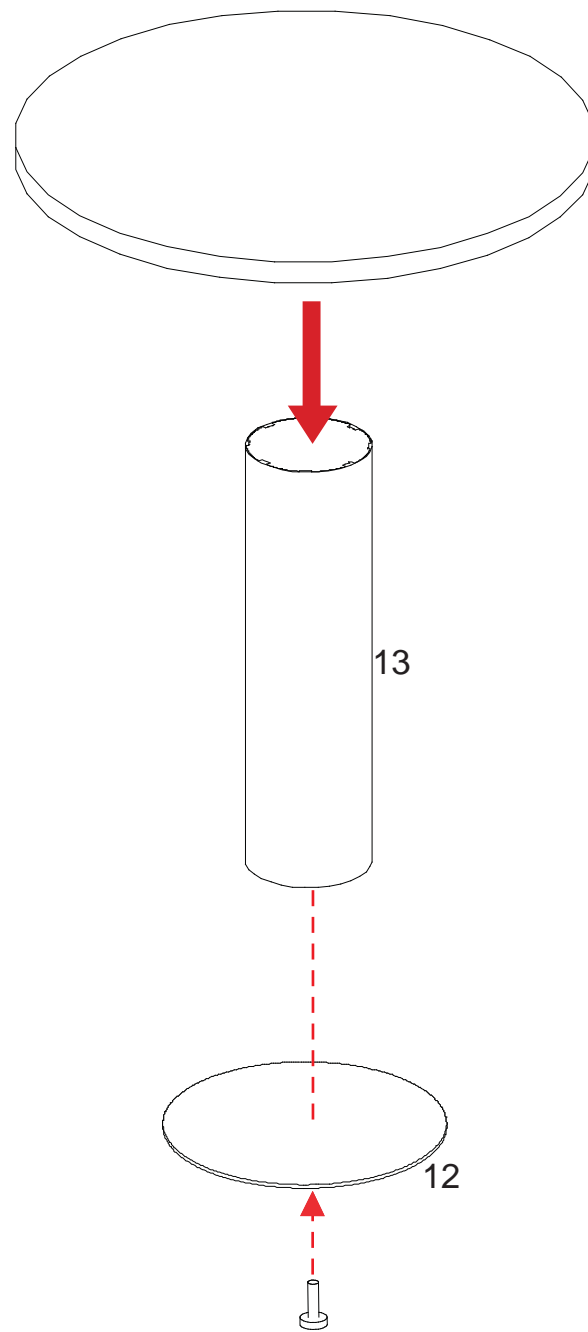

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

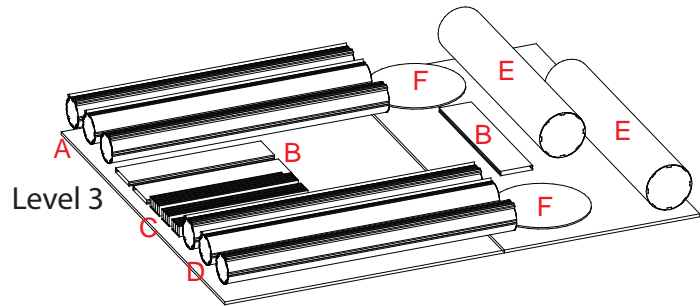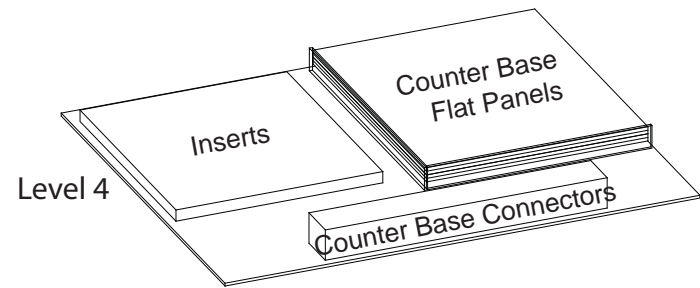

- Level 3: Part List
- A - (3) 47.50" Extrusion
 - B - (3) Extrusion for Monitor Attachment
 - C - (1) 22.502" Extrusion
 - (4) 23.859" Extrusion
 - (4) 23.836" Extrusion
 - (4) 24.928" Extrusion
 - D - (3) 49.5" Extrusion
 - E - (2) Conference Table Leg
 - F - (2) Conference Table Base Plate

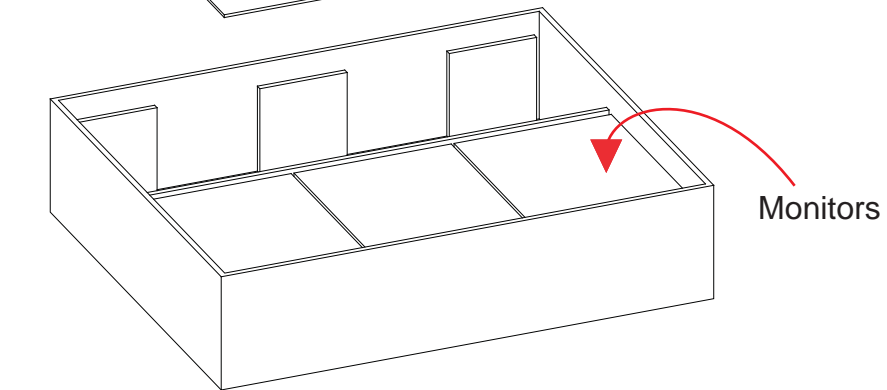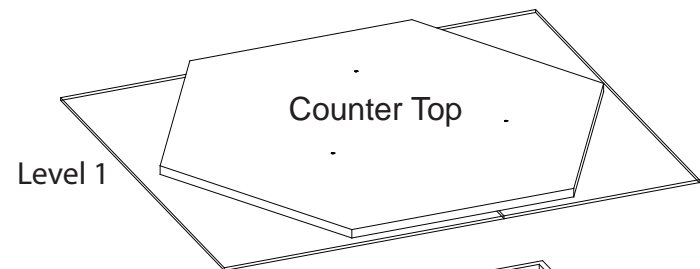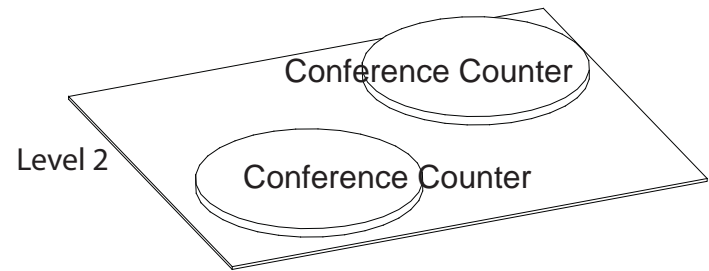

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING