


Plan View

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100


Item	QTY.	Description	Item	QTY.	Description
1	1	47.5645" h Square Vertical	7	1	46.628" w Horizontal Extrusion
2	1	47.5645" h Square Vertical	8	1	46.628" w Horizontal Extrusion
3	1	47.5645" h Square Vertical	9	1	23" w Horizontal Extrusion
4	1	47.5645" h Square Vertical	10	1	6" w Horizontal Extrusion
5	1	46.628" w Horizontal Extrusion	11	1	6" w Horizontal Extrusion
6	1	46.628" w Horizontal Extrusion	12	1	8.468" w Horizontal Extrusion
			13	1	8.468" w Horizontal Extrusion
			14	2	6" w Horizontal Extrusion
			15	2	8.468" w Horizontal Extrusion

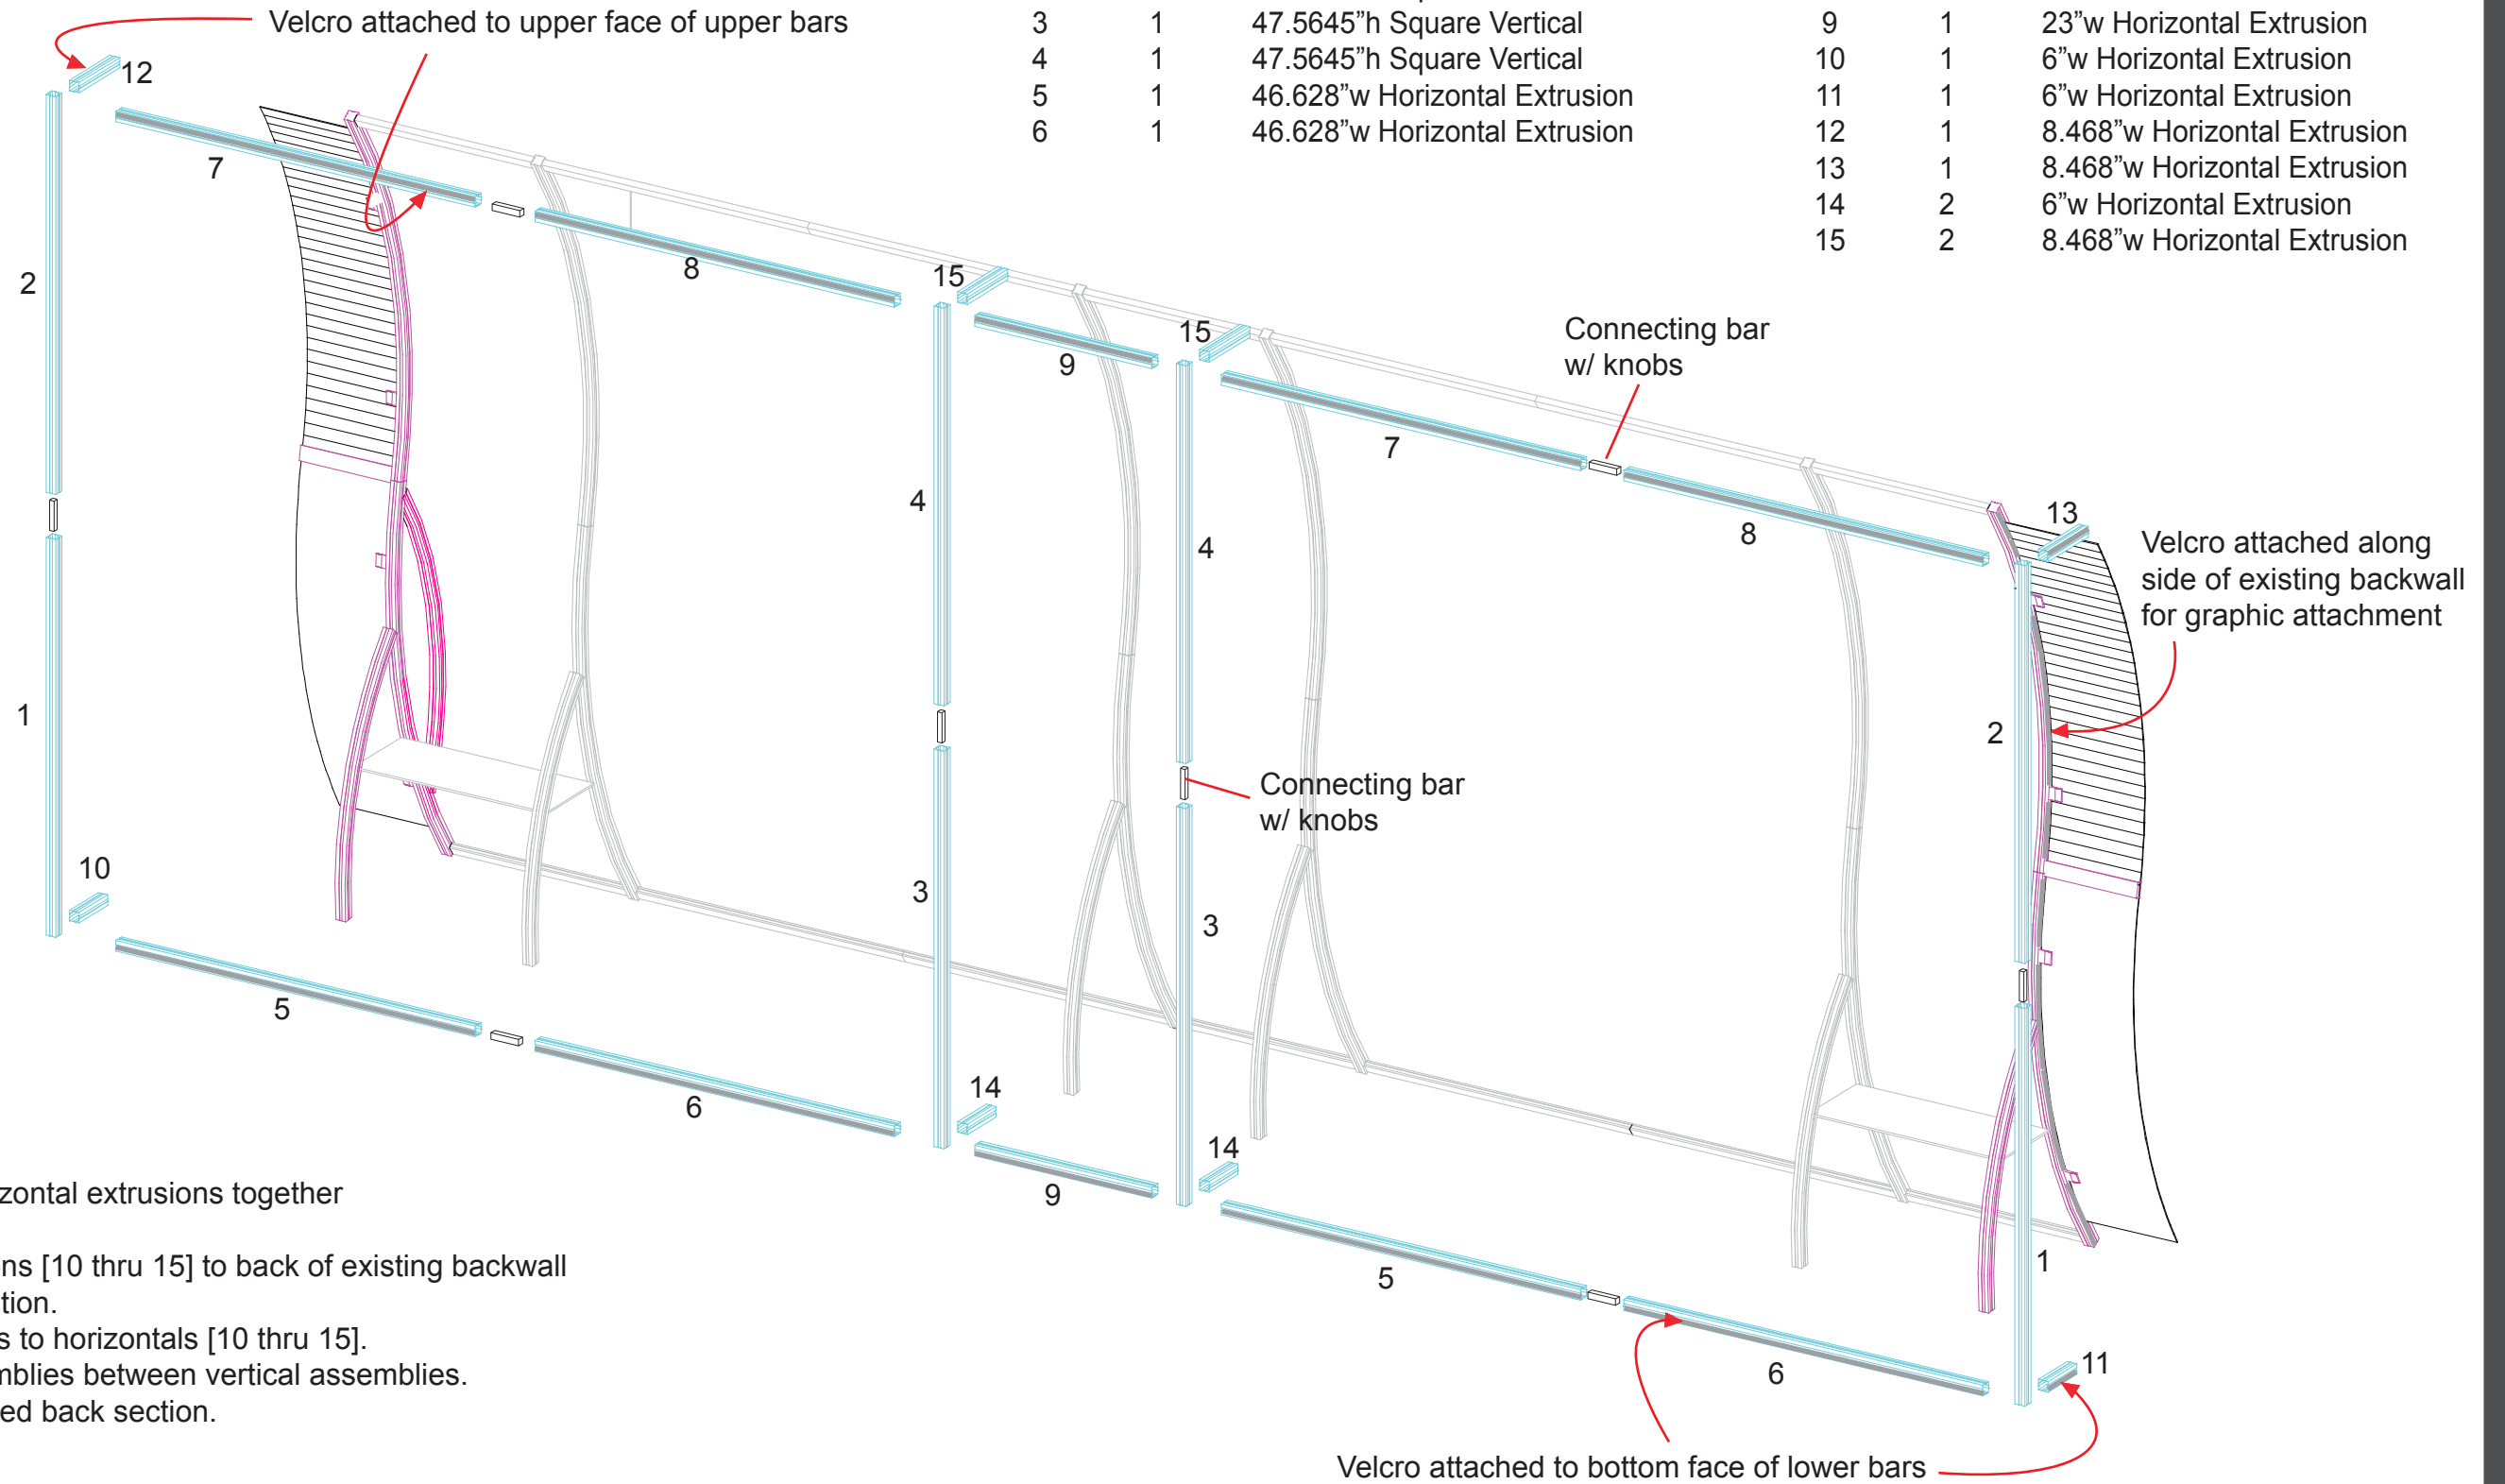


Steps:

- 1) Connect vertical and horizontal extrusions together using connecting bars.
- 2) Attach horizontal extrusions [10 thru 15] to back of existing backwall where indicated in illustration.
- 3) Attach vertical assemblies to horizontals [10 thru 15].
- 4) Connect horizontal assemblies between vertical assemblies.
- 5) Apply graphic to assembled back section.


**WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING**

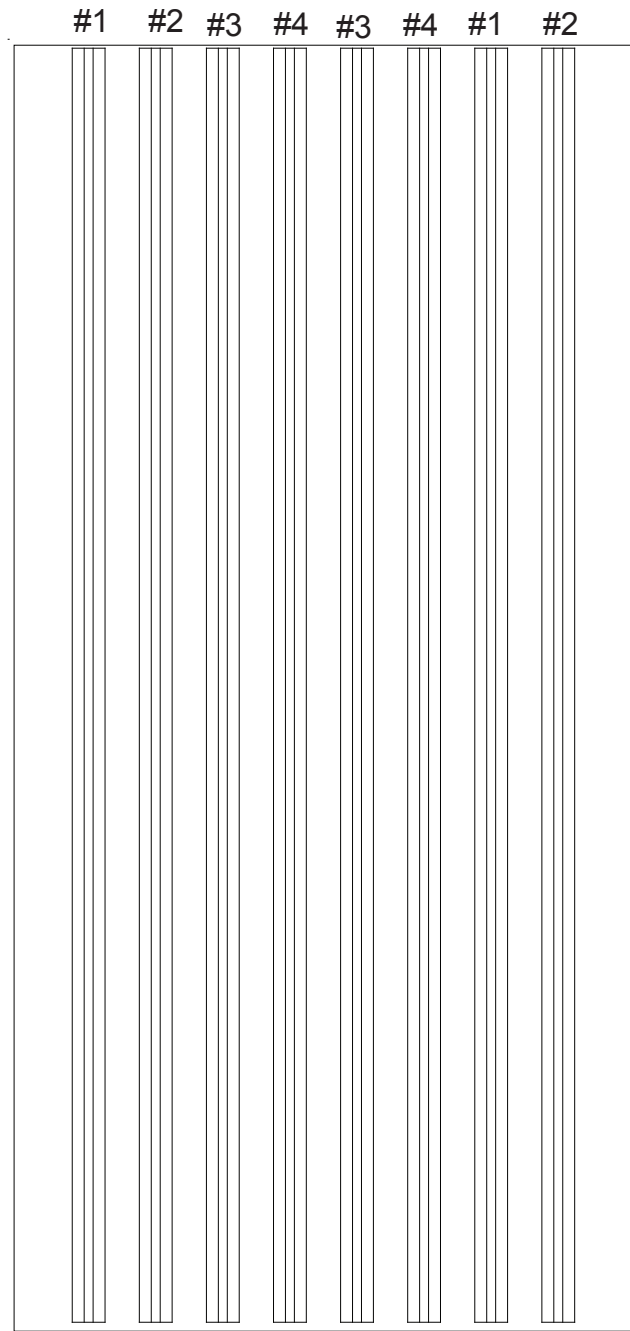

Level 1 (Bottom)

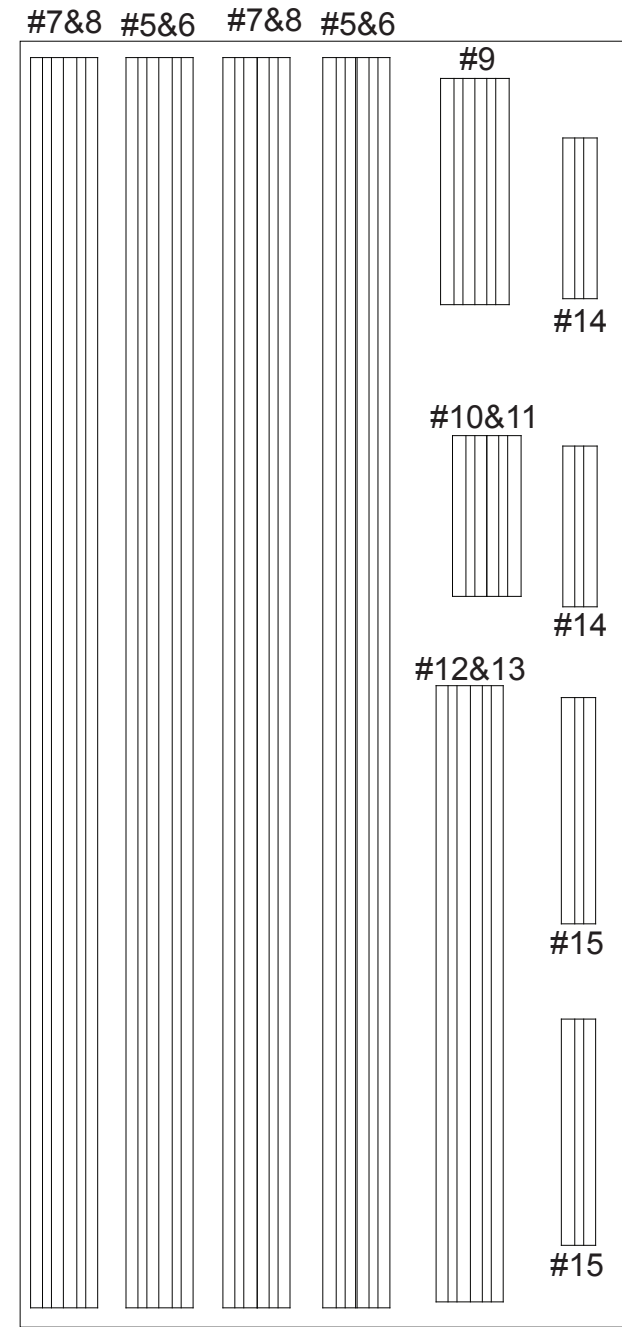

Level 2

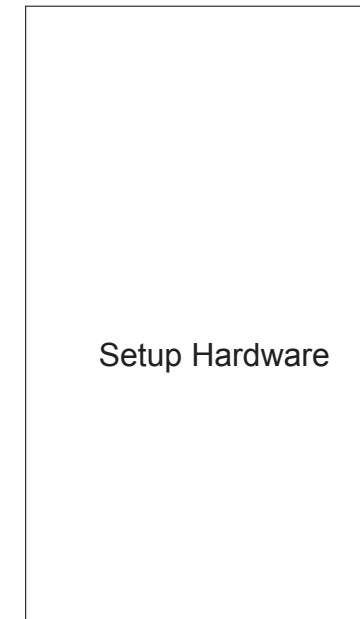

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING