


Clamp Attachment

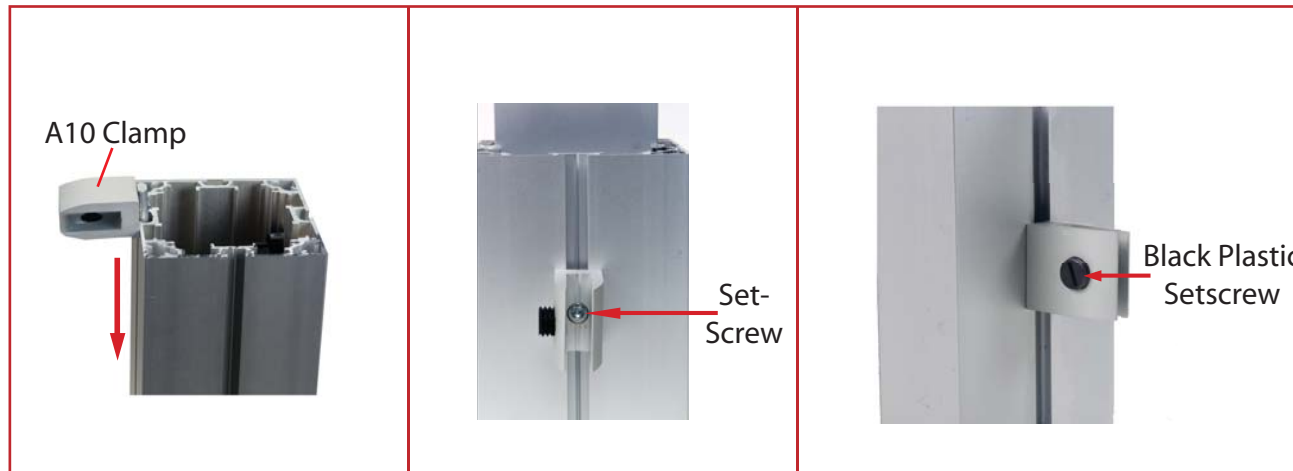

1) Slide A10 Clamp into groove of extrusion.

2) When desired location is found, tighten setscrew to secure.

3) Tighten black plastic setscrew to secure plex/ sintra piece in place.

