
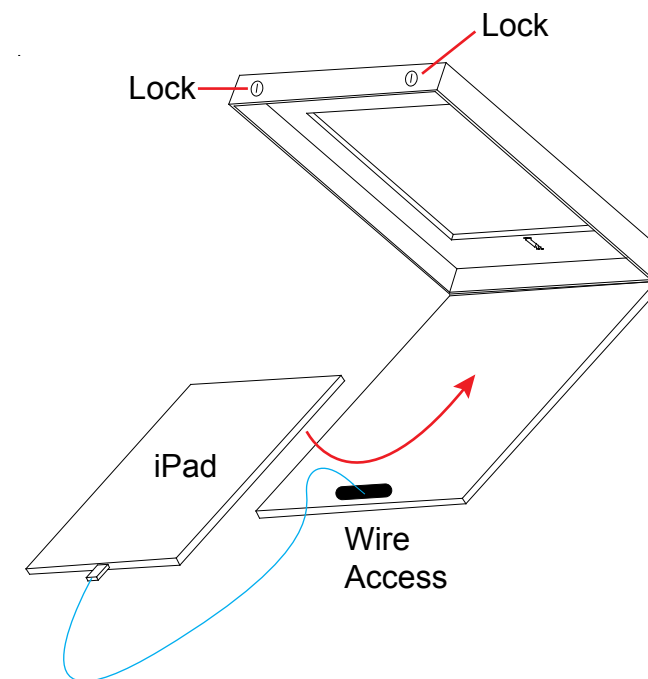


visionary™ DESIGNS


Steps:

- 1) Attach base [1] to curved vertical [2] using bolts.
- 2) Attach square plate [3] to vertical [2] using bolts.
- 3) Attach clamshell [4] to square plate [3] using hex nuts.
- 4) Insert iPad and feed wire through hole as shown in detail.

NOTE: Square plate [3] must rotate to left and right before installing clamshell.

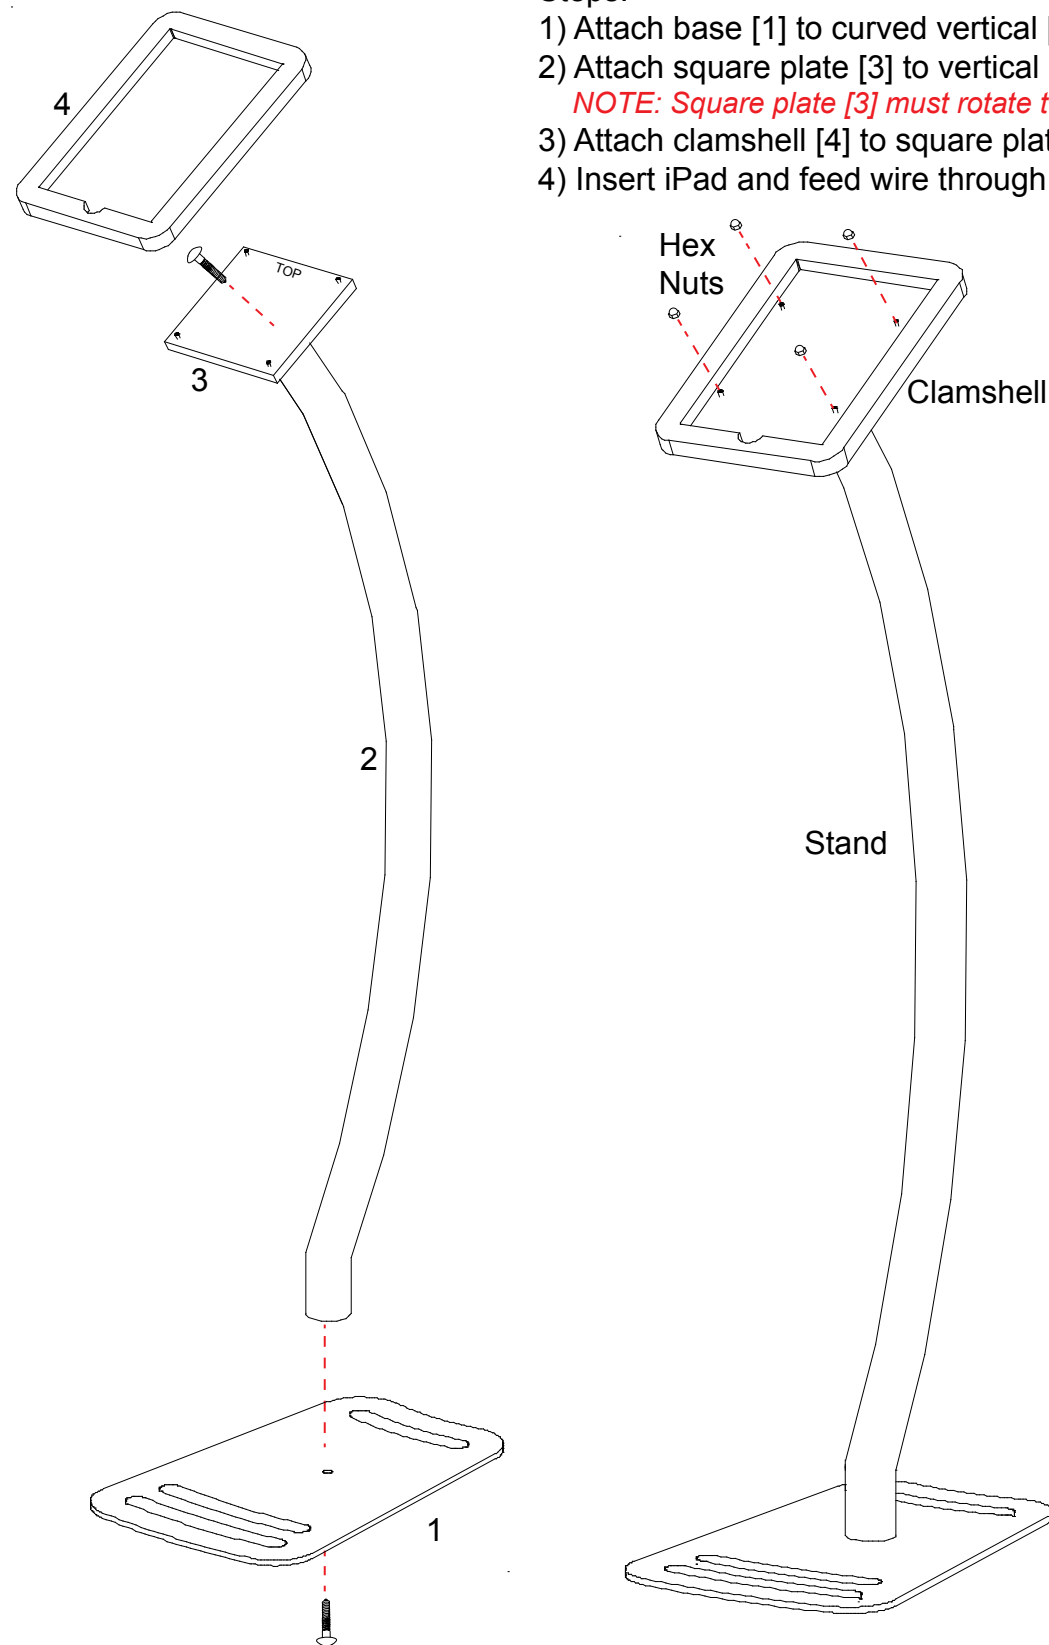

Rotate clamshell to turn iPad from portrait to landscape orientation

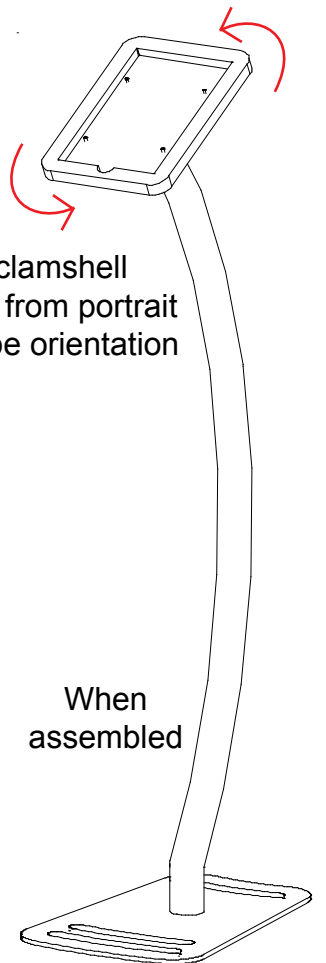


Wire Management for iPad



Feed iPad charging cord through holes from top to bottom of post as shown.

Optional Cover for Home Button

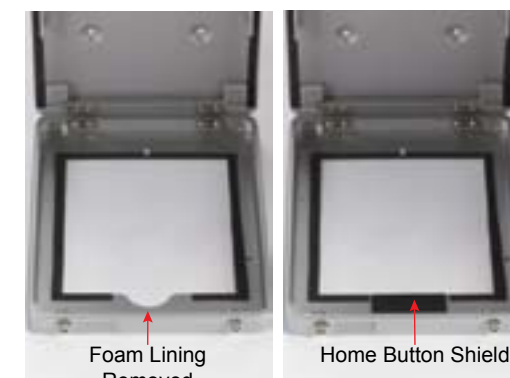

- 1) Remove foam lining from inside bottom of clamshell as shown.
 - 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening as shown.
- NOTE:** This is a permanent fix and can't be easily removed.

Tools Required:
1) Hex Tool
2) Pliers



WHEN DISASSEMBLING, TIGHTEN ALL SCREWS AND NUTS TO PREVENT LOSS DURING SHIPPING.