

Order #XXXXX General Information

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.


Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.


Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.



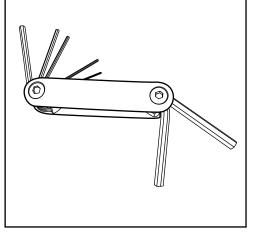



Hex Tool - Essential for Assembly

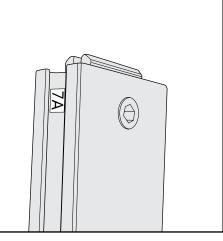




Part Identification - Numbering

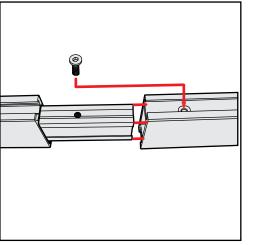




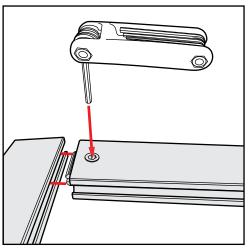

Extrusion & Lock Connection

Base Plate & Extrusion Connection

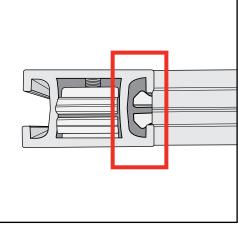

Engaged Lock









DO NOT USE POWER TOOLS


LADDERS OR LIFTS MAY BE REQUIRED


ALL CONNECTIONS MUST **BE TIGHTLY SECURED**




Steps:

- 1) Attach mount plate to post, using set screw.
- NOTE: Mount plate must rotate to left and right before installing clamshell.
- 2) Attach post assembly to counter top, using bolt from under counter top.
- 3) Attach clamshell to mount plate, using hex nuts.
- 4) Insert iPad in clamshell, then route cords. See Cord Management for iPad detail.

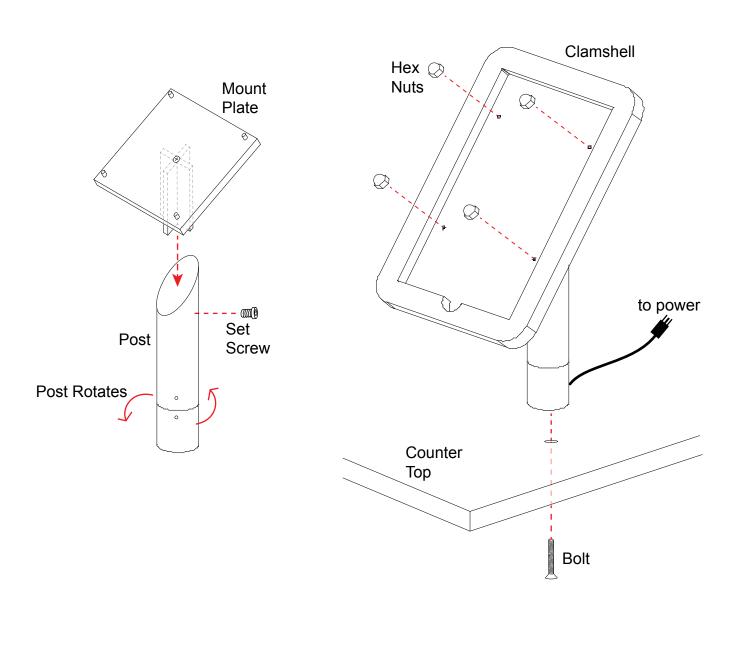


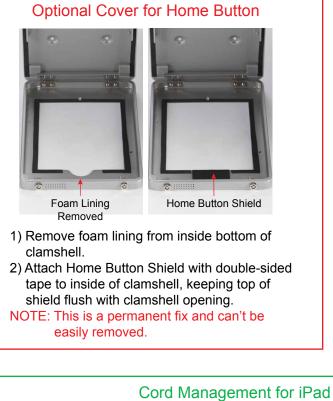

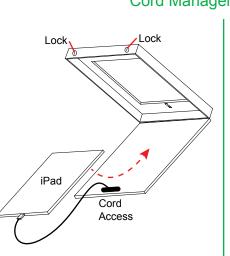



Attach iPad cord to supplied USB extension cord. Feed USB cord through top hole of post, then out bottom hole of post. Connect to power.

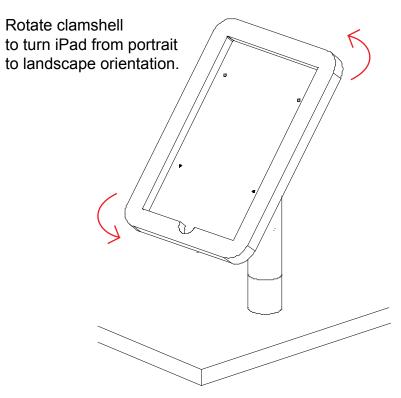

Completed Assembly

Step 1 of 2

Order #XXXXX MOD-1552 Counter Assembly




1

5


Extrusion Profile

Z46

Lip faces inside assembly



- 1 37.25" S44 Vertical Extrusion w/ Door Hinges
- 2 1 37.25" S44 Vertical Extrusion w/ Door Stop
- 3 1 37.25" S44 Vertical Extrusion
- 4 1 37.25" S44 Vertical Extrusion
- 5 2 16" Z46 Horizontal Extrusion
- 5A 2 16" Z45 Horizontal Extrusion
- 6 2 33.775" Z46 Horizontal Extrusion
- 6A 2 33.775" Z45 Horizontal Extrusion

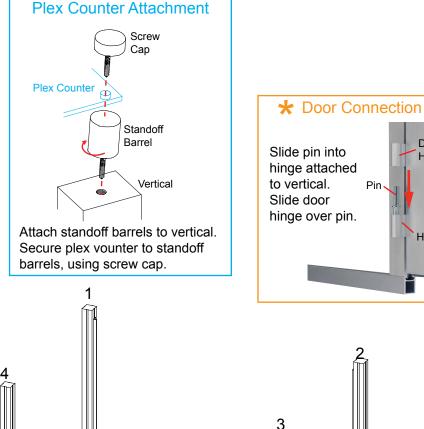

Steps:

- 1) Attach horizontals [6] between verticals [1] [2] and [3] [4].
- 2) Attach horizontals [5] between verticals [1] [4] and [2] [3].
- 3) Set floor on lips of horizontals [5] and [6].
- 4) Insert infills between verticals [1] [4], [2] [3] and [3] [4].
- 5) Attach horizontals [5A] between verticals [2] [3] and [1] [4].
- 6) Attach horizontals [6A] between verticals [3] and [4].
- 7) Connect assembled door. See Door Connection detail.
- 8) Set counter top on top of [5A] and [6A]. See Counter Top Attachment detail.
- 9) Screw threaded end of standoff barrels into the counter top.
- 10) Place plex counter on top of standoff barrels, then secure with screw caps. See Plex Counter Attachment detail.
- 11) Refer to next page to assemble MOD-1329 iPad mount.
- 12) Attach MOD-1329 iPad mount to top of plex counter.

