


Plan View

10'

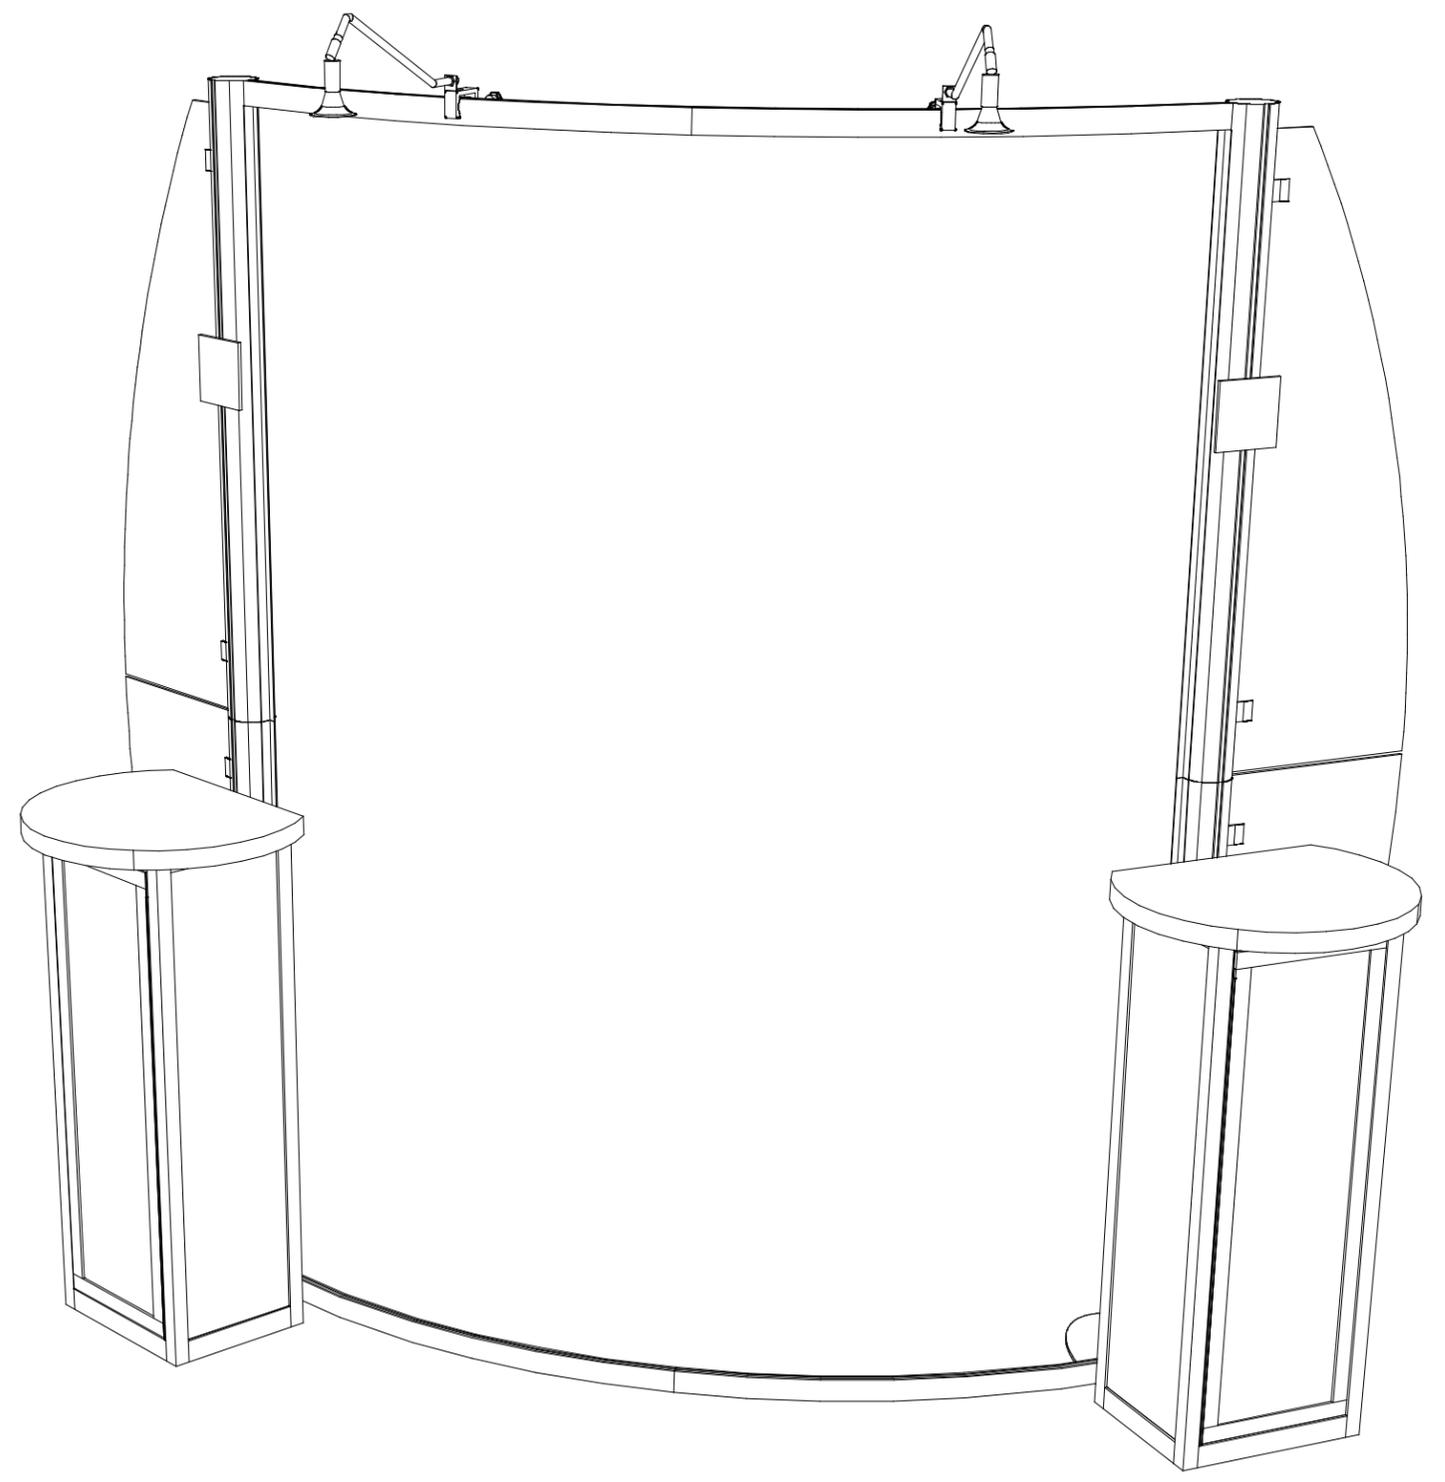

Perspective View

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

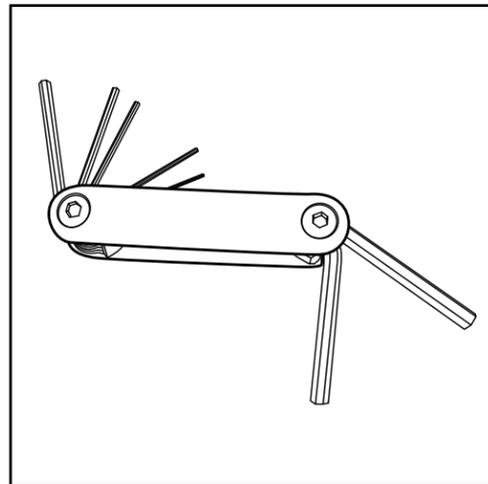


Hex Tool - Essential for Assembly

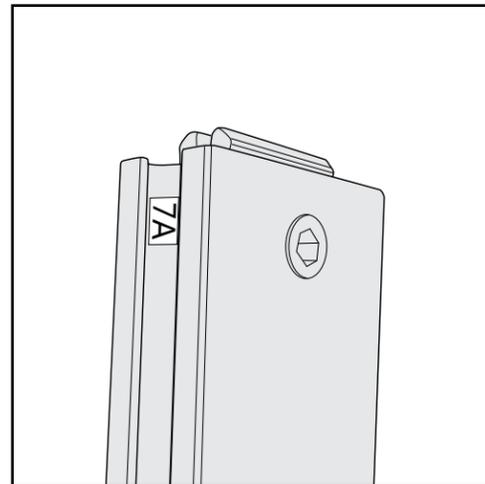


Part Identification - Numbering

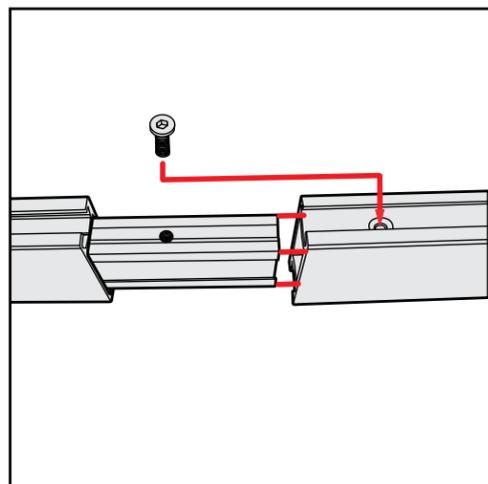


Spline Connection

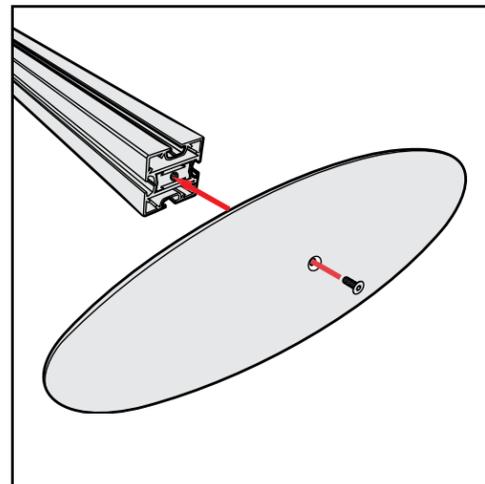

Base Plate & Extrusion Connection

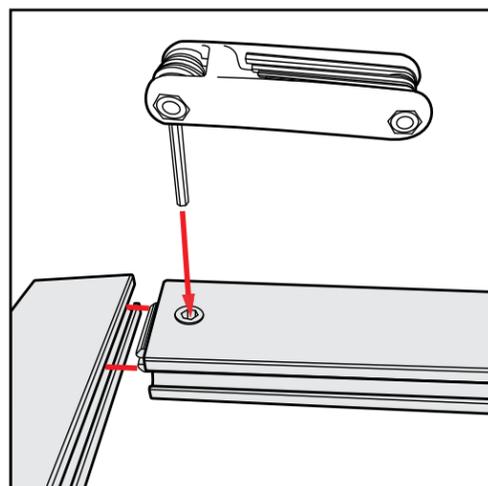

Extrusion & Lock Connection

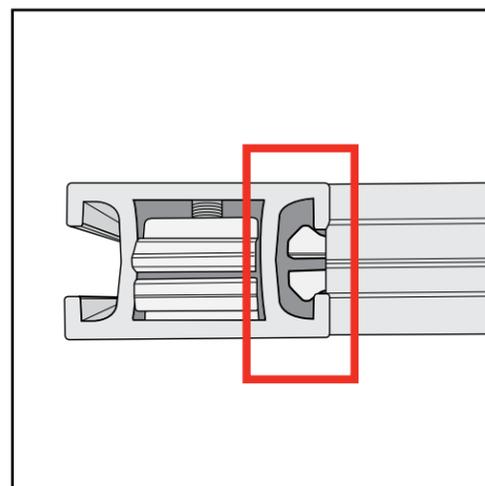

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED



ALL CONNECTIONS MUST
BE TIGHTLY SECURED

Steps:



- 1) Attach base plates to lower verticals using bolts as shown.
- 2) Attach upper verticals to lower verticals.
- 3) Connect curved horizontals together.
- 4) Attach curved horizontal assemblies between verticals.

Monitor Mount Attachment

Connectors

Monitor Mount

Slide connectors into groove of extrusion. Tighten setscrew to secure in place. Attach monitor mount to connectors with screws.

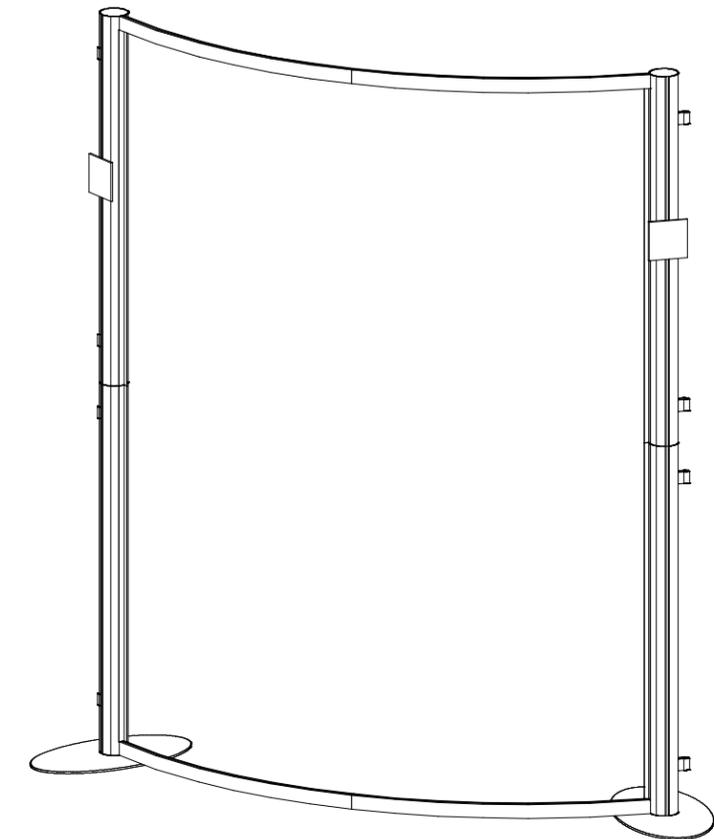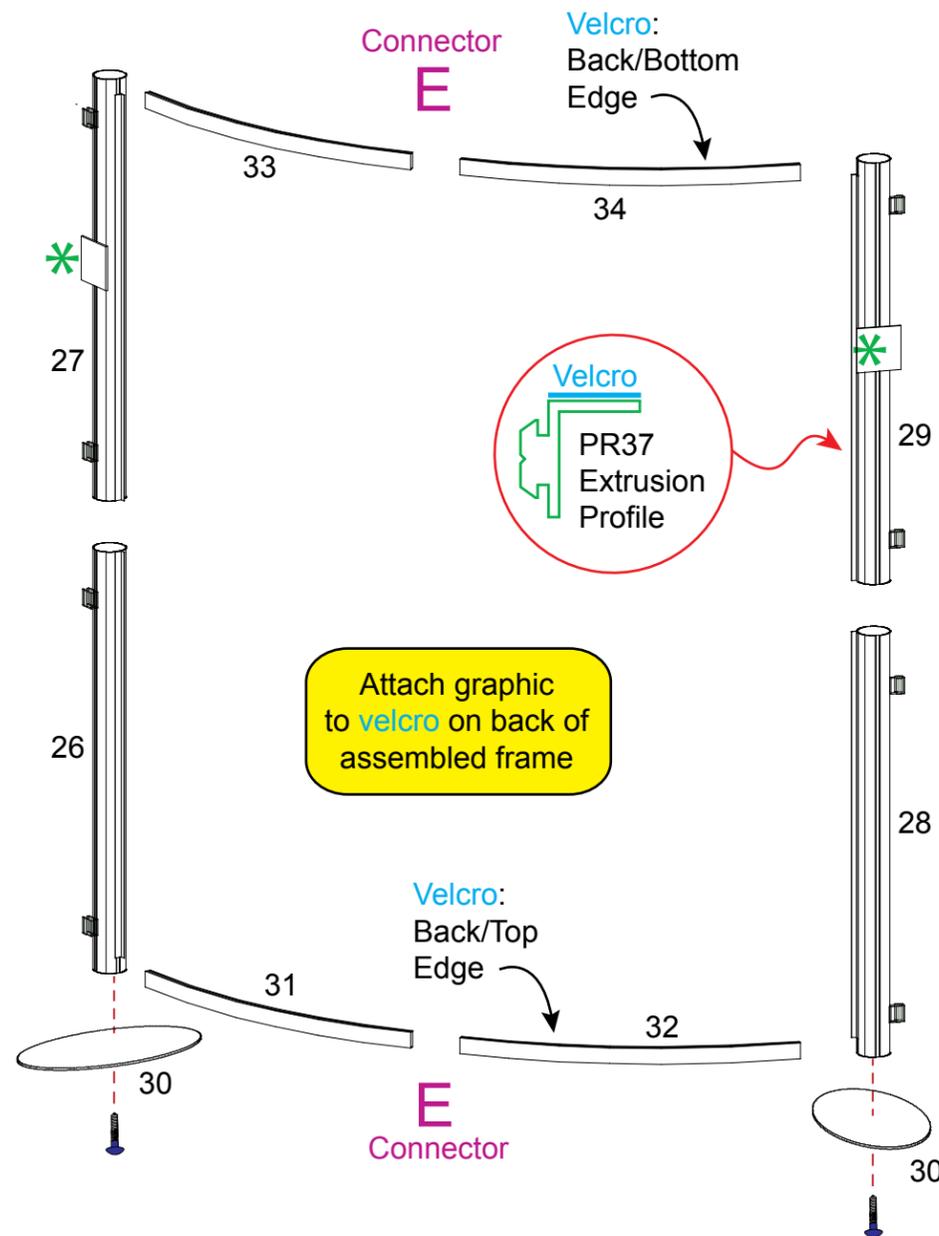

When assembled

Item	Qty.	Description
26	1	48" h Round Vertical Extrusion
27	1	48" h Round Vertical Extrusion
28	1	48" h Round Vertical Extrusion
29	1	48" h Round Vertical Extrusion
30	2	Oval Base Plate
31	1	38" Curved Horizontal Extrusion
32	1	38" Curved Horizontal Extrusion
33	1	38" Curved Horizontal Extrusion
34	1	38" Curved Horizontal Extrusion

Steps:



- 1) Attach base plates to lower verticals using bolts as shown.
- 2) Attach upper verticals to lower verticals.
- 3) Connect curved horizontals together.
- 4) Attach curved horizontal assemblies between verticals.

Monitor Mount Attachment

Connectors

Monitor Mount

Slide connectors into groove of extrusion. Tighten setscrew to secure in place. Attach monitor mount to connectors with screws.

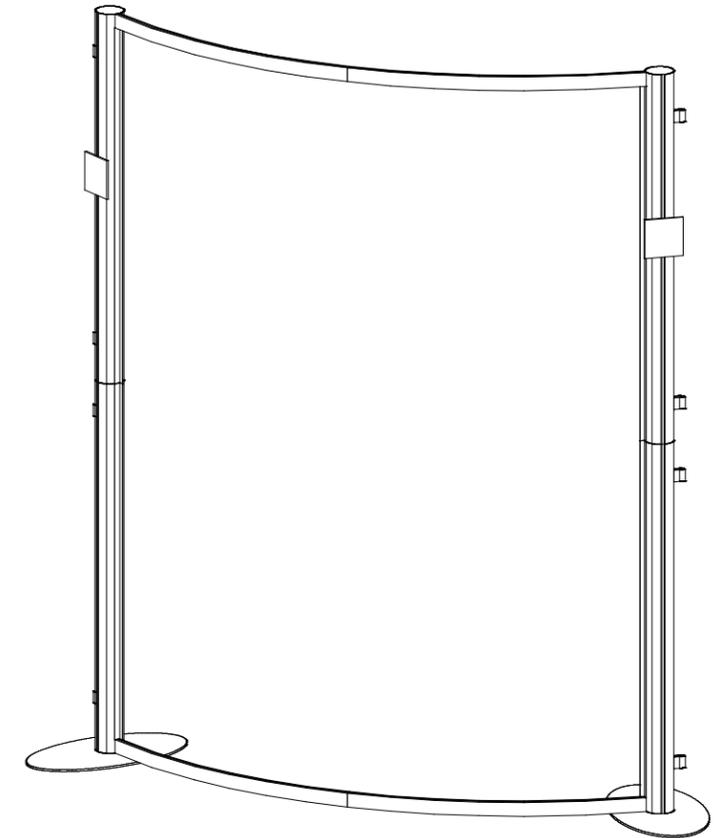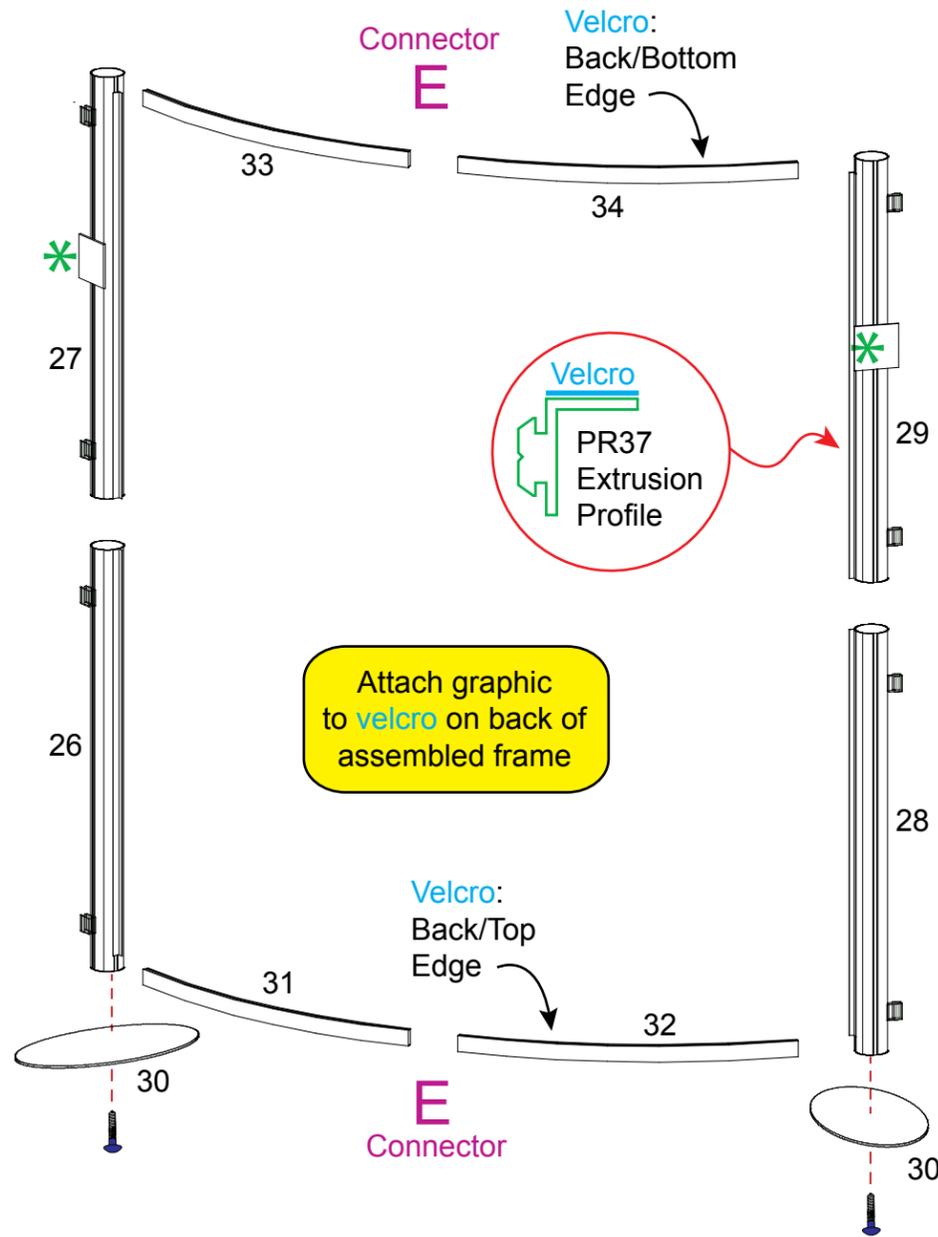

When assembled

Item	Qty.	Description
26	1	48" h Round Vertical Extrusion
27	1	48" h Round Vertical Extrusion
28	1	48" h Round Vertical Extrusion
29	1	48" h Round Vertical Extrusion
30	2	Oval Base Plate
31	1	38" Curved Horizontal Extrusion
32	1	38" Curved Horizontal Extrusion
33	1	38" Curved Horizontal Extrusion
34	1	38" Curved Horizontal Extrusion

Item	Qty.	Description
20	2	42" h Corner Vertical Extrusion
21	2	42" h Corner Vertical Extrusion
22	2	42" h Corner Vertical Extrusion
23	2	42" h Corner Vertical Extrusion
24	8	13" w Horizontal Extrusion
25	8	10" w Horizontal Extrusion

- Steps:
- 1) Attach lower horizontals between verticals.
 - 2) Attach door to vertical [23]. Refer to *Door Attachment* detail.
 - 3) Slide infills between verticals as shown.
 - 4) Attach upper horizontals between verticals.
 - 5) Velcro attach shelf supports to inside of assembled pedestal.
 - 6) Place shelf atop shelf supports.
 - 7) Place counter atop assembled pedestal.

