
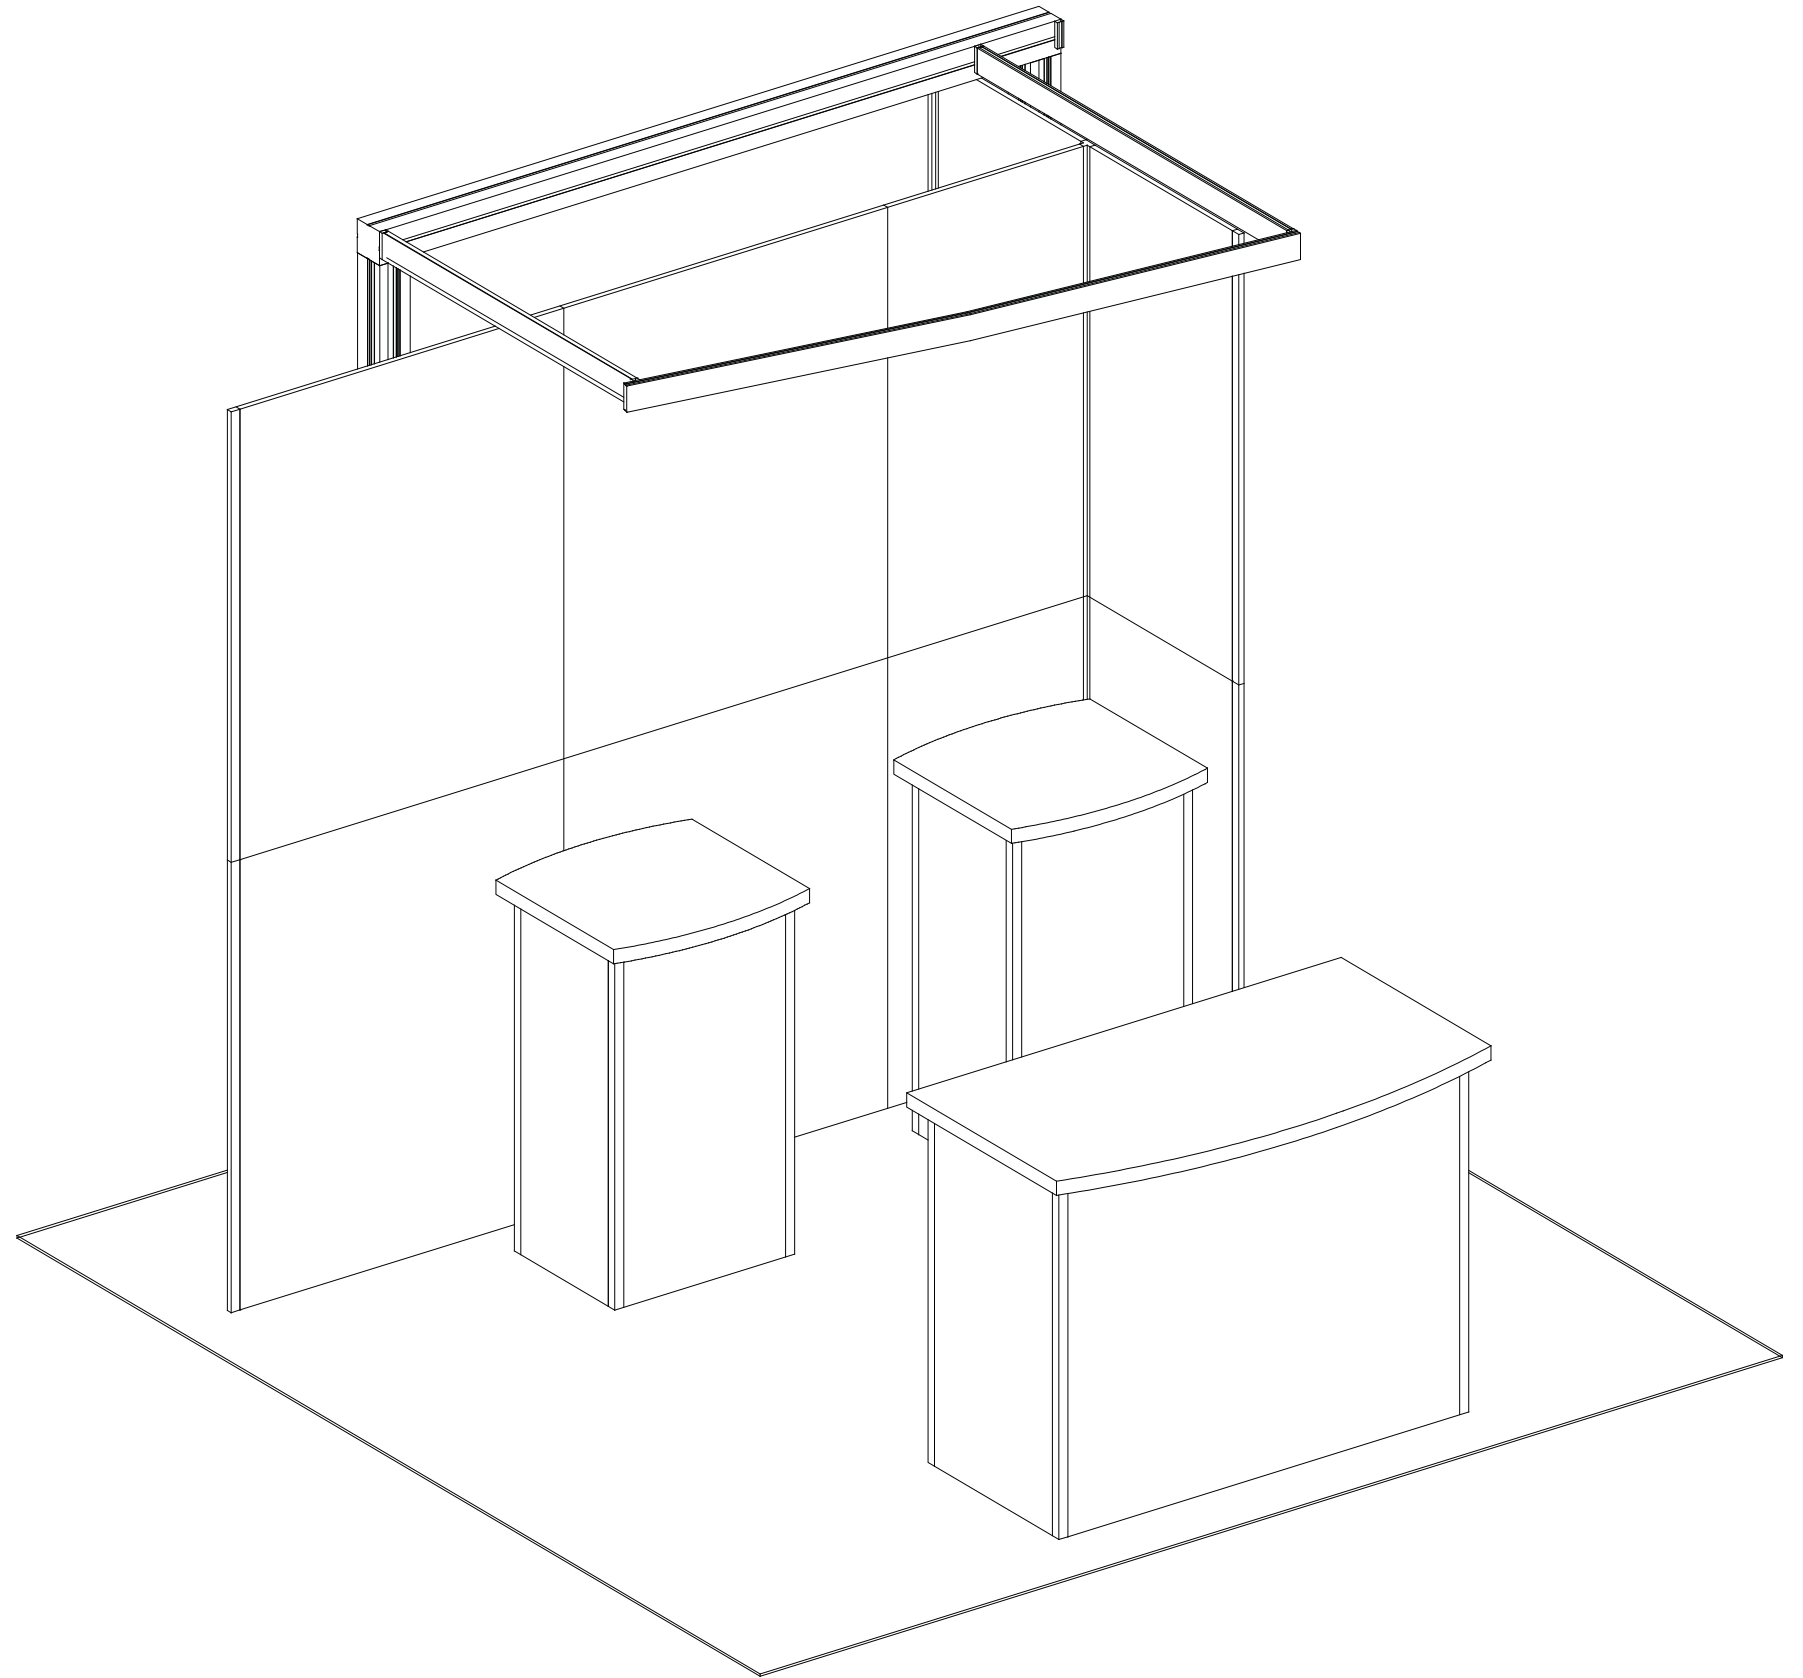


euro It | HYBRIDS

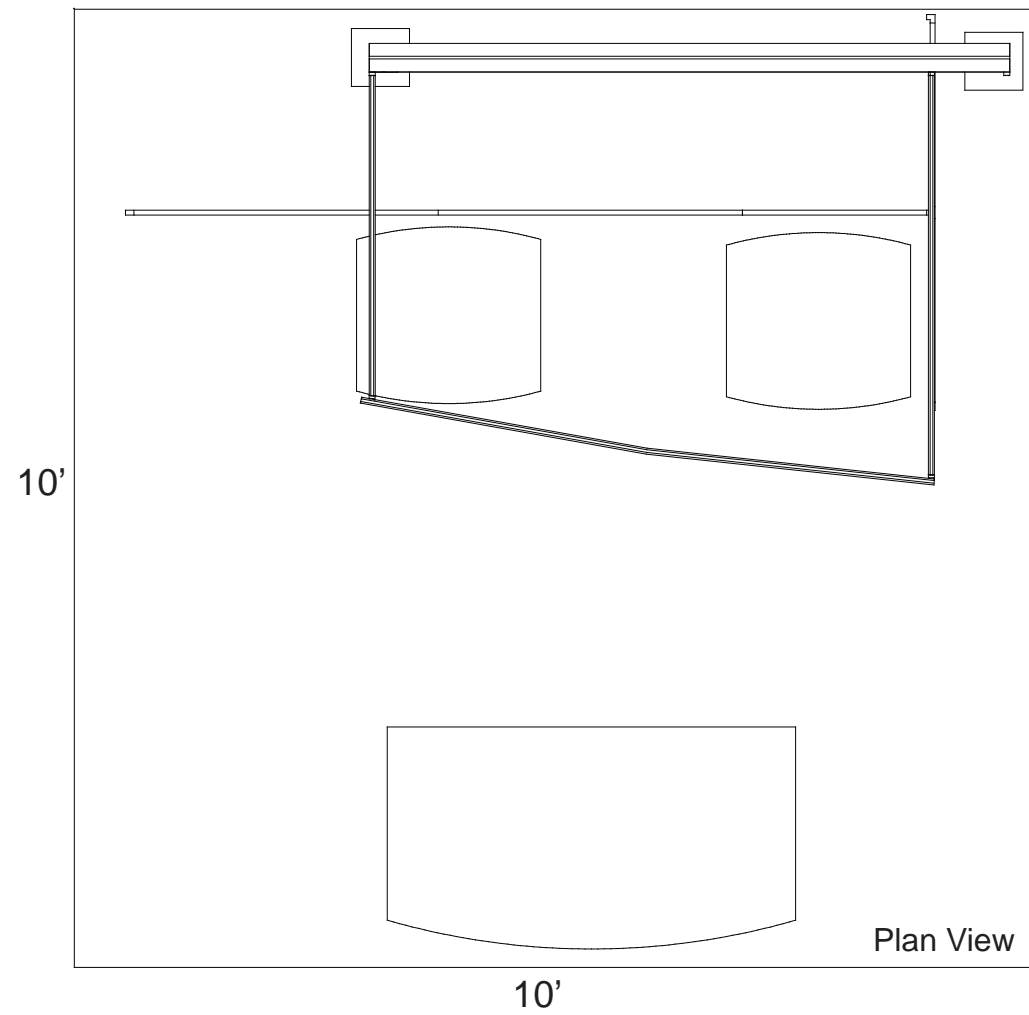

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

euro lt | HYBRIDS

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.


General Setup Instructions for Extrusion System




Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

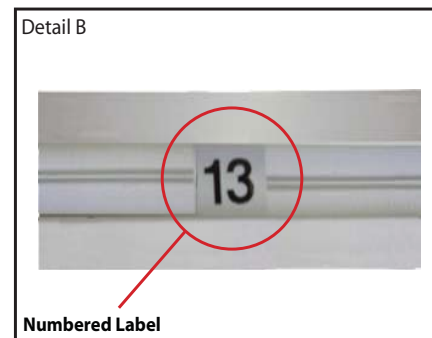


Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.

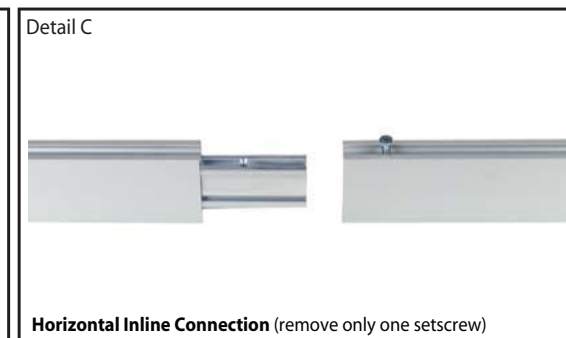

Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

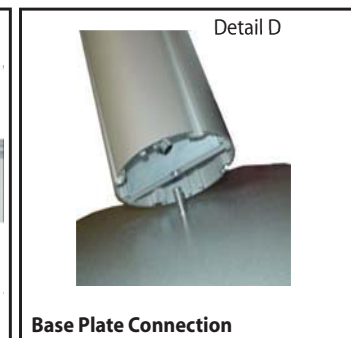


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

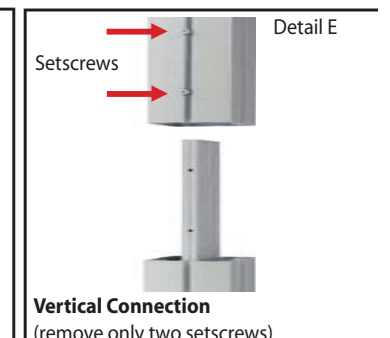


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.


Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

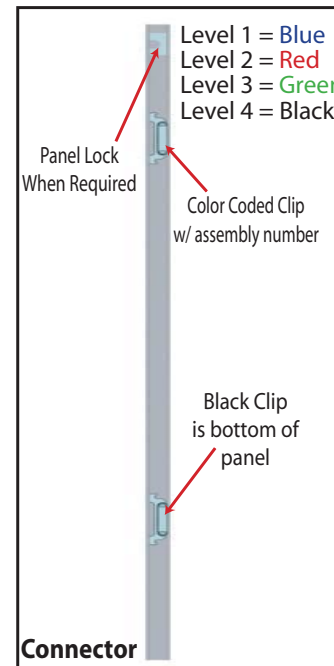


Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

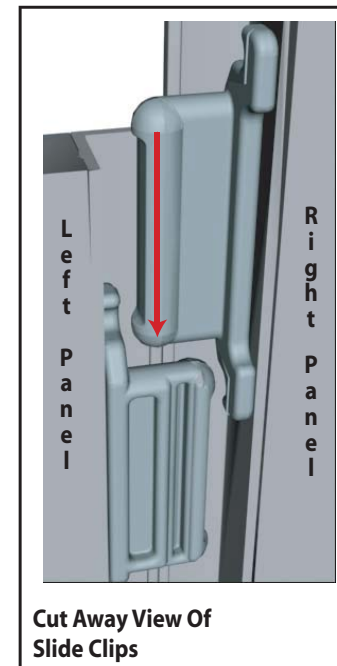

Components connect together by aligning them and sliding downward connecting clips together.

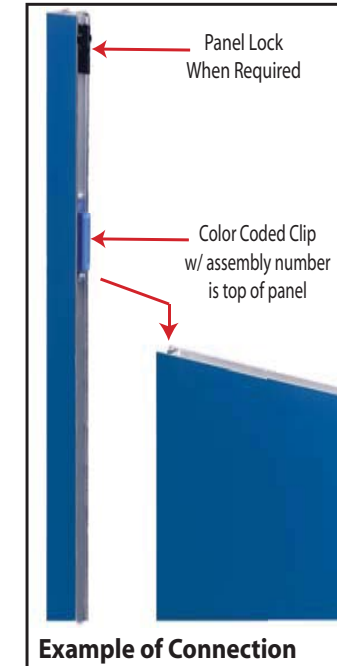

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

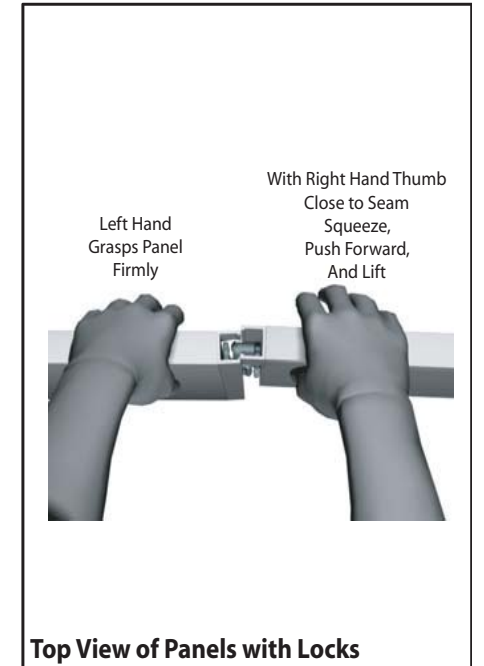


The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Item Number	Description
3	23" w x 47.5" h Flat Panel
11	38" w x 47.5" h Flat Panel
12	47.5" h End Cap
14	47.5" h 90° Connector
15	23" w x 47.5" h Flat Panel
22	47.5" h T Connector
23	38" w x 47.5" h Flat Panel
24	47.5" h End Cap
51	23" w x 47.5" h Flat Panel

Steps:
 Connect panels together in order starting with # 12*
 as shown in illustrations.

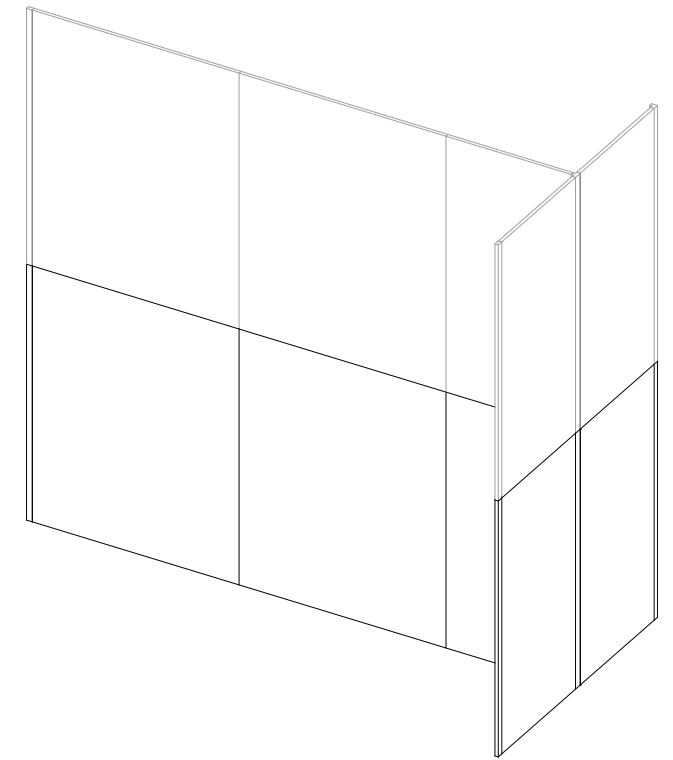


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Item Number	Description
3	23"w x 47.5"h Flat Panel
11	38"w x 47.5"h Flat Panel
12	47.5"h End Cap
14	47.5"h 90° Connector
15	23"w x 47.5"h Flat Panel
22	47.5"h T Connector
23	38"w x 47.5"h Flat Panel
24	47.5"h End Cap
51	23"w x 47.5"h Flat Panel

Steps:
 Connect panels together in order starting with # 12*
 as shown in illustrations.

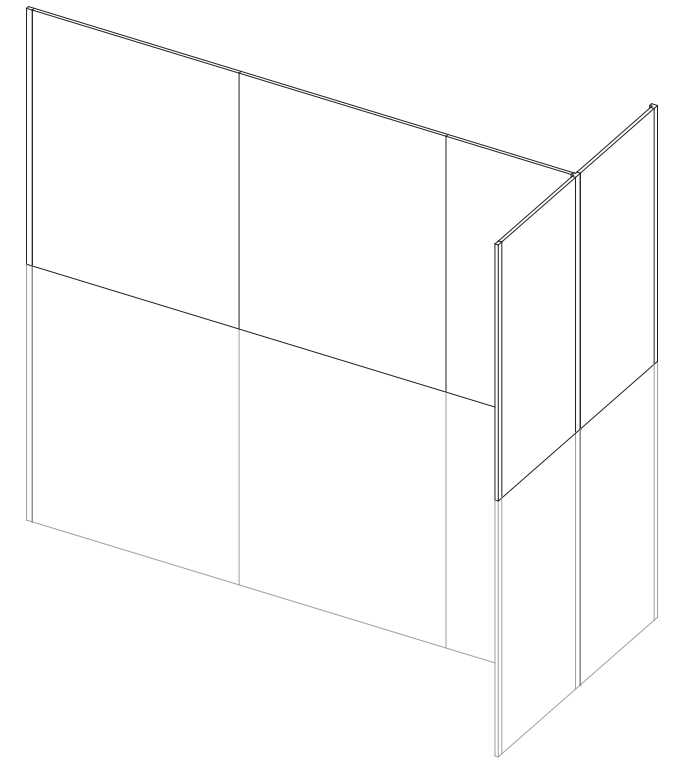



WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Item Number	Qty.	Description
1	1	80" Square Extrusion
8	1	40.124" Extrusion
9	1	50" Extrusion
10A	1	72.427" Curved Extrusion
11	2	Square Base Plate
12	2	94.75"h Vertical Square Extrusion

Steps:

- 1) Assemble custom canopy pieces together [8 and 9 between 1 and 10A].
- 2) Attach vertical extrusions [12] to base plates [11], see detail D on general info. page, and place vertical at locations indicated below.
- 3) Attach custom canopy structure atop vertical extrusions [12], set atop 2nd Level panels.



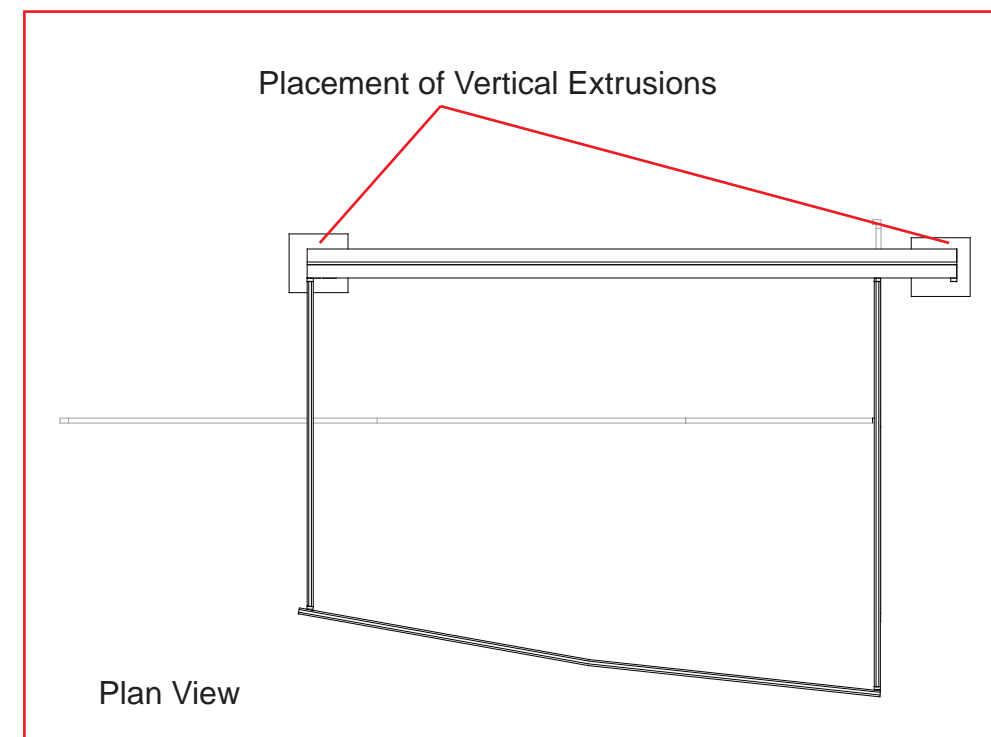
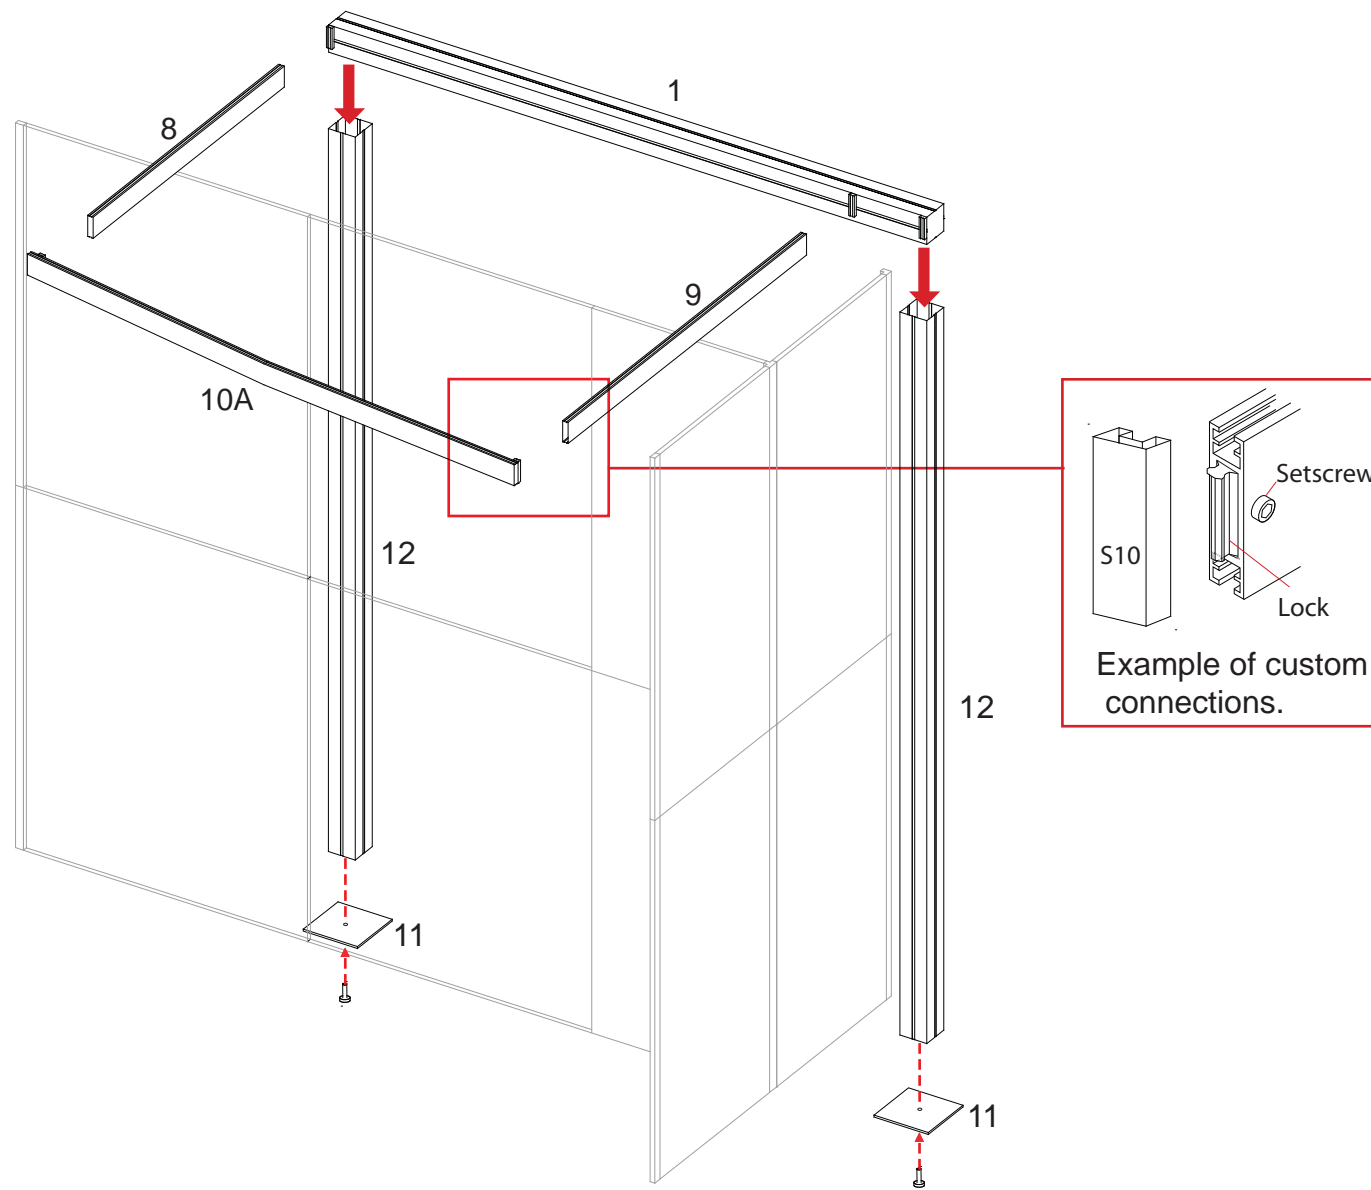


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item Number	Description	Item Number	Description	Item Number	Description
25	19"w x 38"h Flat Panel w/ Door	33	46"w x38"h Flat Panel	41	19"w x 38"h Flat Panel w/ Door
26	38"h 90° Connector	34	38"h 90° Connector	42	38"h 90° Connector
27	14.125"w x 38"h	35	19"w x 38"h Flat Panel	43	14.125"w x 38"h
28	38"h 90° Connector	36	38"h 90° Connector	44	38"h 90° Connector
29	19"w x 38"h Flat Panel	37	46"w x38"h Flat Panel	45	19"w x 38"h Flat Panel
30	38"h 90° Connector	38	38"h 90° Connector	46	38"h 90° Connector
31	14.125"w x 38"h	39	19"w x 38"h Flat Panel	47	14.125"w x 38"h
32	38"h 90° Connector	40	38"h 90° Connector	48	38"h 90° Connector

Steps:
 Connect panels together in order starting with # 25*
 as shown in illustrations.

Place Internal shelves into assembled pedestals atop Velcroed supports.

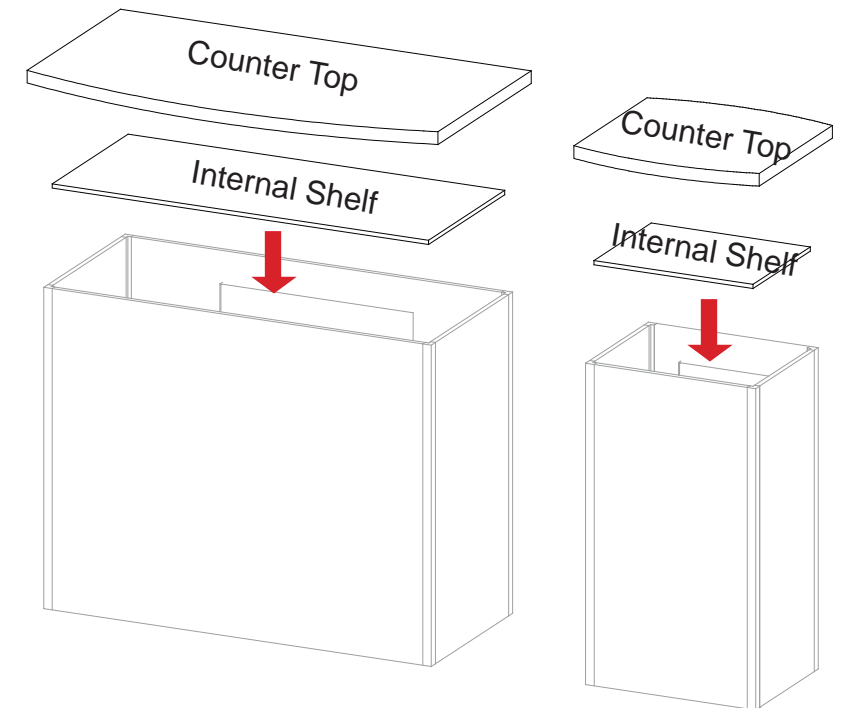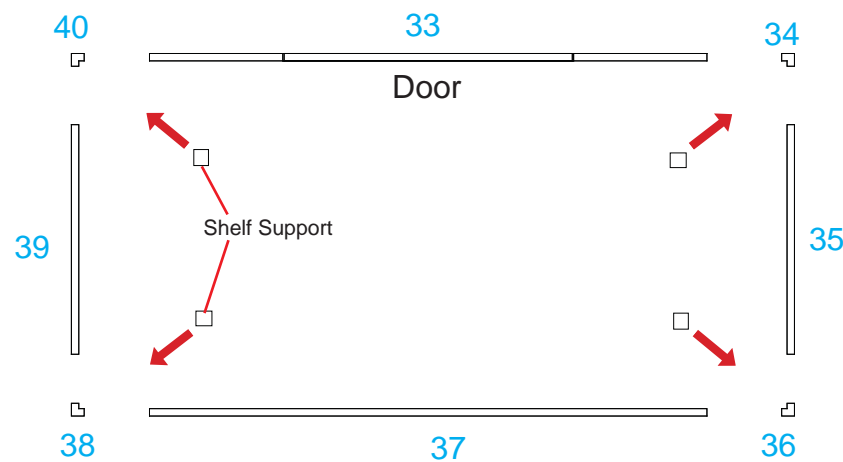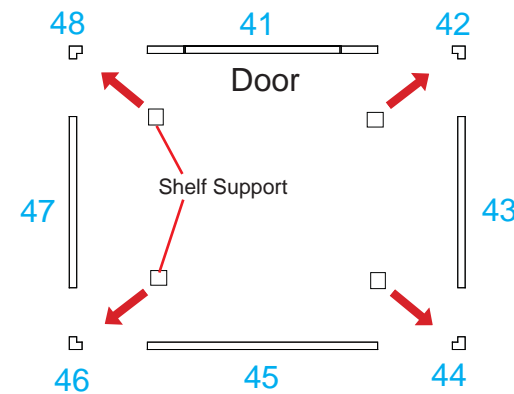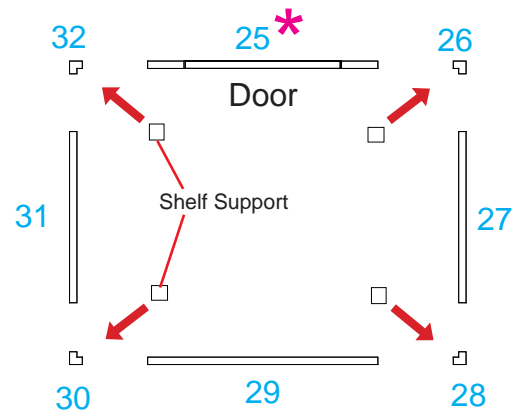

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING