
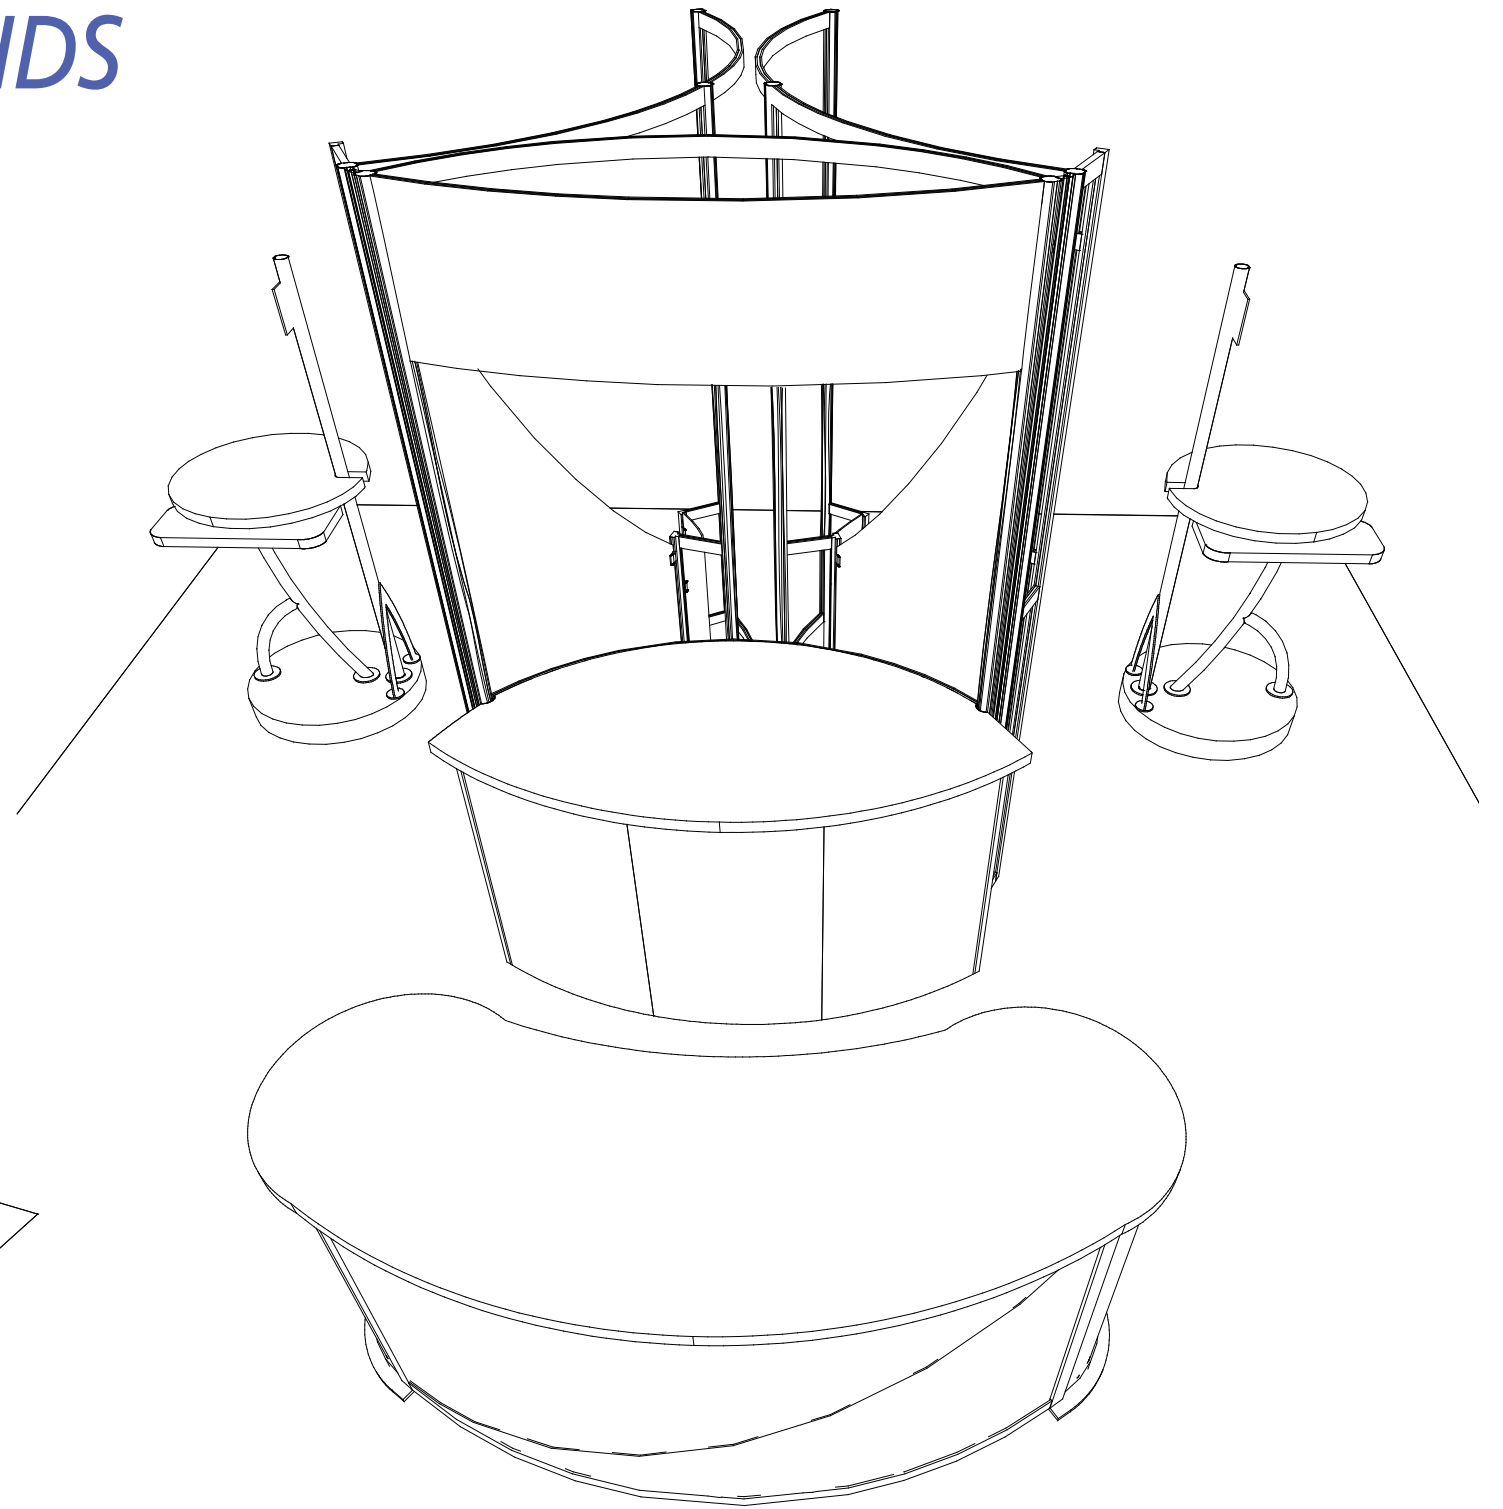
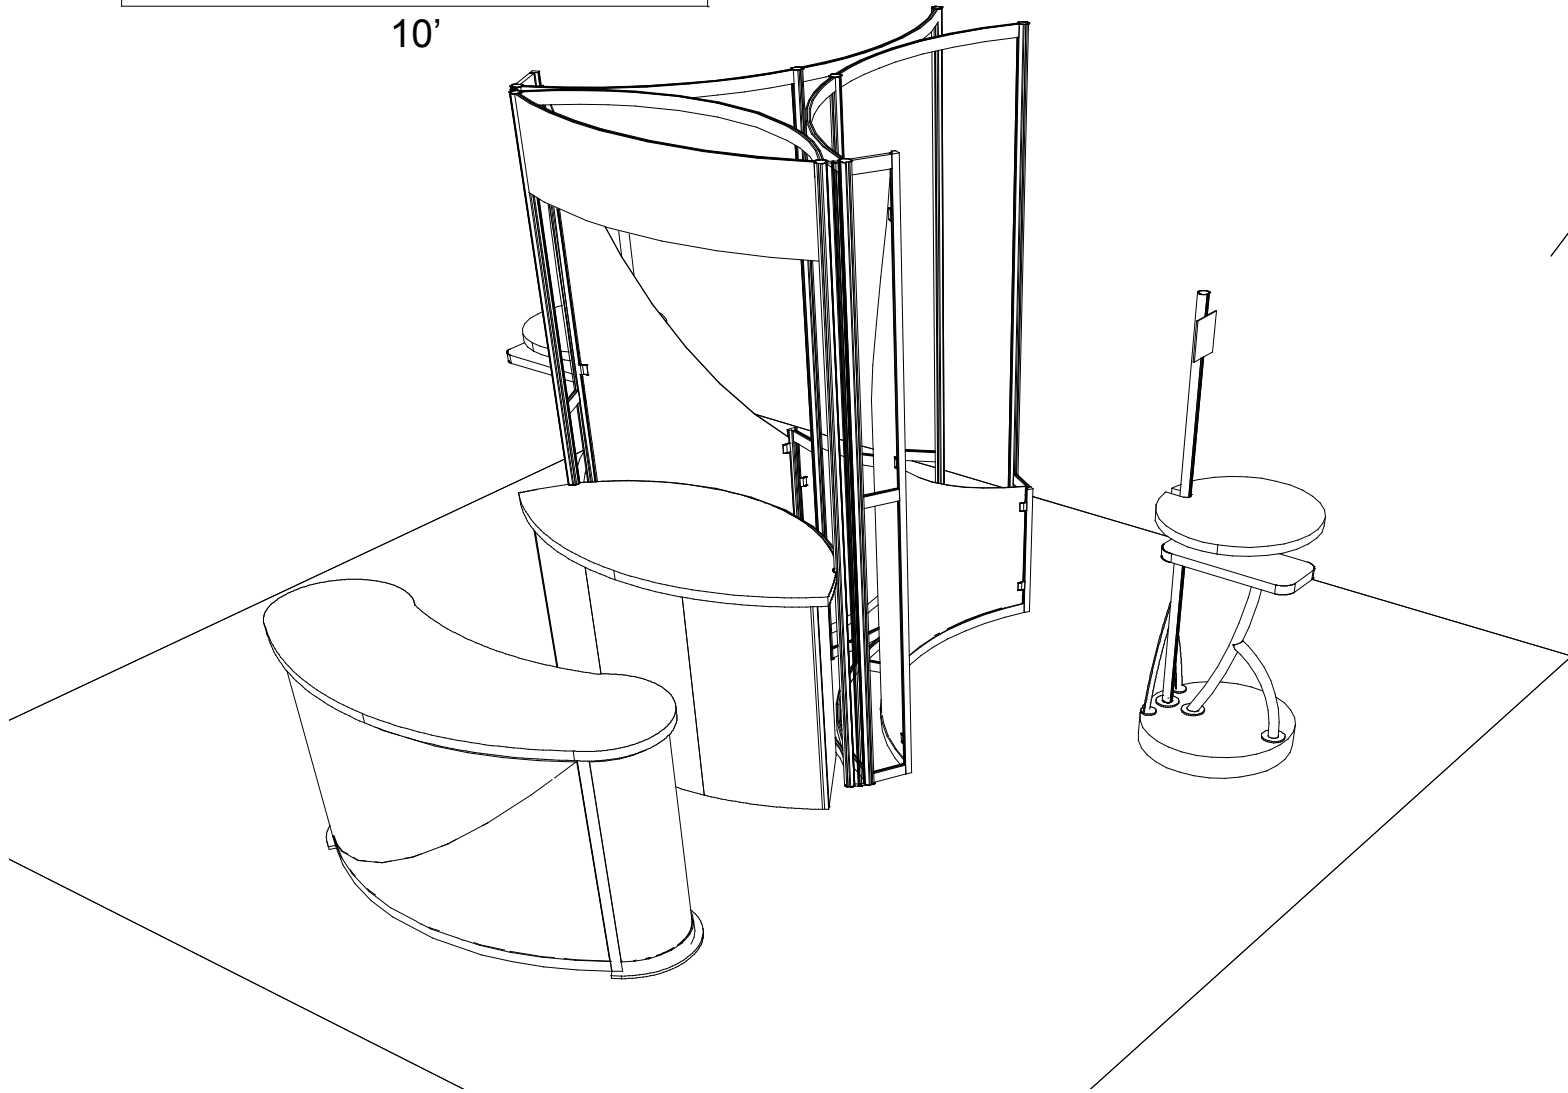


euro It | *HYBRIDS*

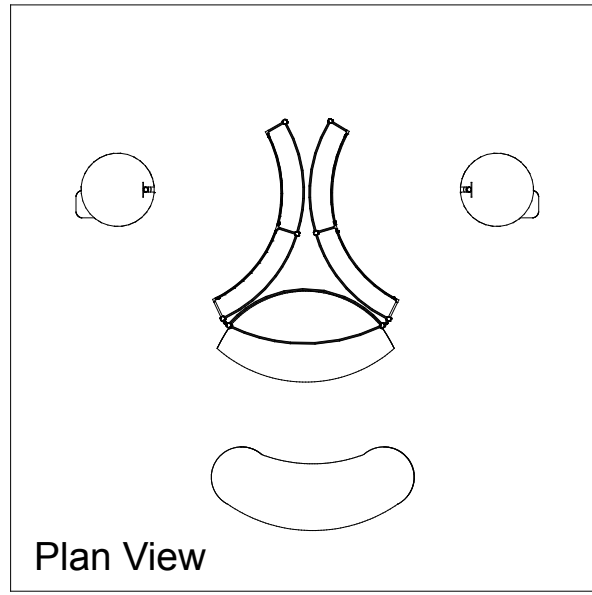

euro It | HYBRIDS

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.


General Setup Instructions for Extrusion System



Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

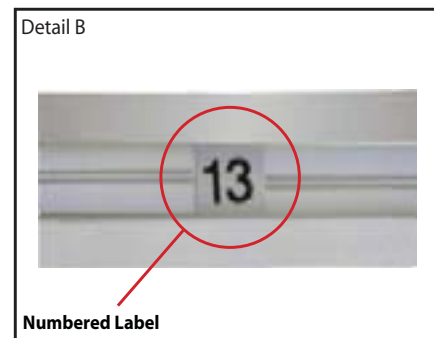


Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.



Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

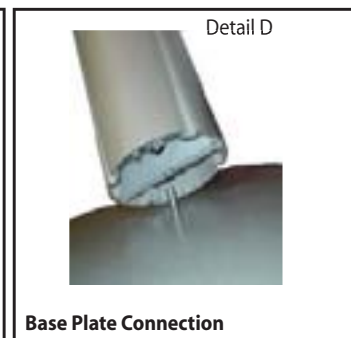


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

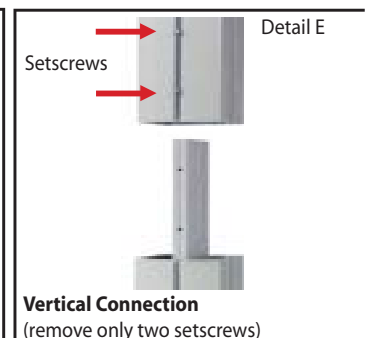


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.


Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

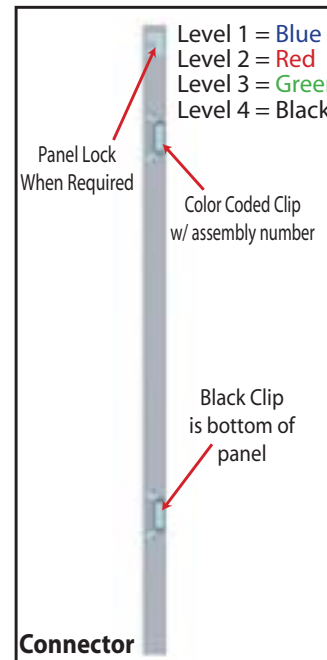


Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

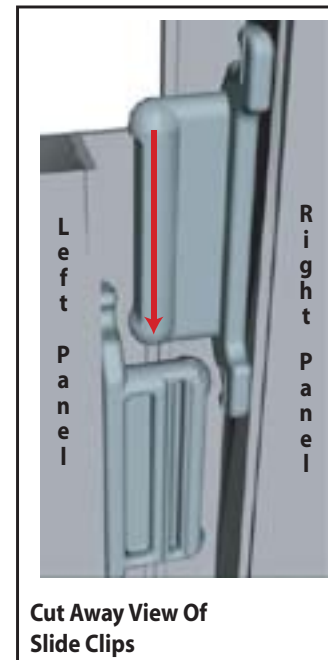

Components connect together by aligning them and sliding downward connecting clips together.

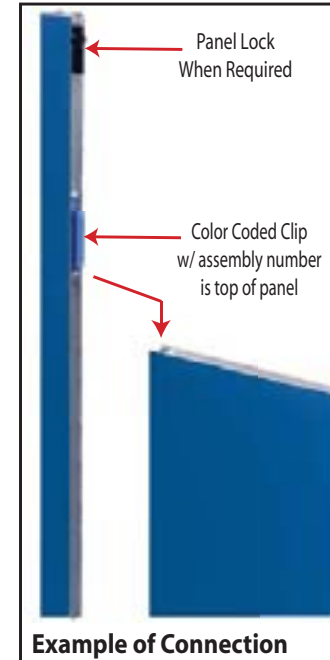

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

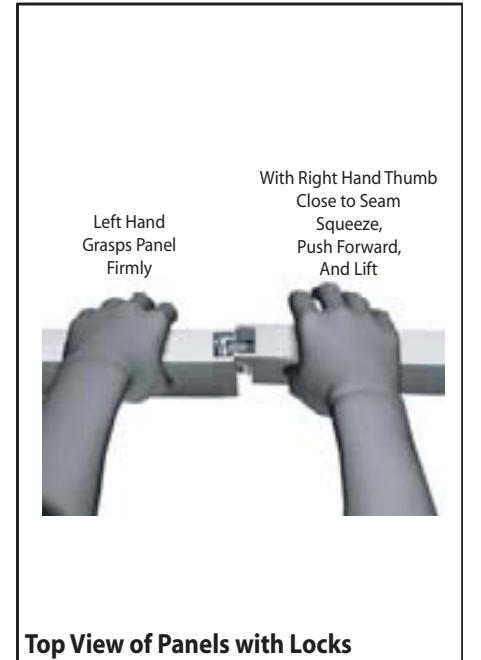


The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.

| Item | Description |
|------|------------------------------------|
| 9 | Upper Horizontal Formed Extrusion |
| 16 | Middle Horizontal Formed Extrusion |
| 17 | Lower Horizontal Formed Extrusion |

Steps:

1) Attach horizontal curved extrusions [9, 16, & 17] between verticals [54 & 55] as shown.

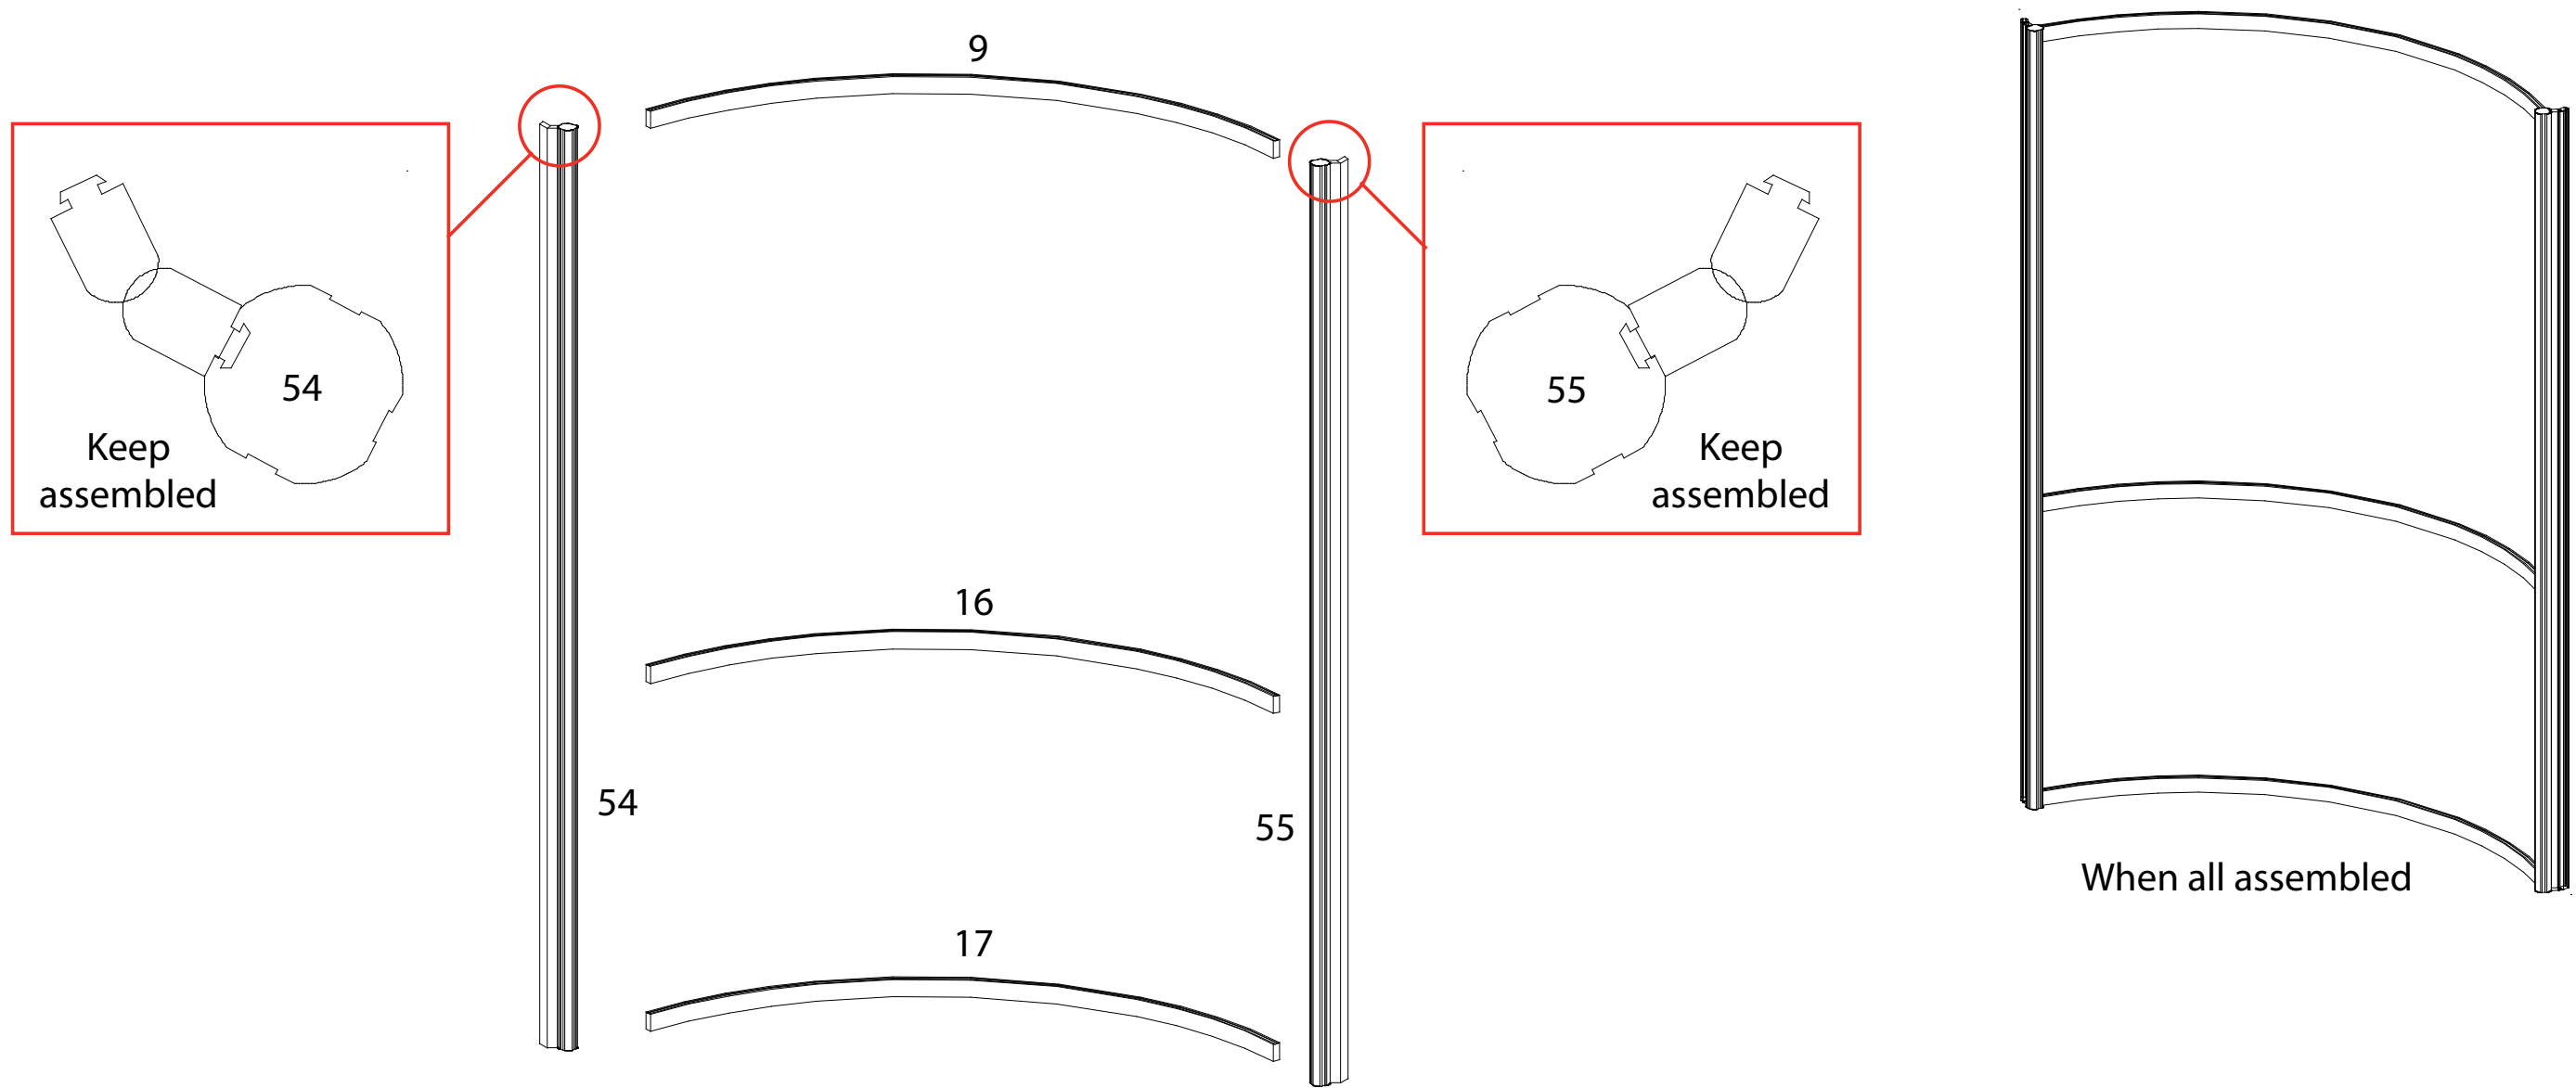


866.652.2100

| Item | Description | Item | Description |
|------|--------------------------|------|--------------------------|
| 23 | 8"w Horizontal Extrusion | 23 | 8"w Horizontal Extrusion |
| 24 | 8"w Horizontal Extrusion | 24 | 8"w Horizontal Extrusion |
| 25 | Vertical Extrusion | 25 | Vertical Extrusion |
| 26 | 8"w Horizontal Extrusion | 26 | 8"w Horizontal Extrusion |
| 27 | 8"w Horizontal Extrusion | 27 | 8"w Horizontal Extrusion |
| 28 | Vertical Extrusion | 28 | Vertical Extrusion |
| 29 | 8"w Horizontal Extrusion | 29 | 8"w Horizontal Extrusion |
| 31 | 8"w Horizontal Extrusion | 31 | 8"w Horizontal Extrusion |
| 33 | 8"w Horizontal Extrusion | 33 | 8"w Horizontal Extrusion |


Steps:

- 1) Attach horizontal curved extrusions [8, 7, 20, & 22] between verticals [4, 5, & 6] as shown.
- 2) Attach upper vertical [30] to lower vertical [32].
- 3) Attach horizontals [29, 31, & 33] between vertical extrusion [4] and assembly [30/32].
- 4) Attach horizontals [23 & 24] to vertical [25].
- 5) Attach horizontals [26 & 27] to vertical [28].
- 6) Attach horizontals [19 & 21] between verticals [30/32, 28, & 25].
- 7) Insert green acrylic using A10 to secure to vertical extrusions as shown in illustration.

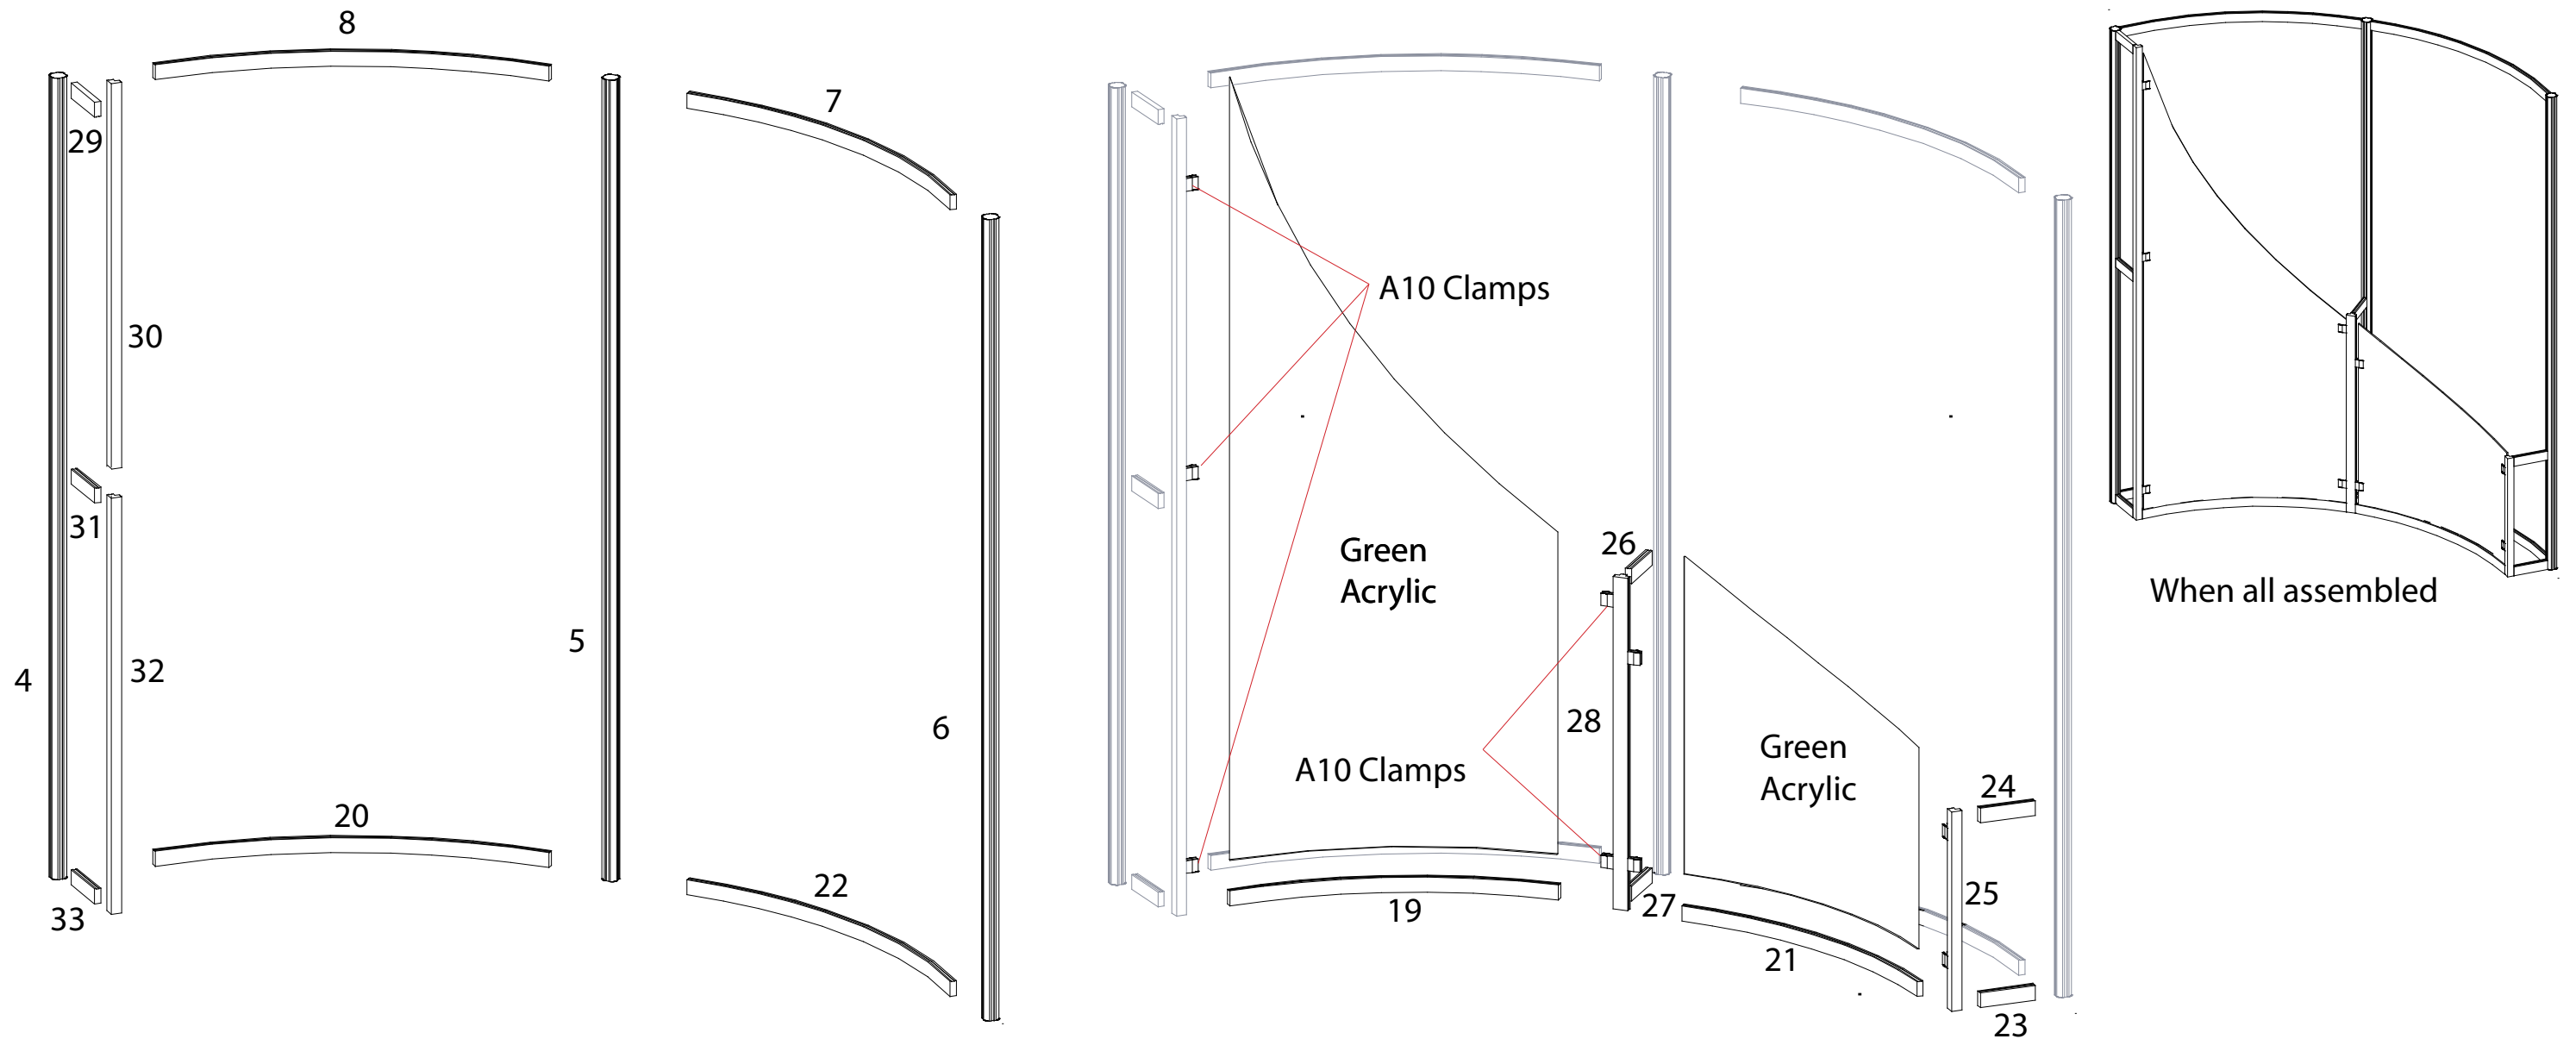

Steps:


- 1) Attach left and right wings to backwall.
- 2) Connect panels together as shown. Inset panels into backwall.
- 3) Set counter atop assembled panels and extrusion on backwall.
- 4) Attach header sign using A10 Clamps.

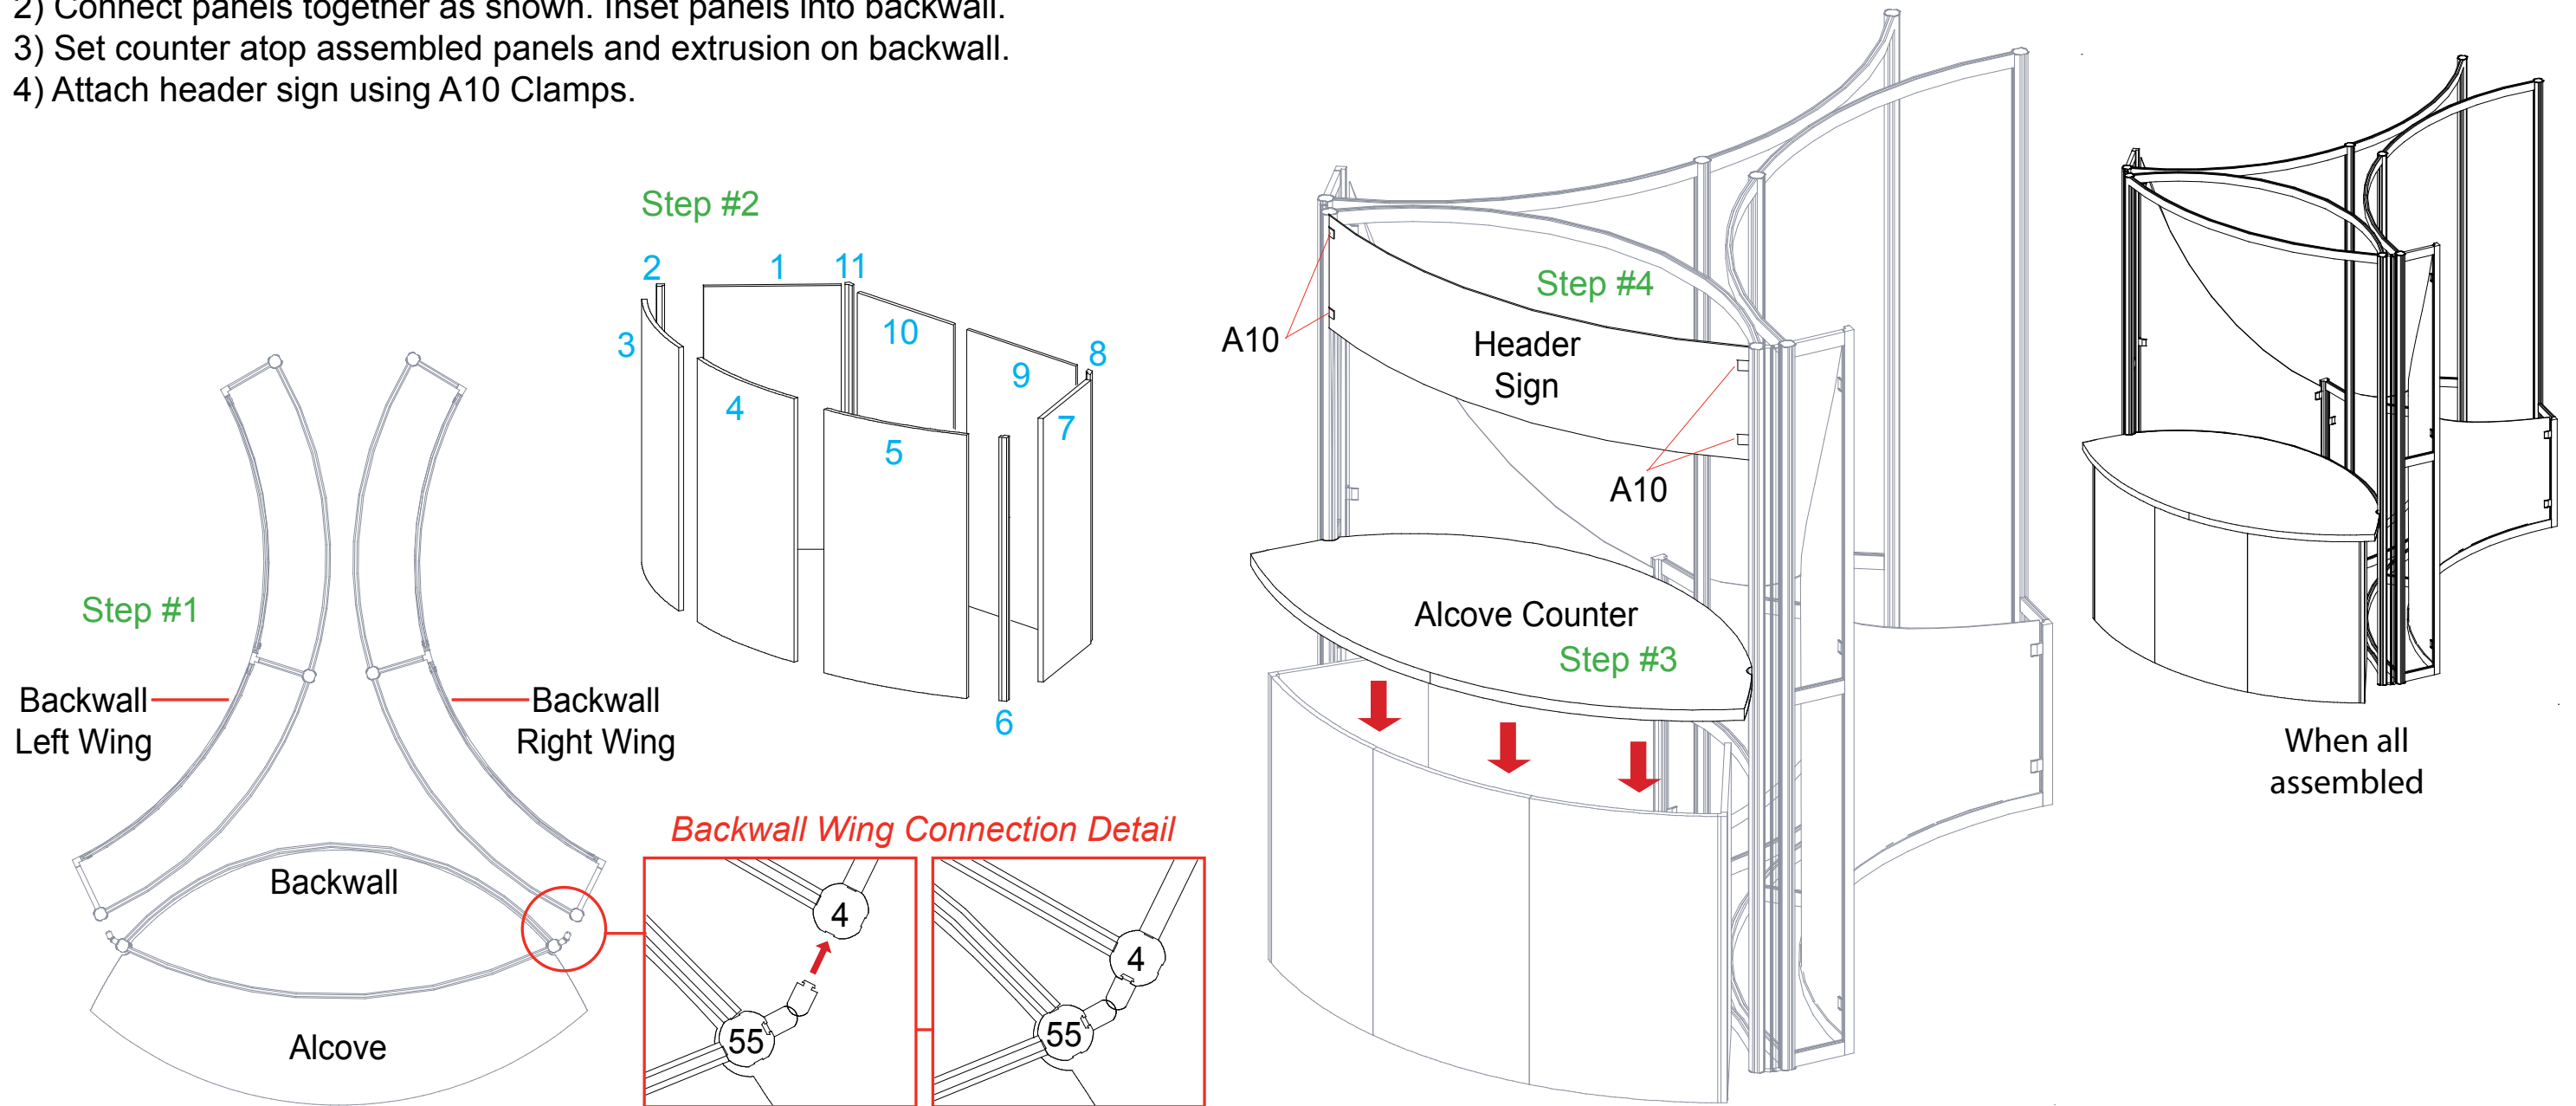



866.652.2100

Steps:

- 1) Connect extrusion #51 to extrusion on half round sections w/base plates #52 and #53.
- 2) Insert sentra panel and green acrylic piece into extrusion.
- 3) Connect extrusion #50 to extrusion on half round sections w/base plate #52 and #53.
- 4) Insert internal shelf into assembled pedestal.
- 5) Place counter atop assembled pedestal.

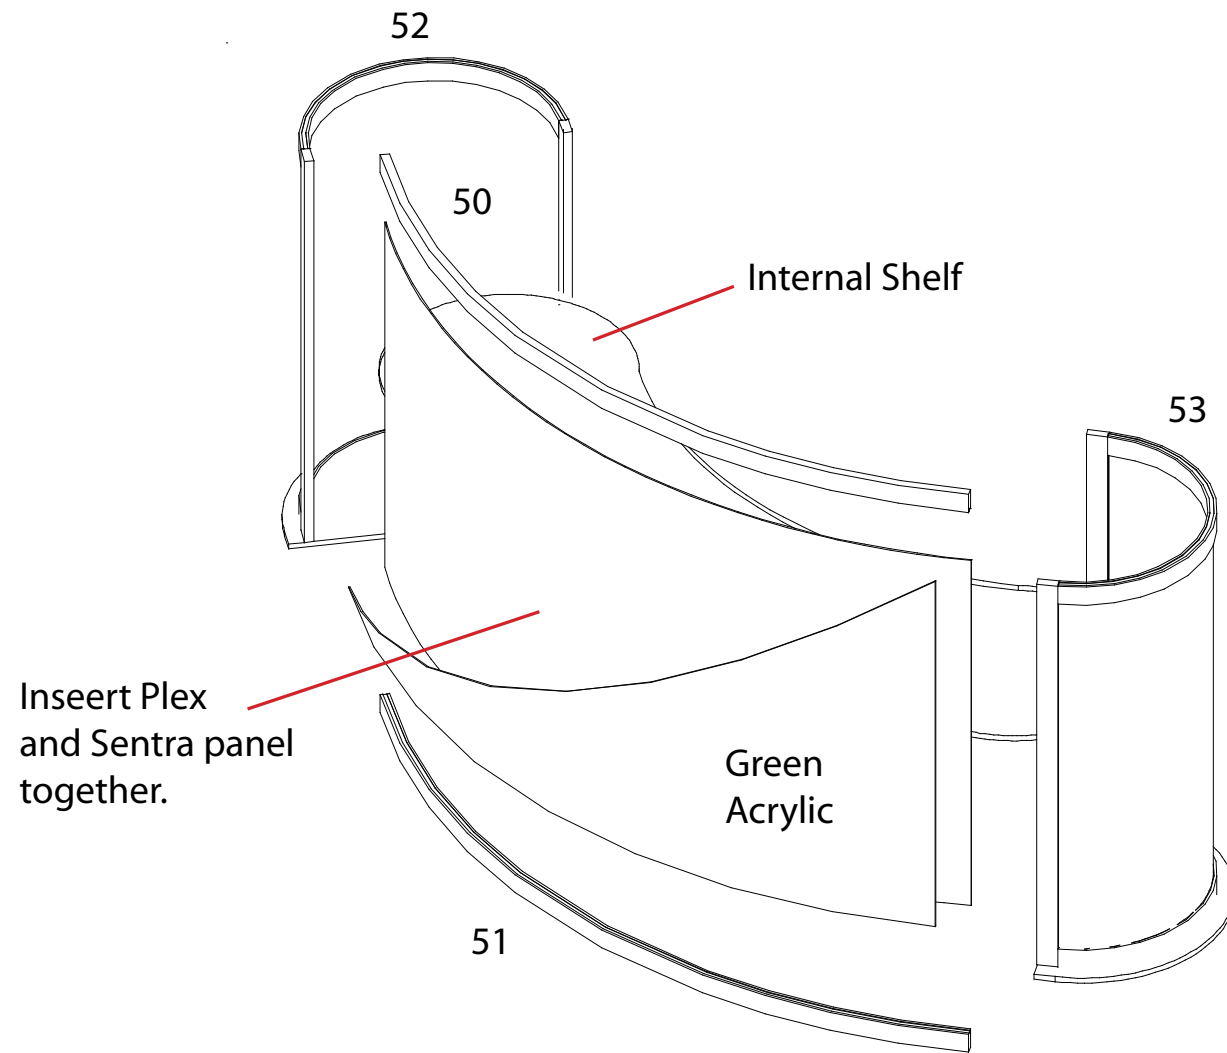

Place Counter atop assembled Pedestal.

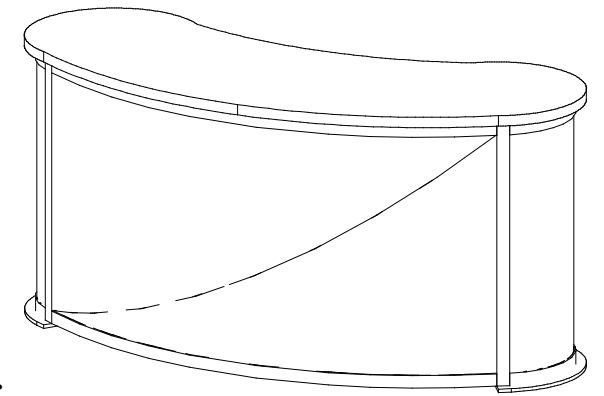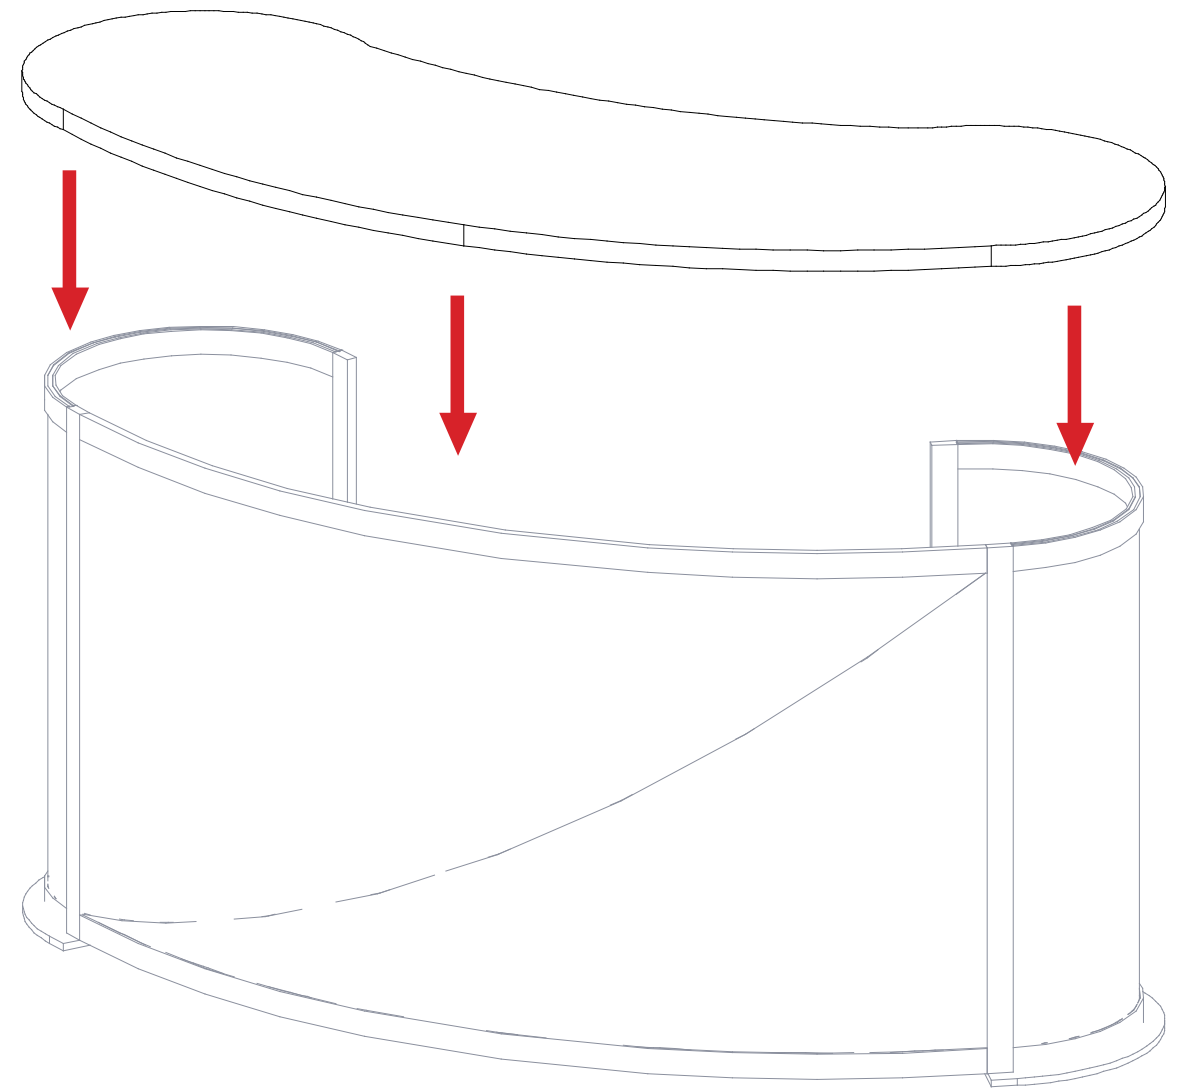

866.652.2100


Description

- Laminated Wood Base
- 68" Vertical Extrusion
- Curved Extrusion Leg Support
- 13.845" Horizontal Support
- 13.725" Horizontal Support
- Shelf
- Round Counter Top

Steps:

NOTE: Do not disassemble the blue portion shown, this should package as is.


- 1) Connect Curved Extrusion Leg Support and vertical [blue section] to round base using the wing nuts to secure from below.
- 2) Attach back angled support extrusion to wood base, secure to base and vertical post with supplied hardware.
- 3) Attach counter top and shelf to assembled workstation.
- 4) Attach monitor mount to vertical extrusion as shown.

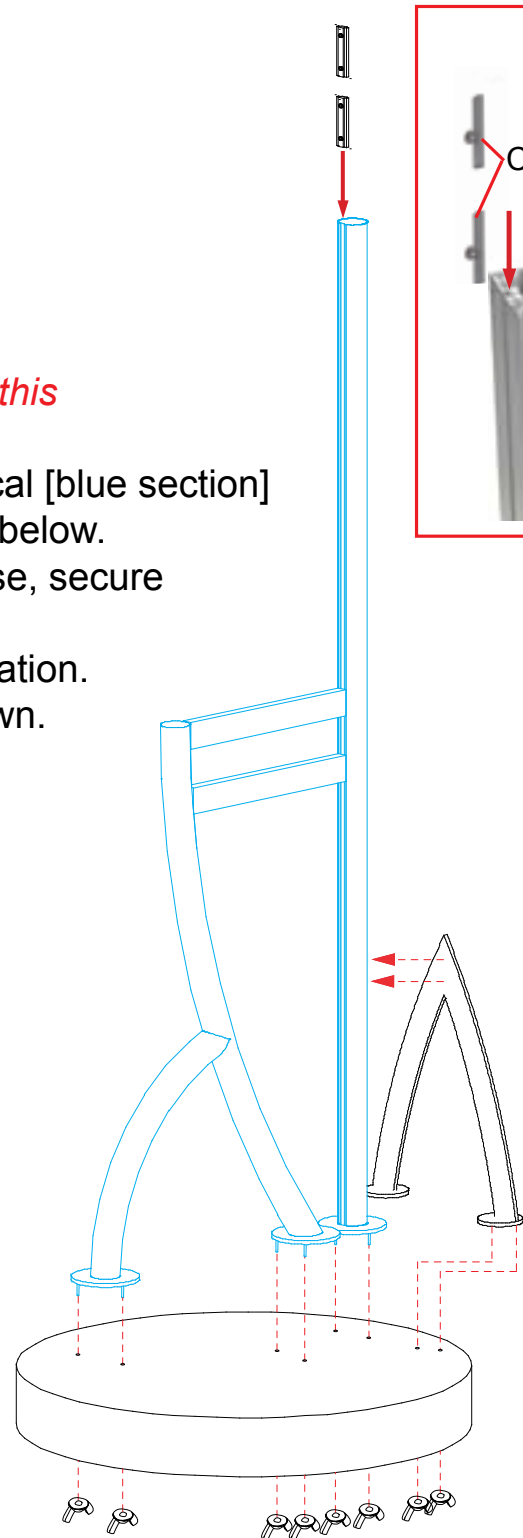


Example of Monitor Mount Plate

Insert connectors into groove of extrusion. Then attach mount by tightening screws on frontside of monitor mount

Place Counter atop Horizontal Support, then secure with Hardware Provided to Vertical Assembly.

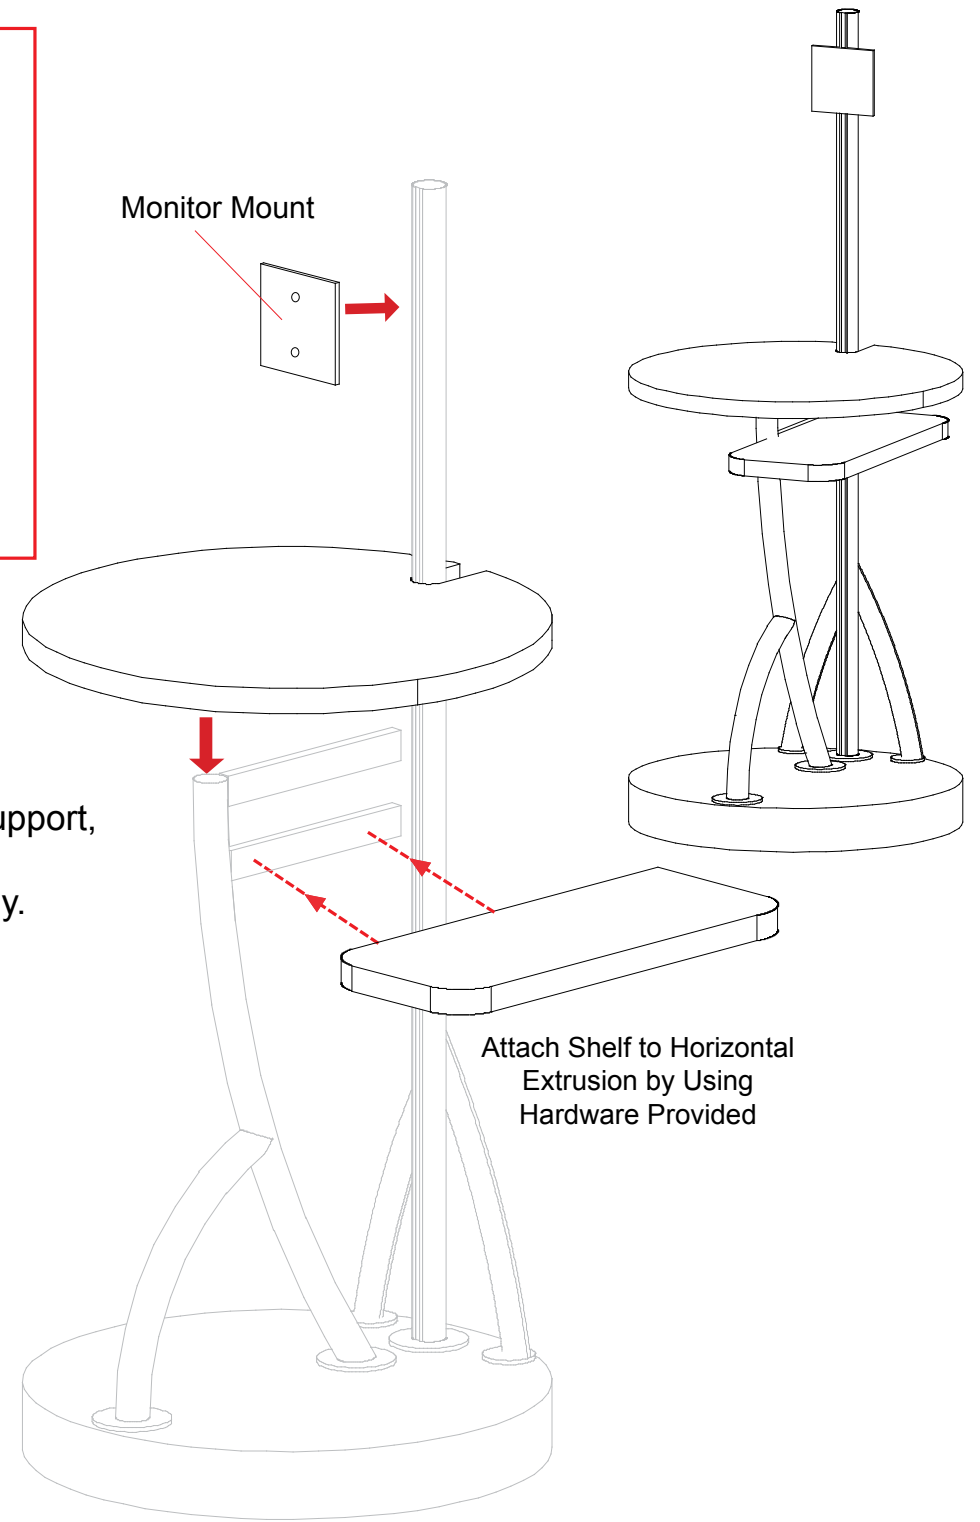

Attach Shelf to Horizontal Extrusion by Using Hardware Provided

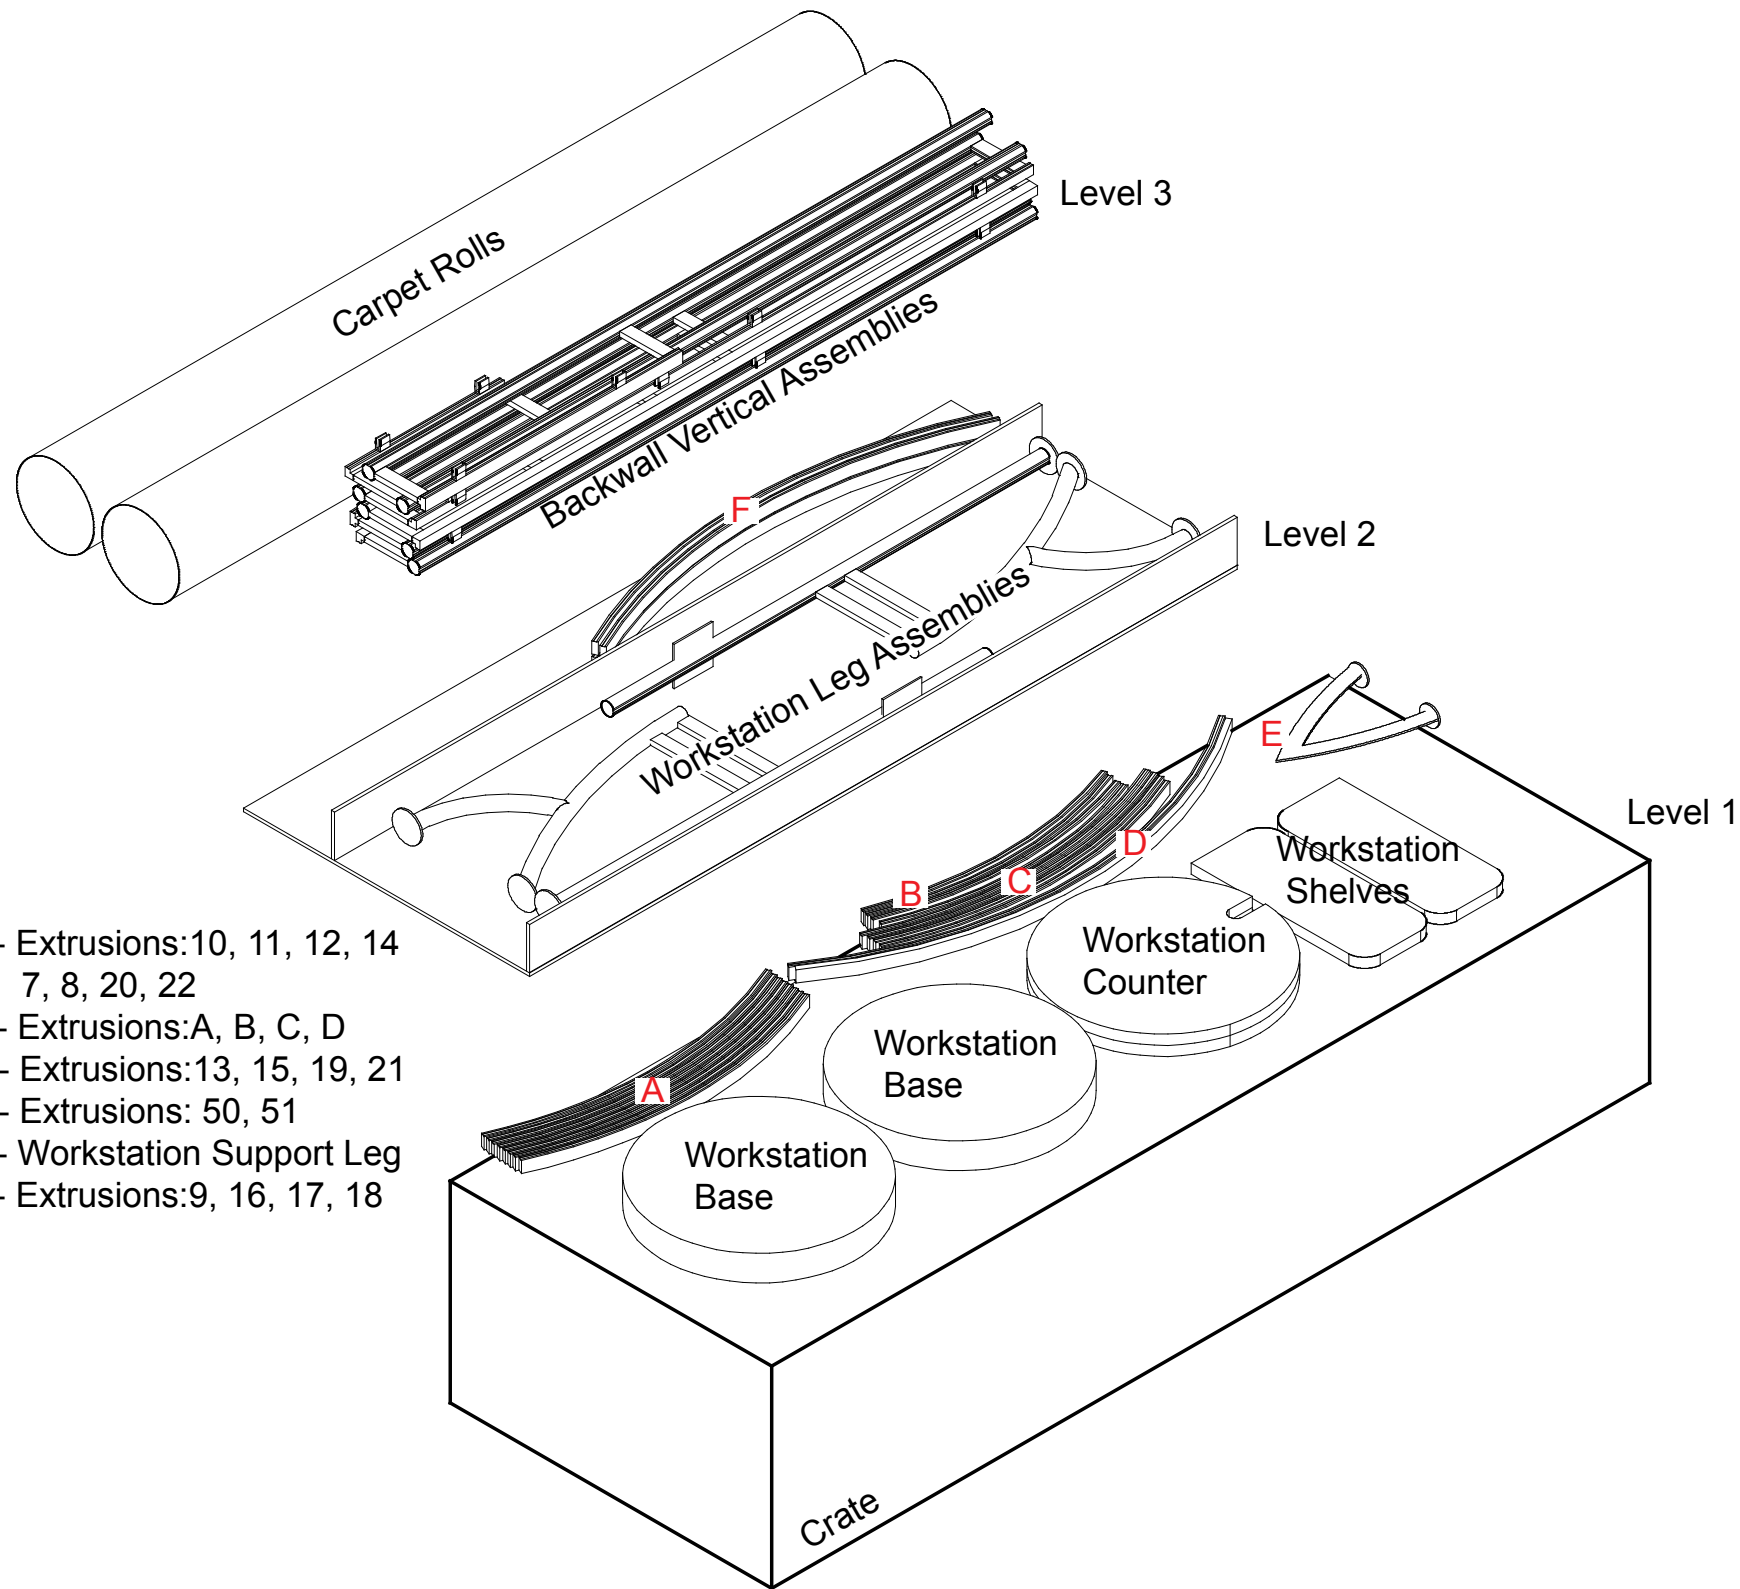

Level 3




Level 2



Level 1

Kidney Shaped Counter Top
Backwall Pedestal Counter Top
and Backwall Pedestal Shelf

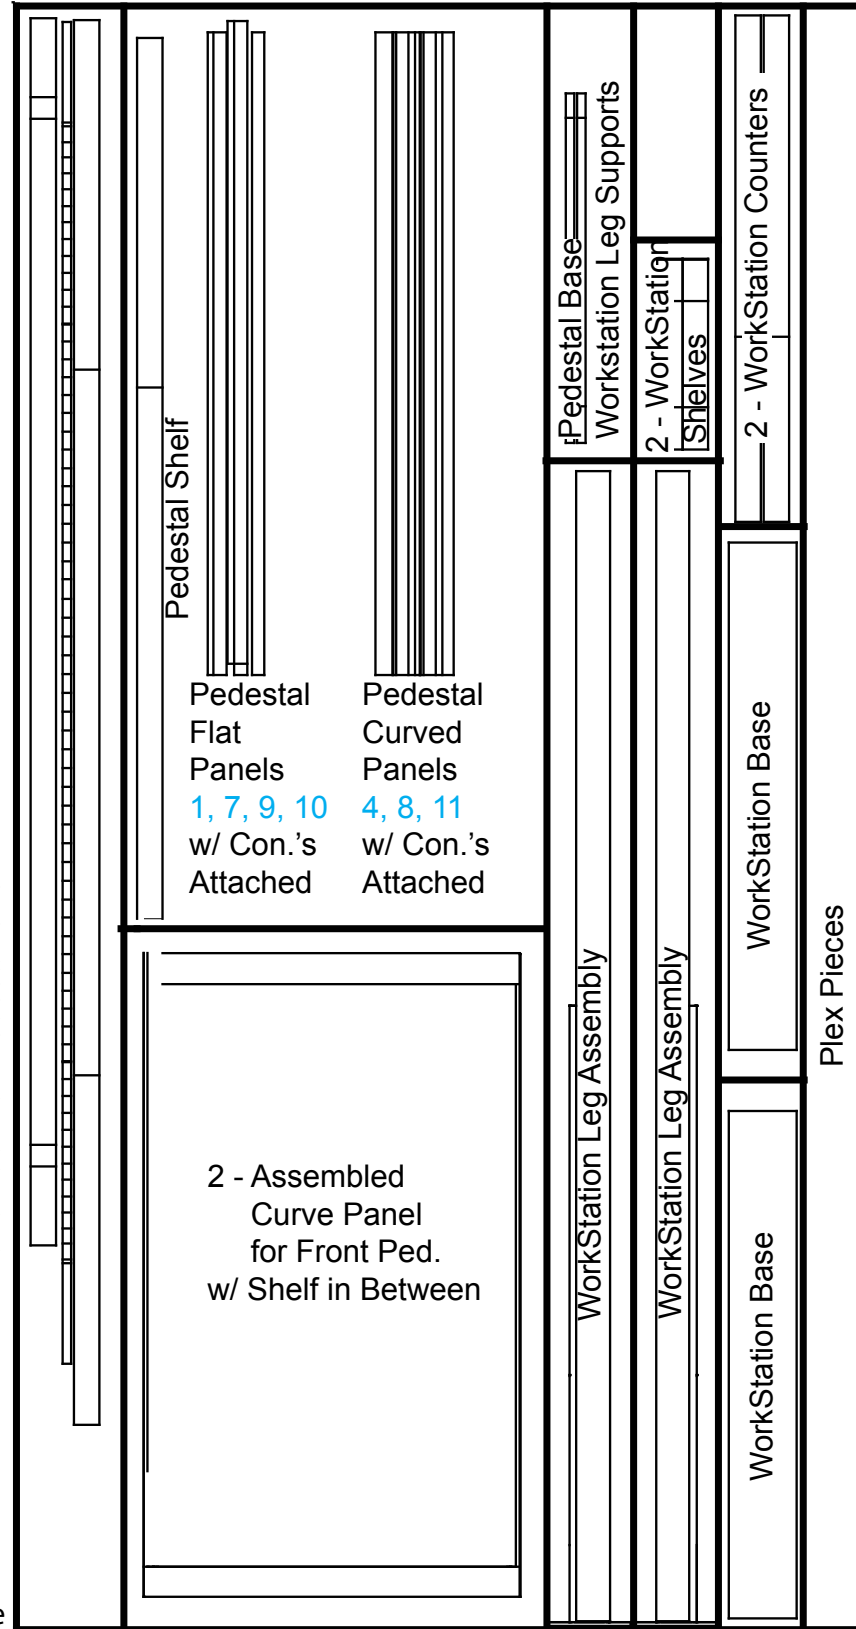

Top View of Crate

