
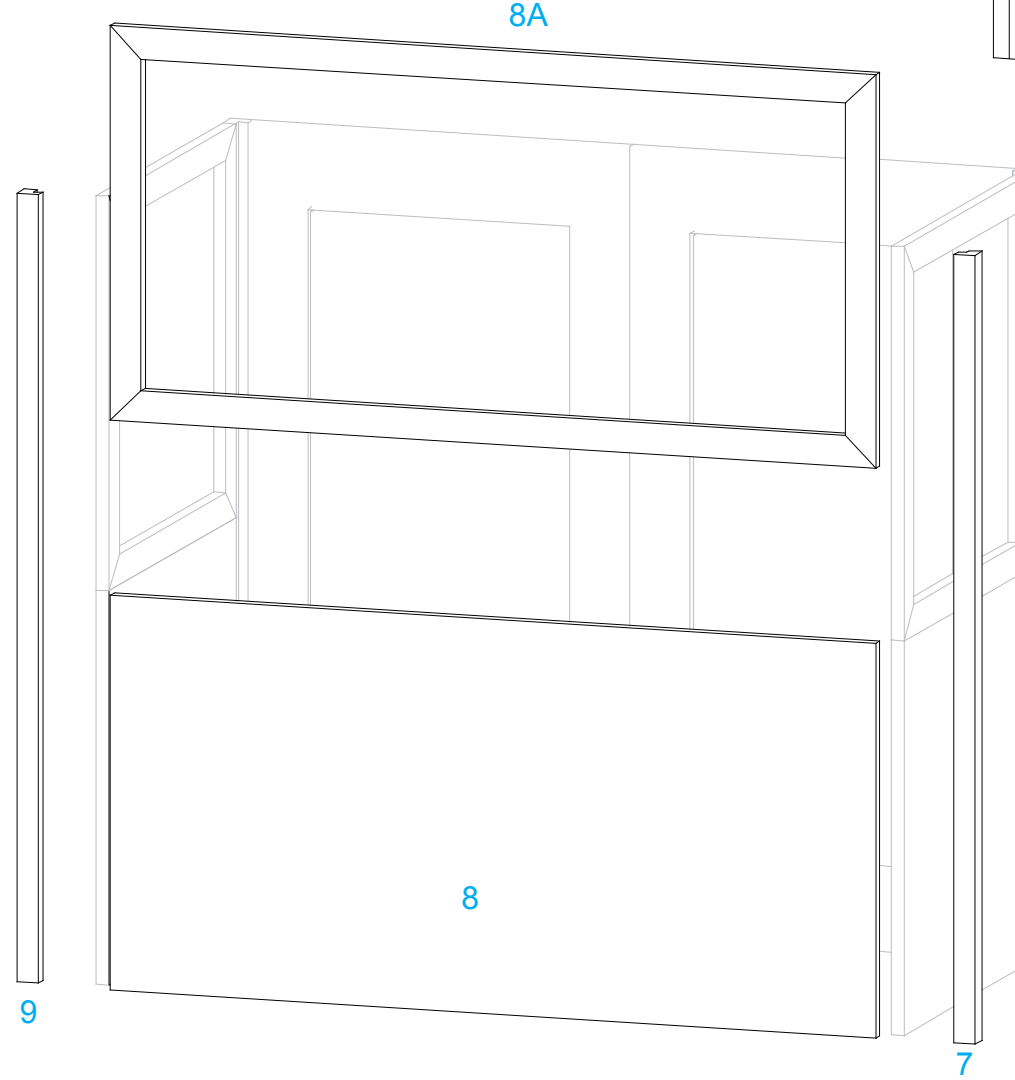
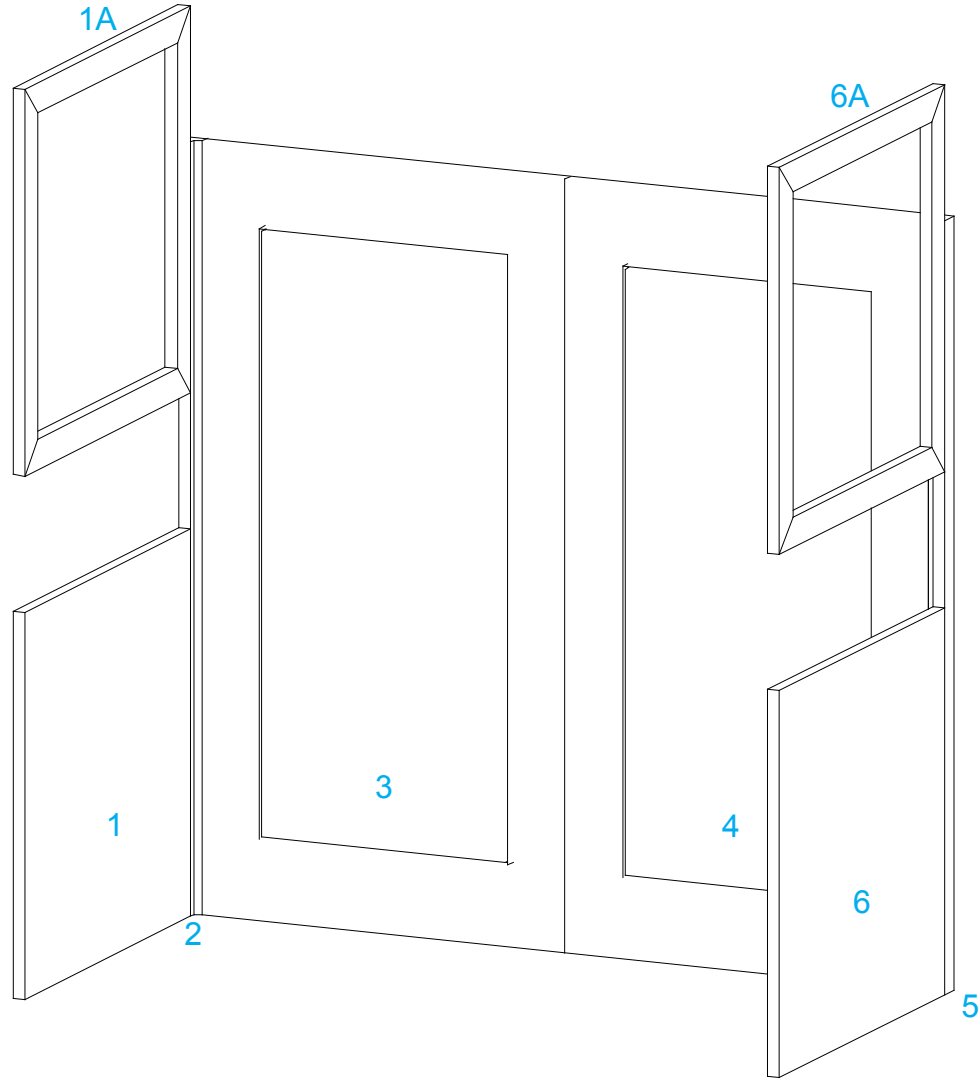


euro It | HYBRIDS

Item Number	Description
1	19" w x 19" h Flat Panel
2	38" h 90° Connector
3	19" w x 38" h Flat Panel w/Door
4	19" w x 38" h Flat Panel w/Door
5	38" h 90° Connector
6	19" w x 19" h Flat Panel
7	38" h 90° Connector
8	38" w x 19" h Flat Panel
9	38" h 90° Connector

Item Number	Description
1A	19" w x 19" h Flat Window Panel
6A	19" w x 19" h Flat Window Panel
8A	38" w x 19" h Flat Window Panel

Steps:
 Assemble lower panels [1 thru 6] together in numerical order as shown in illustrations.
 Connect upper panels [1A and 6A] atop lower panels as shown.
 Finish assembly by connecting connector [7] and lower panel [8] to assembled portion. Place upper panel [8A] atop lower panel as shown. Then slide in and attach connector [9].

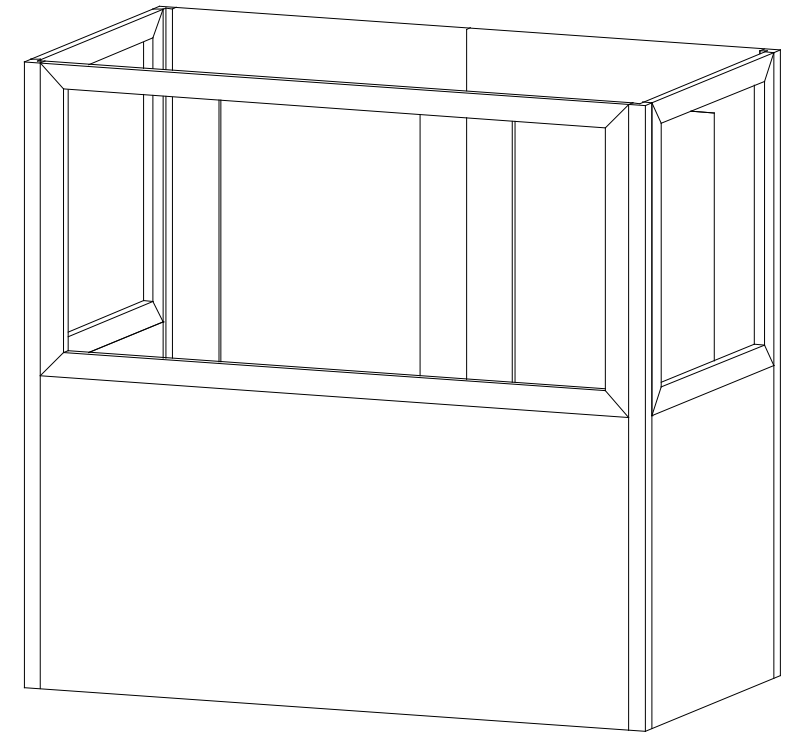

euro lt | HYBRIDS

Euro LT Hybrids General Setup Instructions

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.


Cleaning and Packing Your Display

- 1) When cleaning laminate countertops or panels use mild cleansers and a soft material such as cotton.
- 2) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 3) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.


Level 1 = Blue
 Level 2 = Red
 Level 3 = Green
 Level 4 = Black

Color Code


The top clip is color coded to distinguish the level. The color coded clip also contains the numbered label

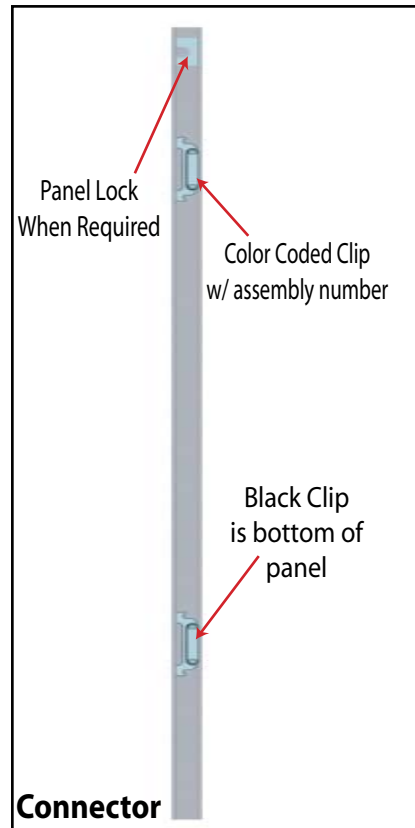


Each component has 2 clips, the lower clip is ALWAYS black..

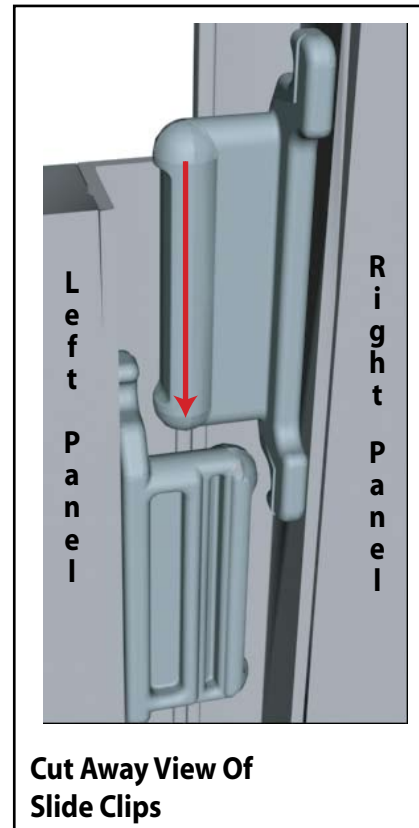

Components connect together by aligning them and sliding downward connecting clips together.

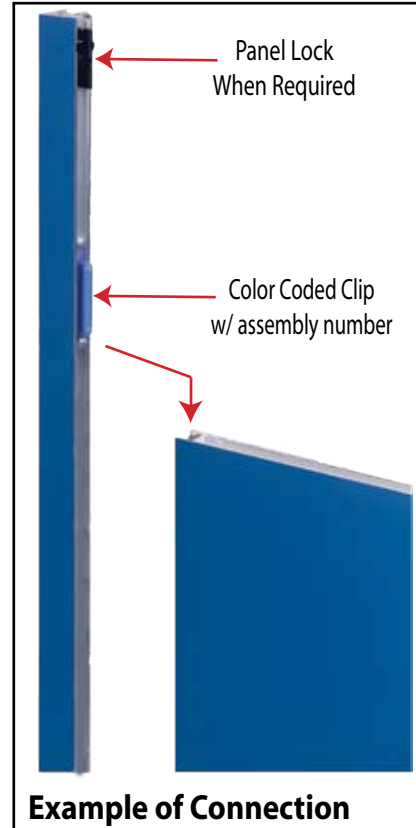

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

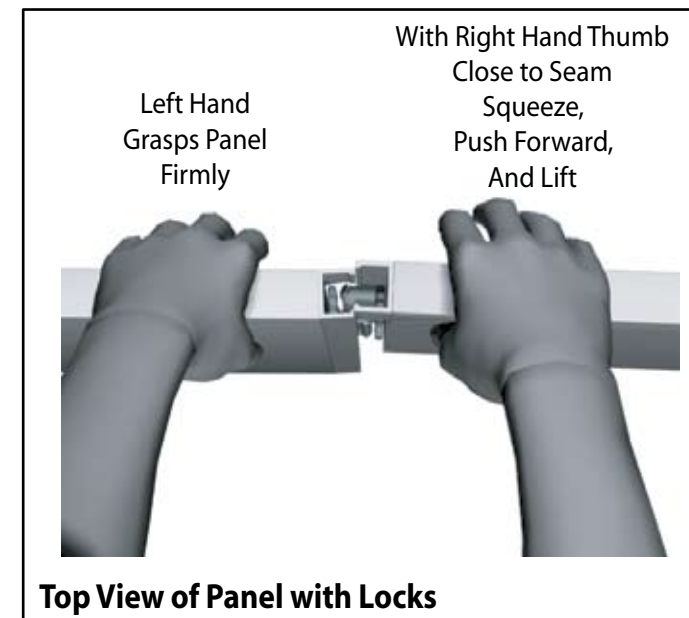

The first level of components contains panel locks that are located at the top of the panel for extra stability and a seamless connection. When disassembling panels, twist top connection slightly and lift right panel upward.

