
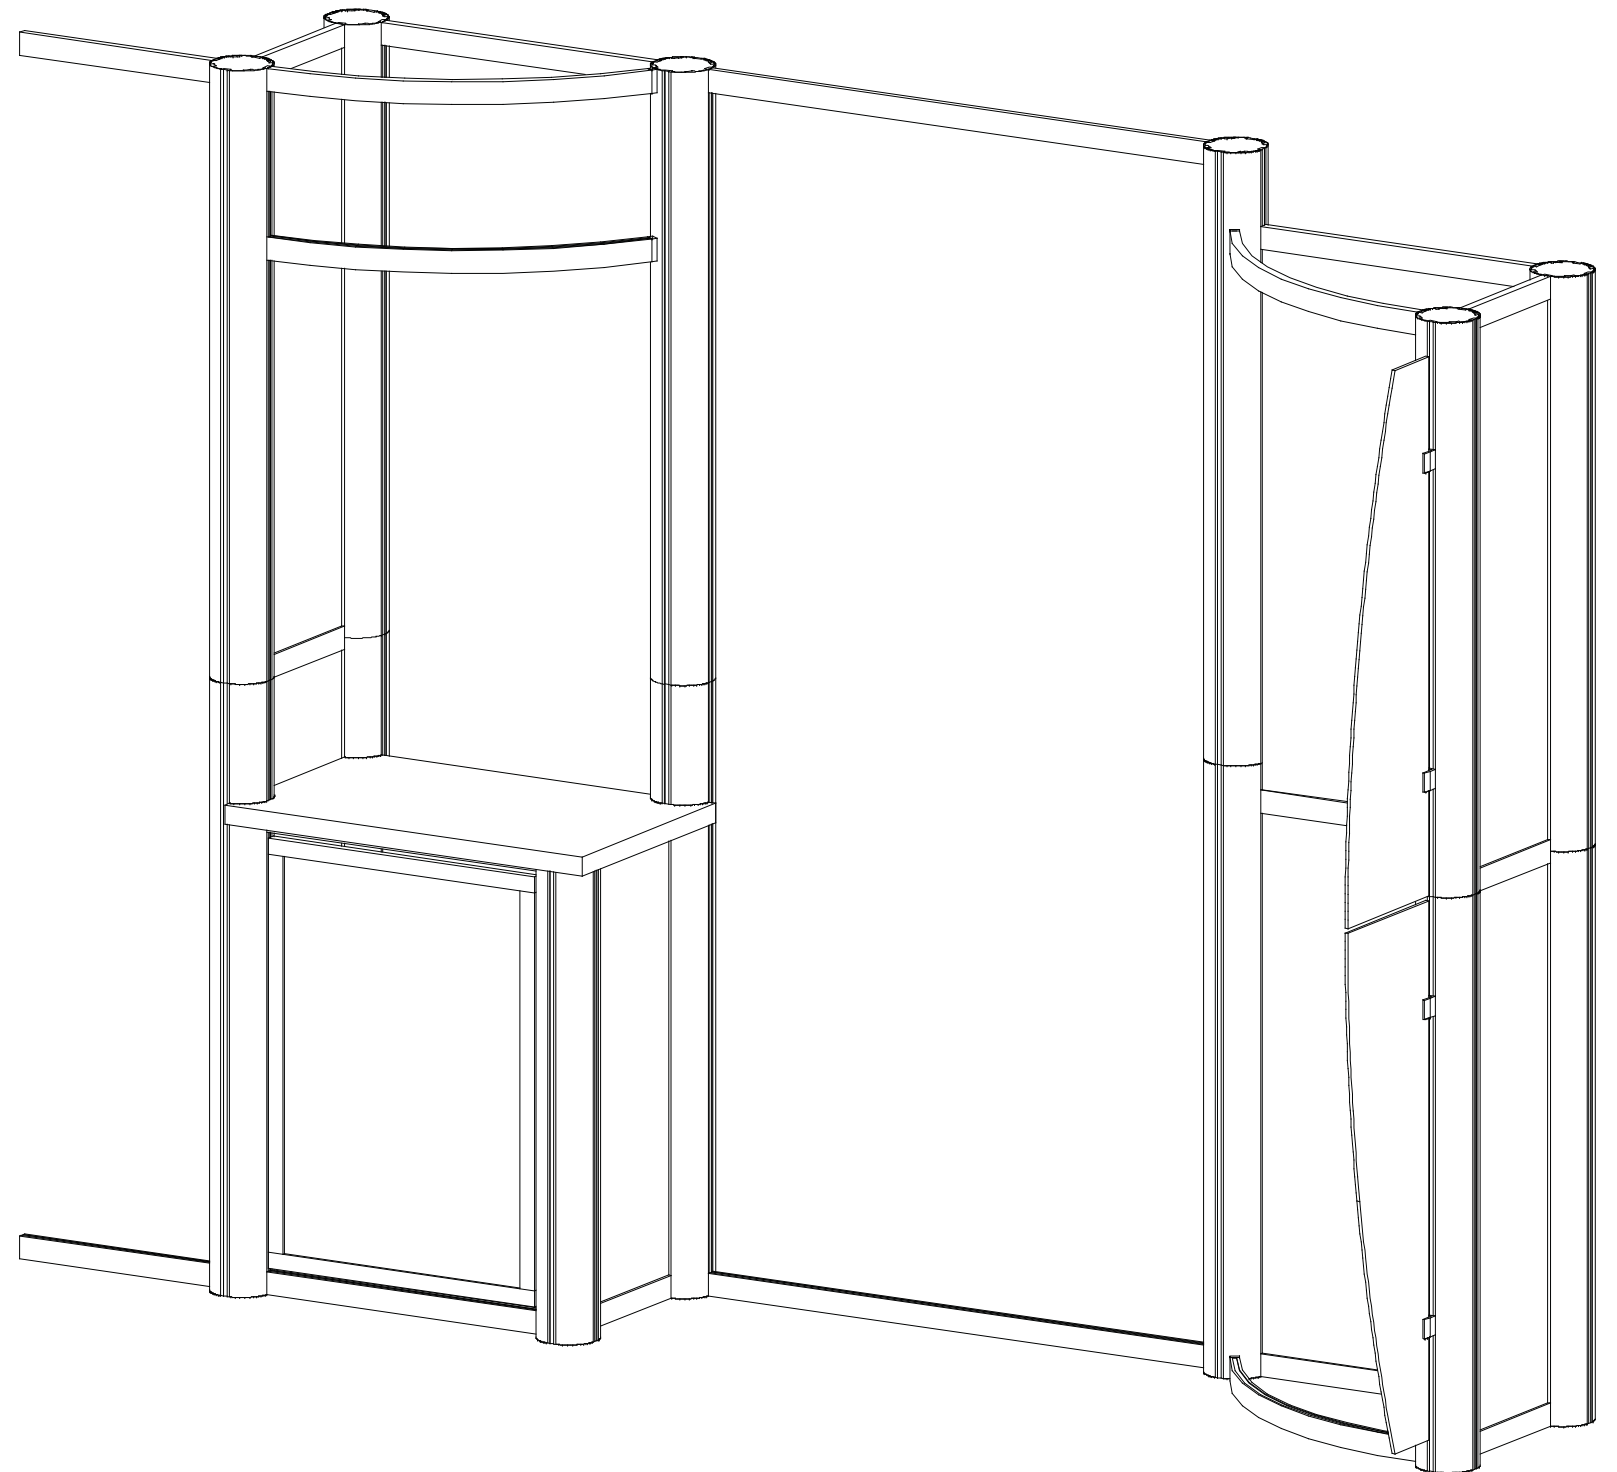


euro It | *HYBRIDS*

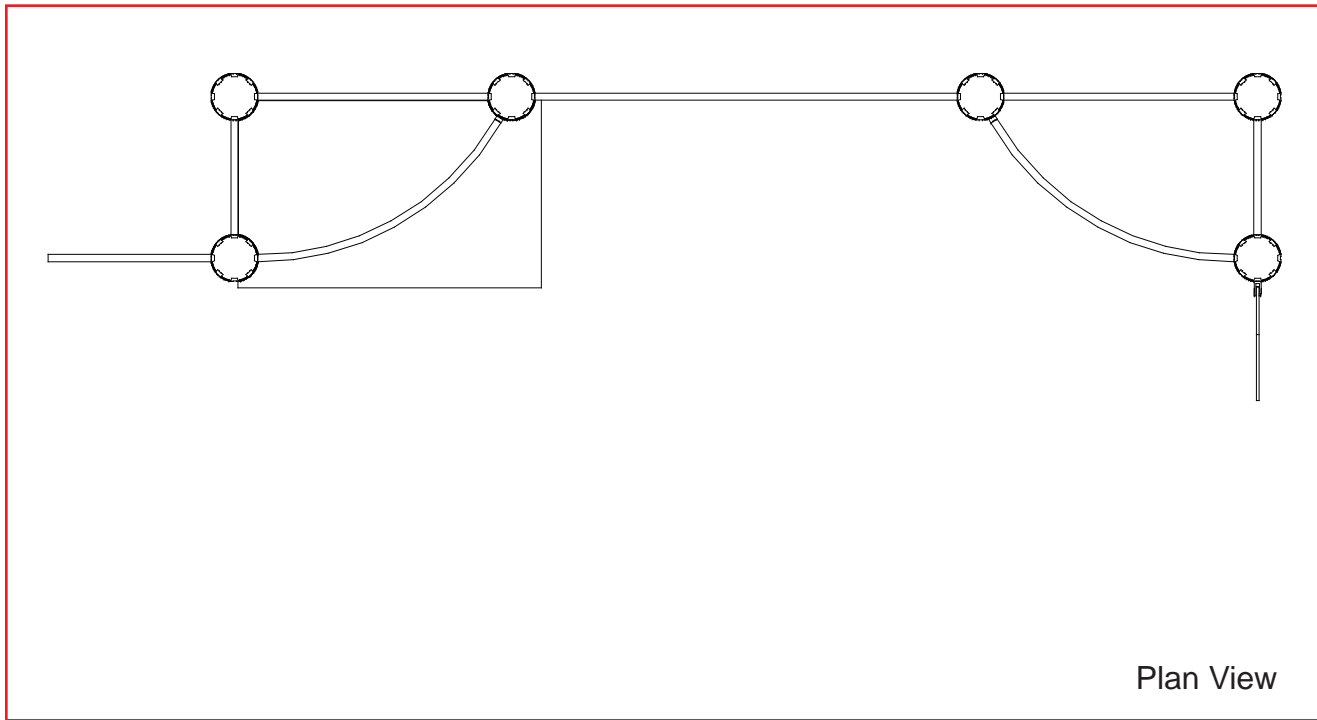

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

euro lt | HYBRIDS

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

General Setup Instructions for Extrusion System



The Tool

Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Typical Connection

Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.




Typical Connection (cont'd)

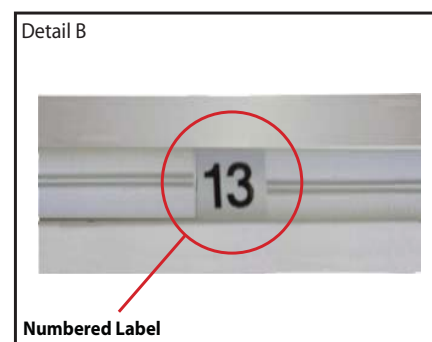


Numbered Label

Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.

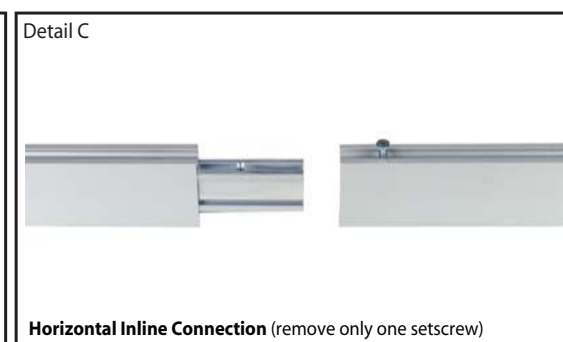


Horizontal Inline Connection (remove only one setscrew)

Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

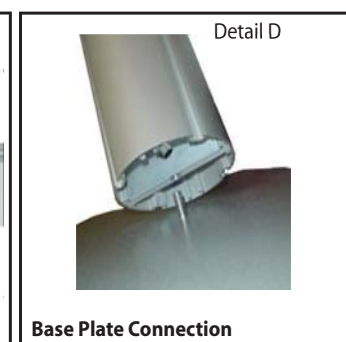

Base Plate Connection


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

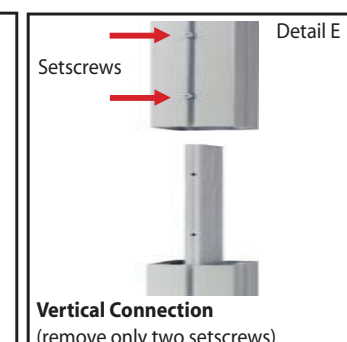

Vertical Connection (remove only two setscrews)


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.

Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

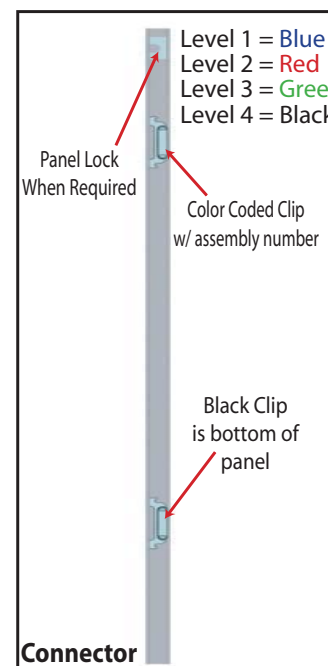


Connector

Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

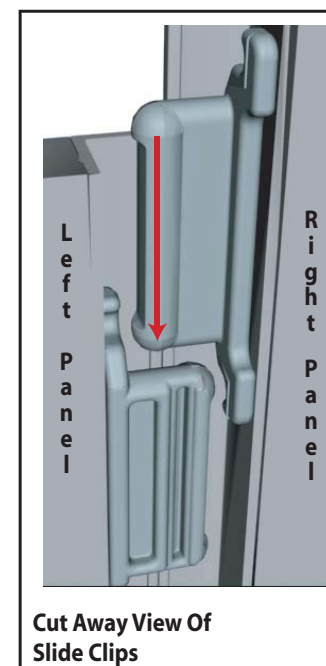


Cut Away View Of Slide Clips

Components connect together by aligning them and sliding downward connecting clips together.

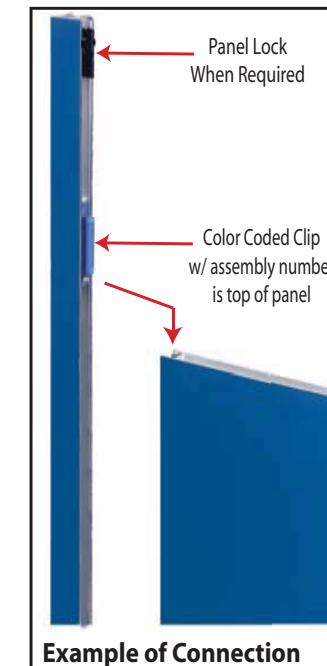

Example of Connection

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

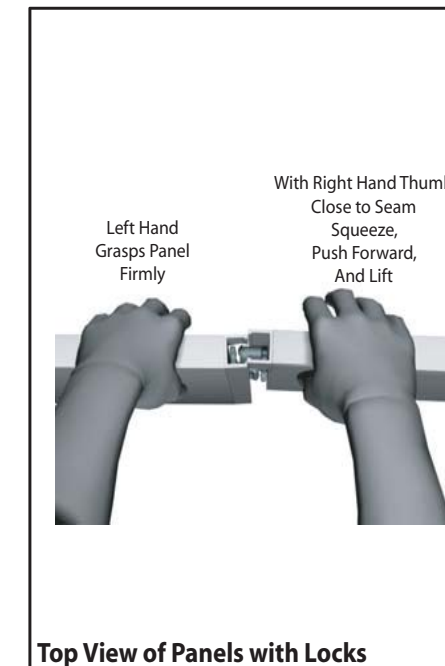

Top View of Panels with Locks



The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item	Qty.	Description
24	2	17"w Horizontal Extrusion
25	1	48"h Lower Vertical Extrusion
26	1	48"h Upper Vertical Extrusion
27	1	48"h Lower Vertical Extrusion
28	1	48"h Upper Vertical Extrusion
29	1	48"h Lower Vertical Extrusion
30	1	48"h Upper Vertical Extrusion
31	1	48"h Lower Vertical Extrusion
32	1	48"h Upper Vertical Extrusion
33	1	45"h Lower Vertical Extrusion
34	1	45"h Upper Vertical Extrusion
35	1	45"h Lower Vertical Extrusion
36	1	45"h Upper Vertical Extrusion
37/37a	4/2	12"w Horizontal Extrusion
38/38a/38b/38c	3/1/1/1	24"w Horizontal Extrusion
39	2	44"w Horizontal Extrusion

Steps:

- 1) Attach lower vertical extrusions to upper vertical extrusions as shown.
- 2) Attach horizontal extrusions [37 and 37a] between vertical assemblies [25/26 & 27/28 and 33/34 & 35/36], placing inserts where indicated.
- 3) Attach horizontal extrusions [38 and 38a] between vertical assemblies [31/32 and 33/34], placing inserts where indicated.
- 4) Attach horizontal extrusions [38, 39 and 40] between vertical assemblies [27/28 and 29/30], placing insert where indicated.
- 5) Attach horizontal extrusions [41] between vertical assemblies [29/30 and 31/32].
- 6) Connect assembled section to existing unit using horizontal extrusions [24].

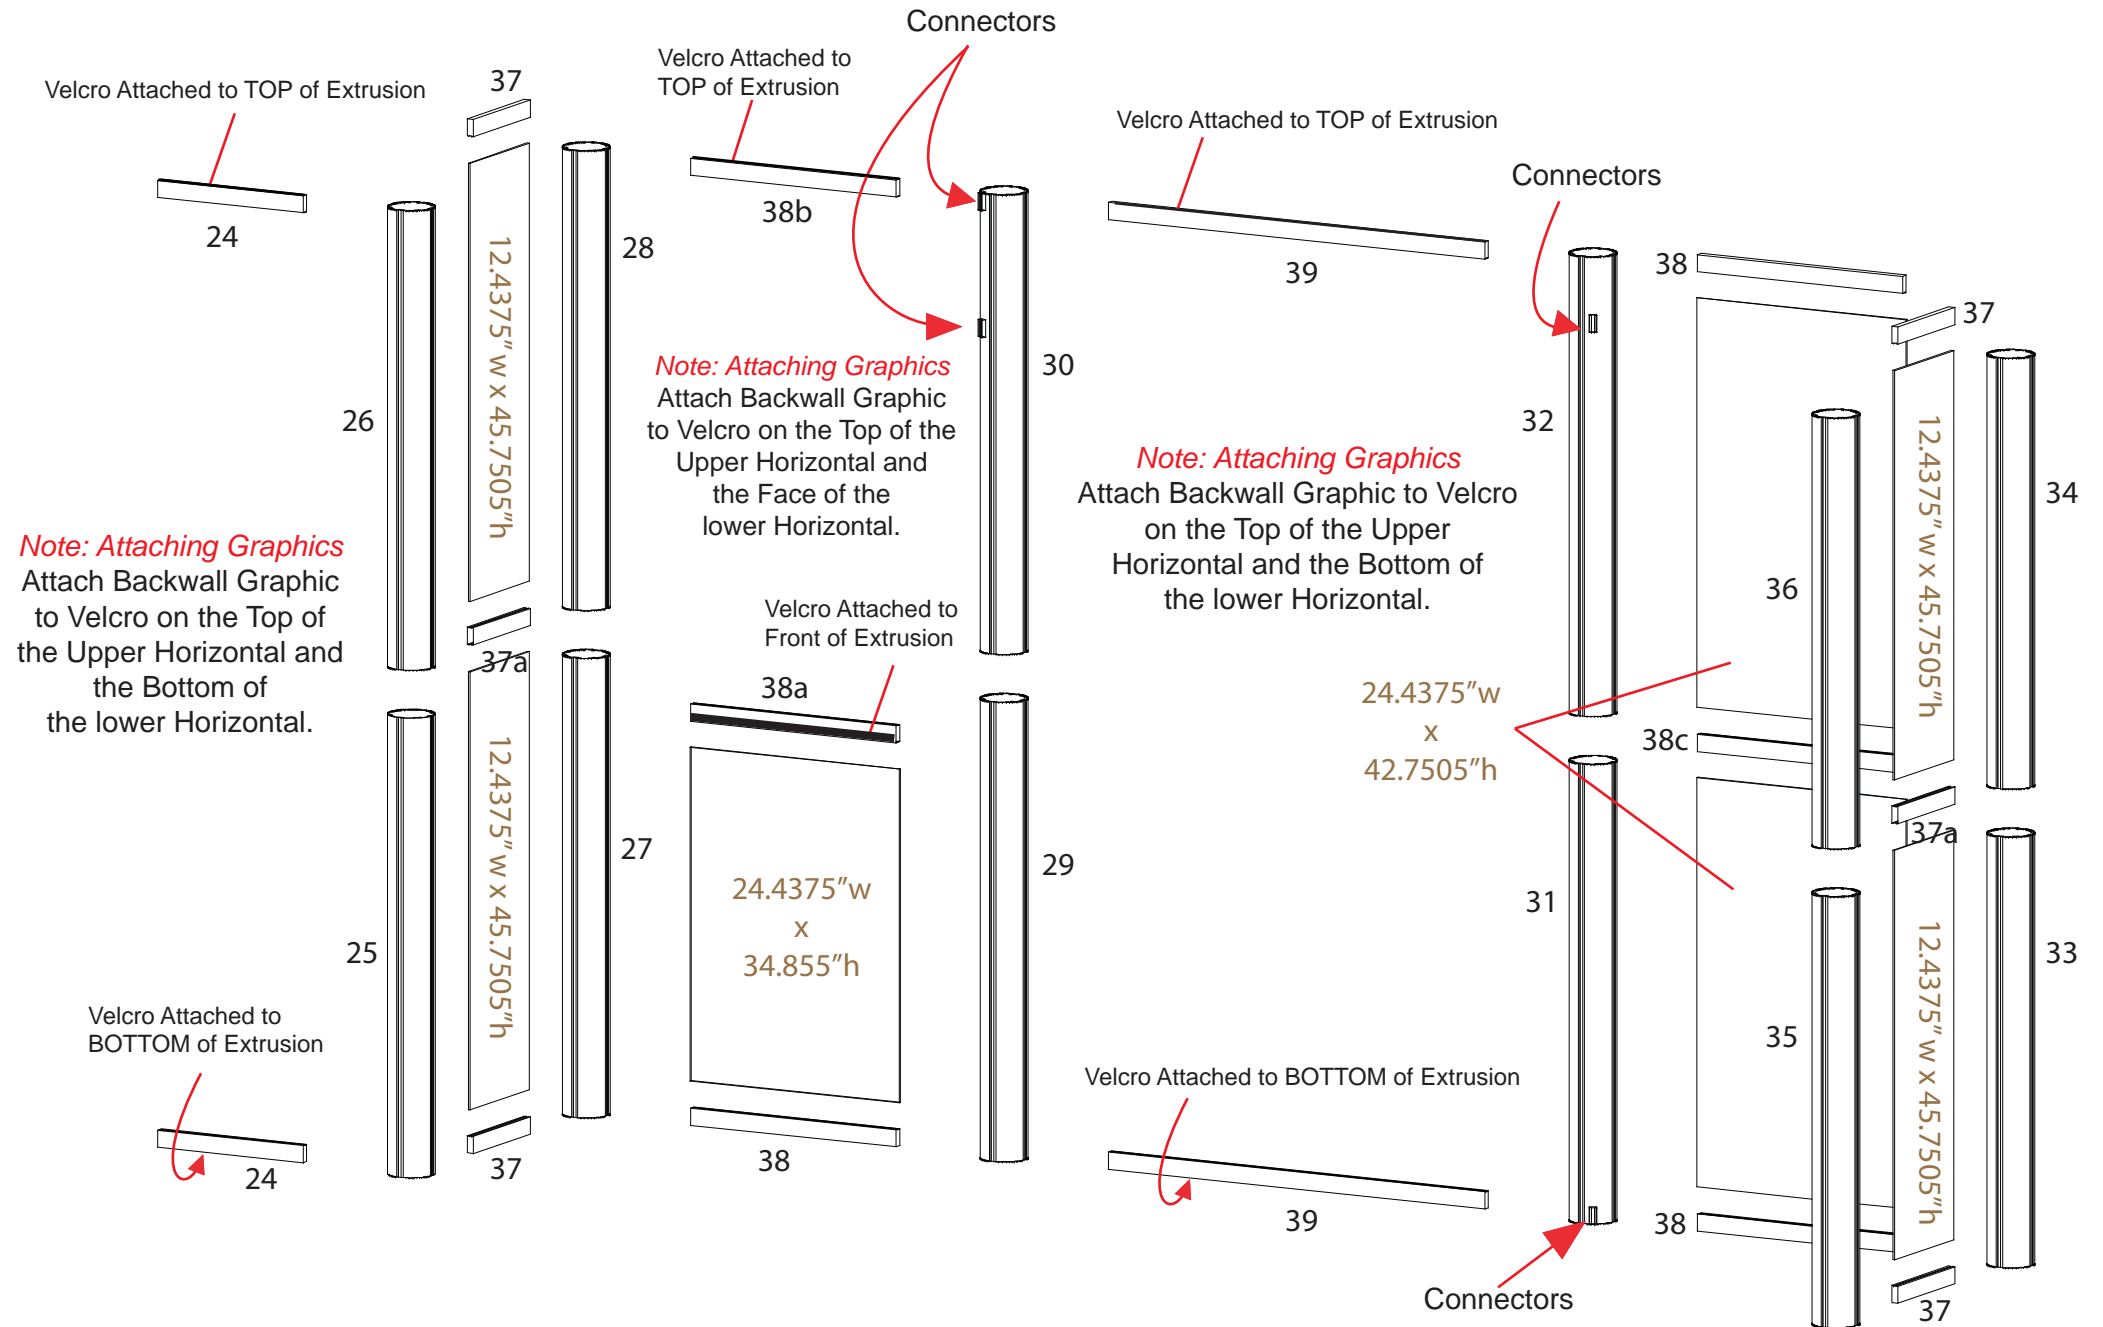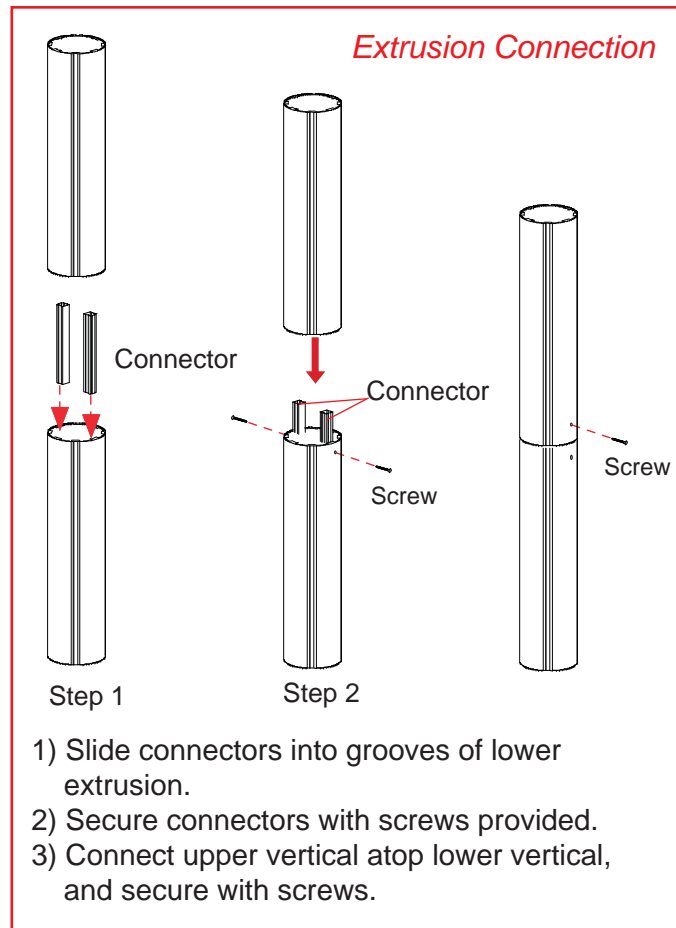


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item	Qty.	Description
40	1	38" h Vertical Extrusion
41	2	24" w Horizontal Extrusion
42	2	12" w Horizontal Extrusion
43	2	30.6096" w Curved Horizontal Extrusion
44	2	30.6096" w Curved Horizontal Extrusion


Steps:

- 1) Attach horizontal extrusions [42] between vertical extrusions [29 and 40], placing insert between horizontals.
- 2) Attach horizontal extrusions [41] between vertical extrusions [25 and 40], attaching door between horizontals.
- 3) Attach curved header extrusions [43] between vertical extrusions [26 and 30].
- 4) Attach curved extrusions [44] between vertical extrusions [31/32 and 35/36].

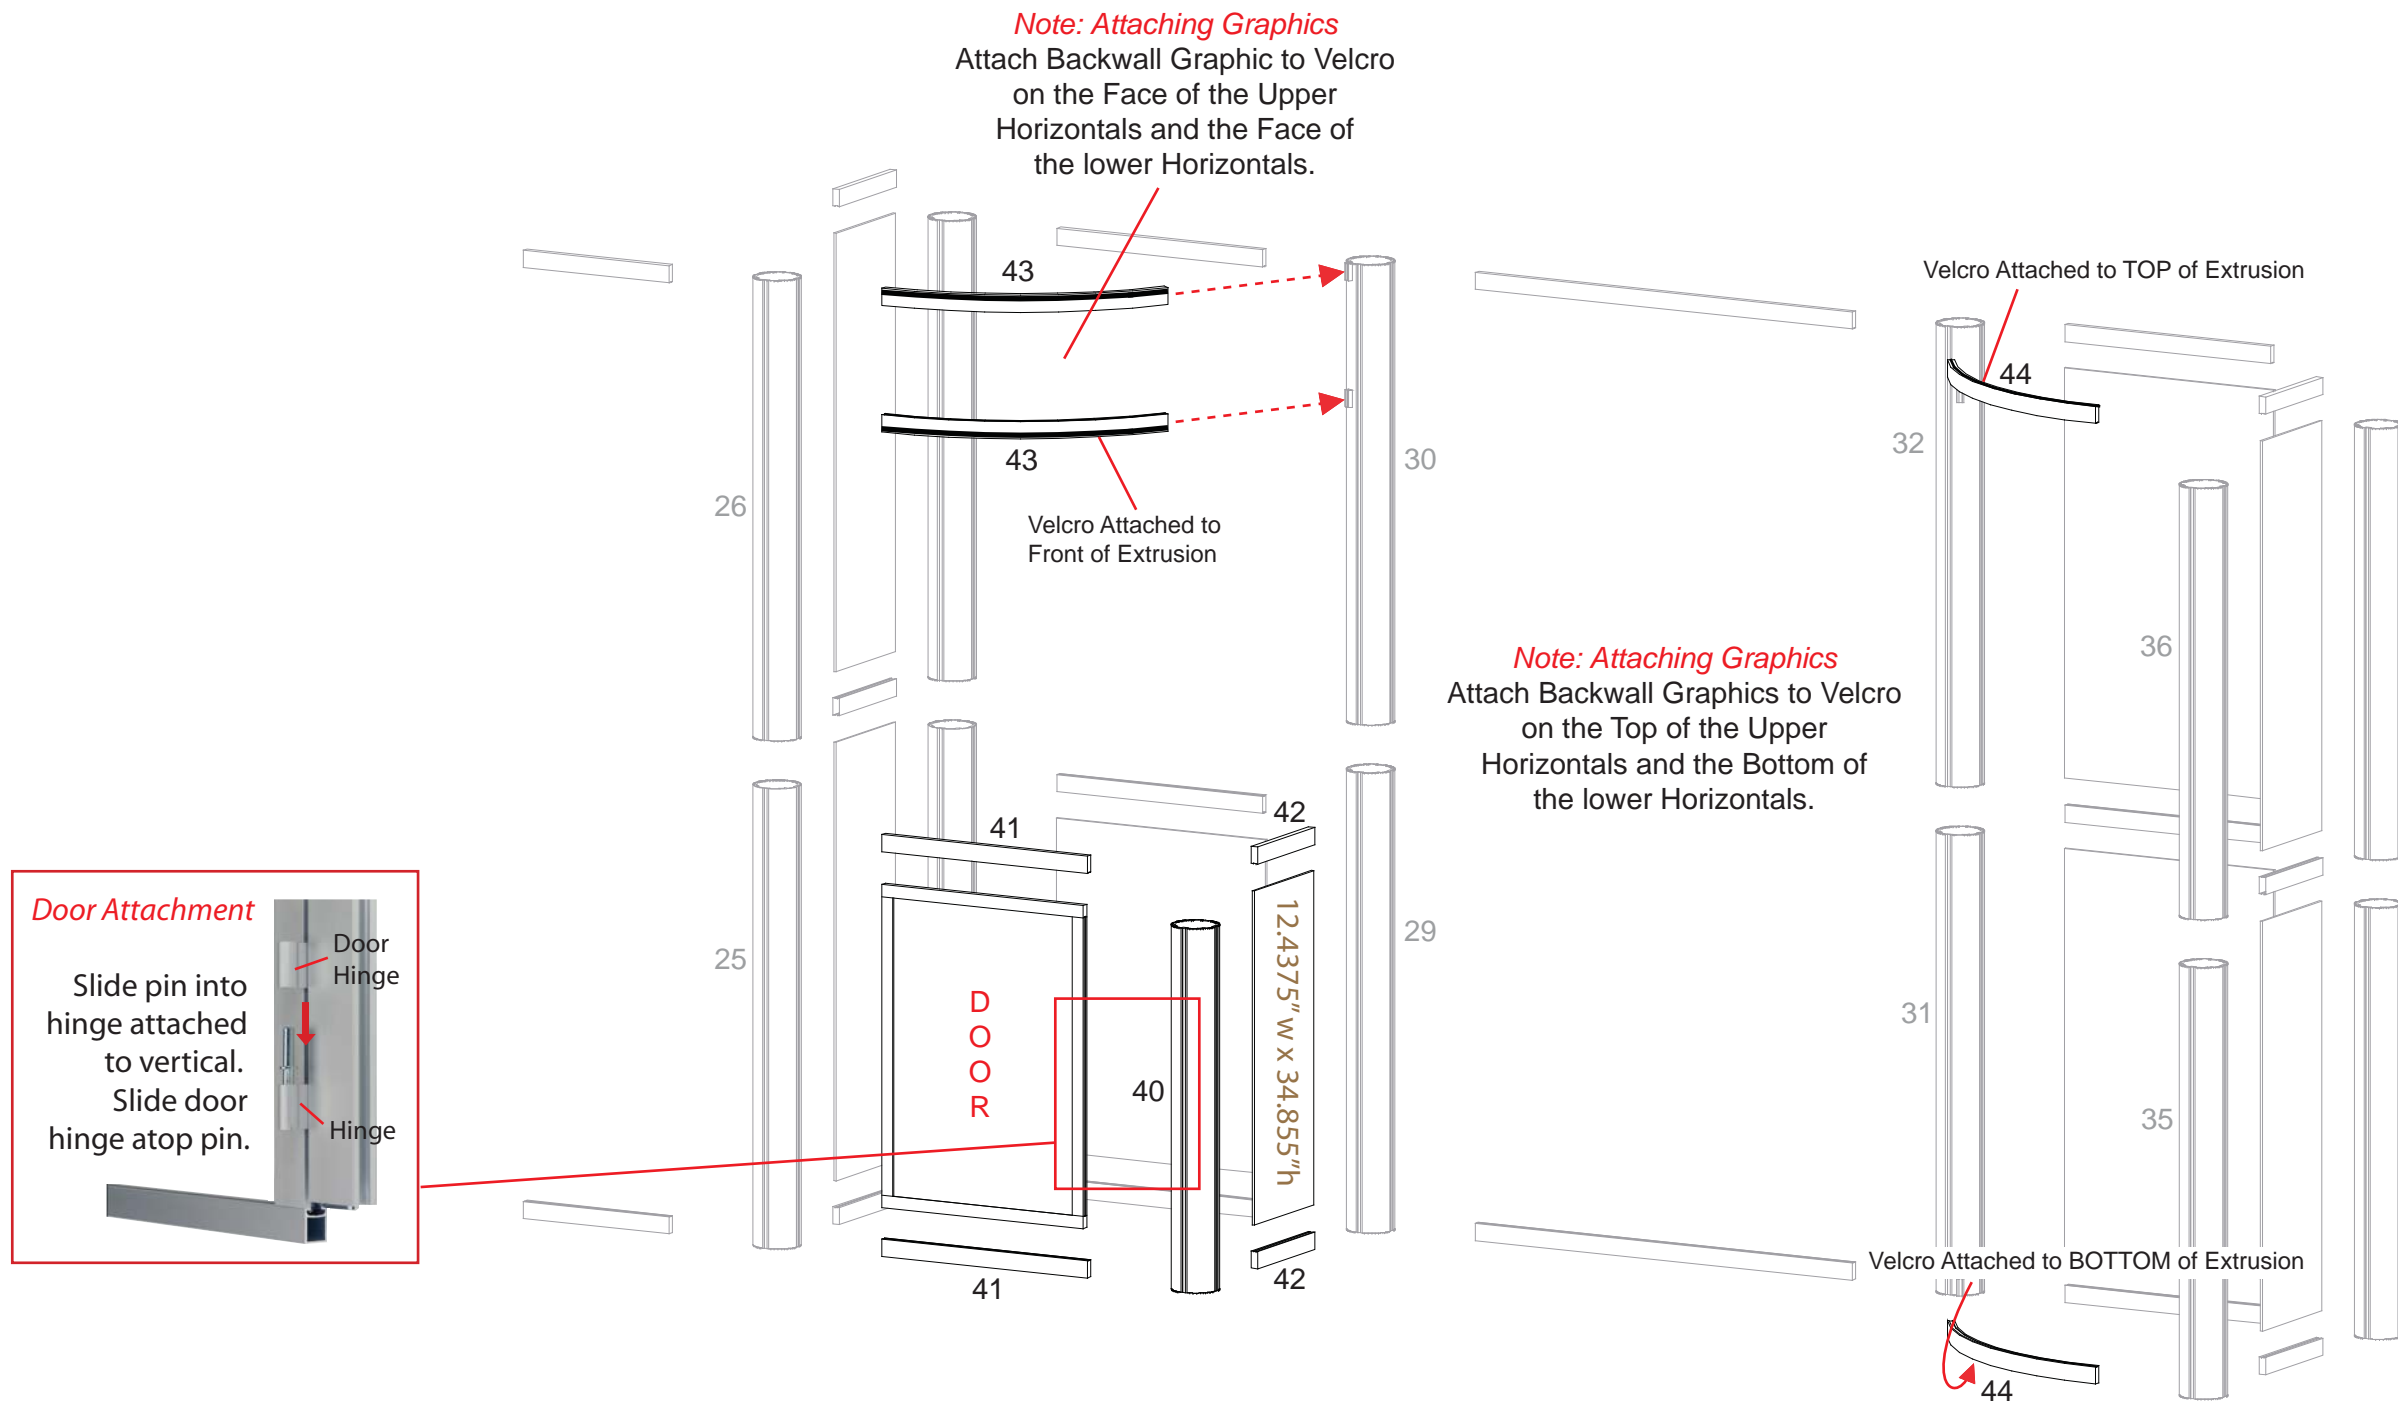

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


Example of Monitor Mount Plate

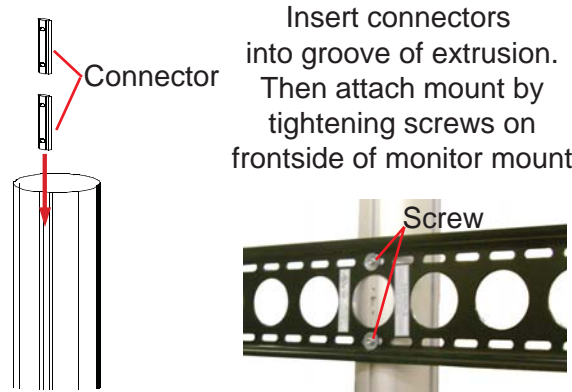

Insert connectors into groove of extrusion. Then attach mount by tightening screws on frontside of monitor mount

Connector

Screw

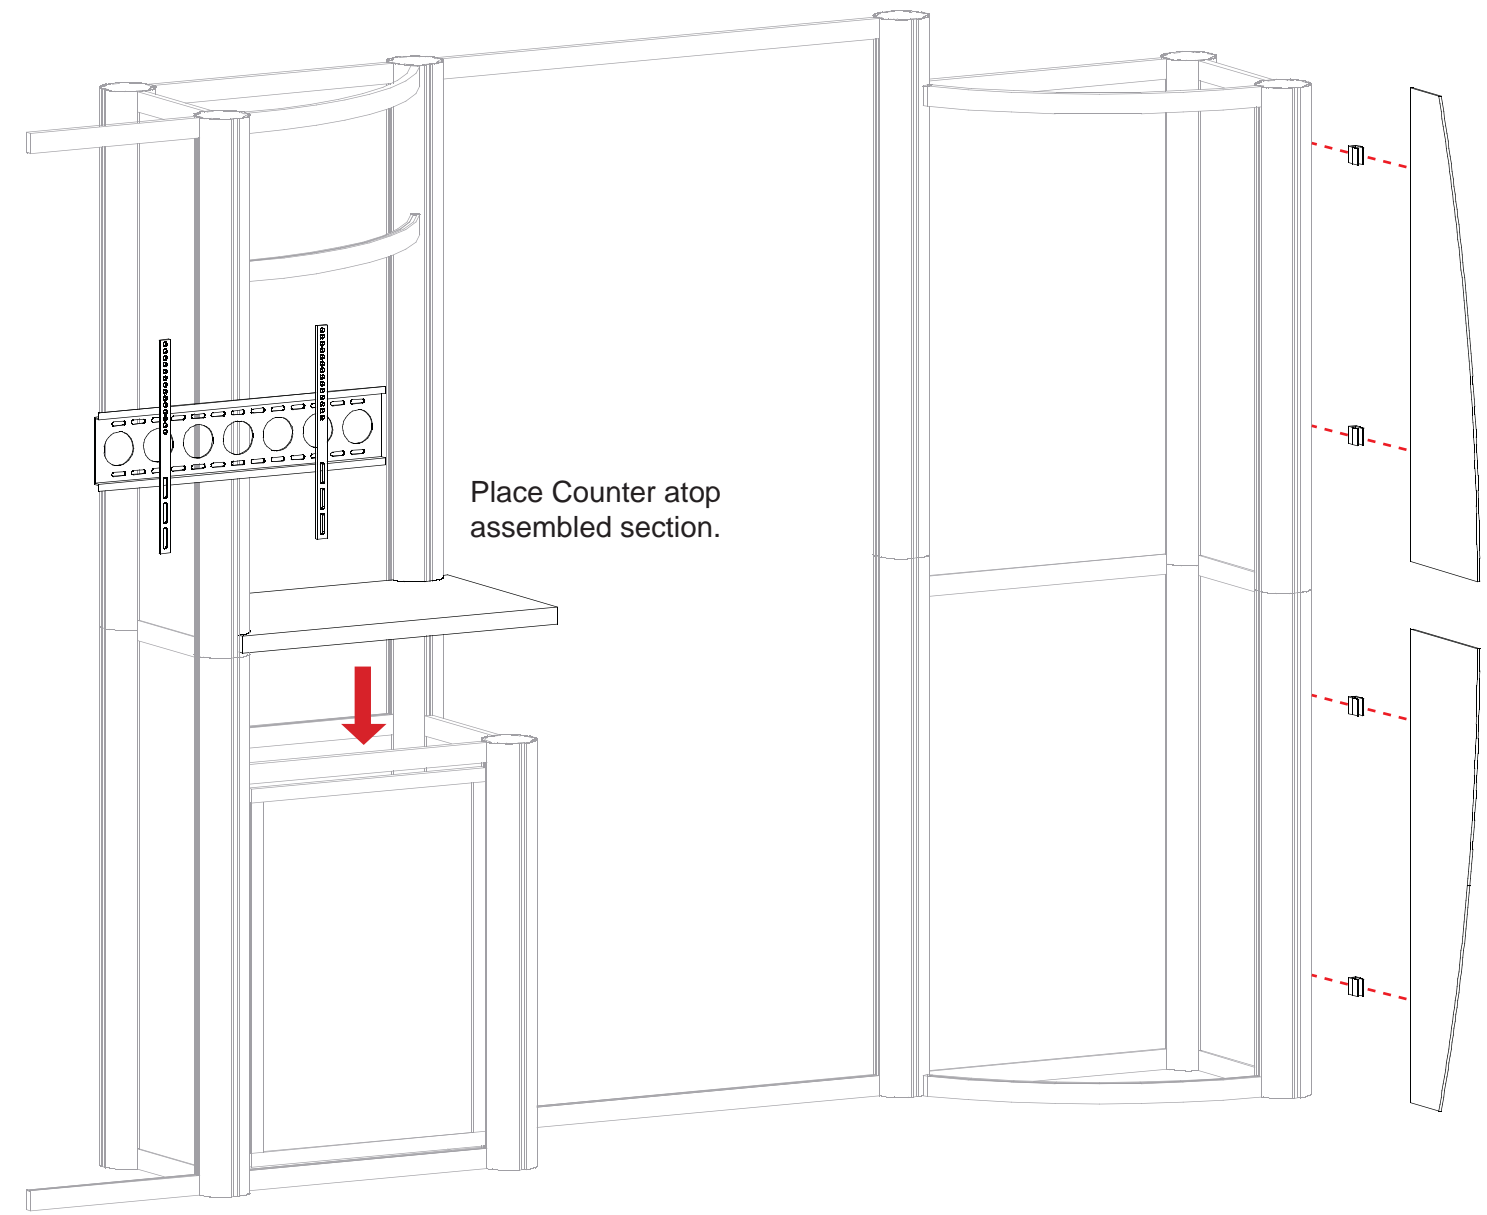

Wing Attachment

Slide A10 Clamp into groove of square extrusion.



A10

When desired location is found, tighten set screw to secure.



Set-Screw

Tighten black plastic set screw to secure Wing in place.



Black Plastic Set-screw

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING