

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

euro lt | HYBRIDS

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.


General Setup Instructions for Extrusion System



Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

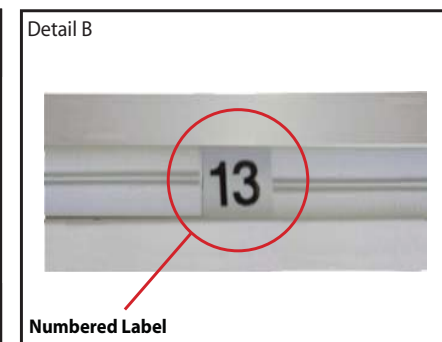


Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.



Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

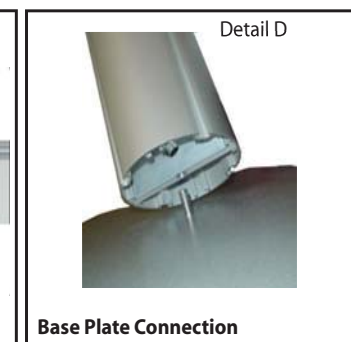


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

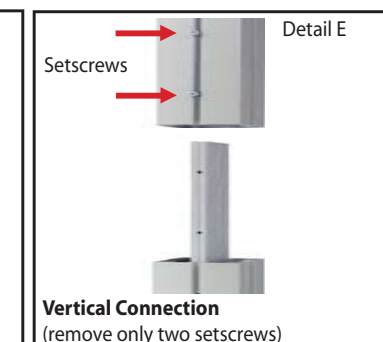


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.


Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

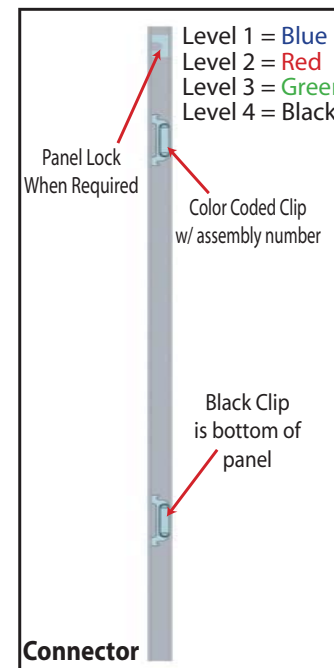


Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

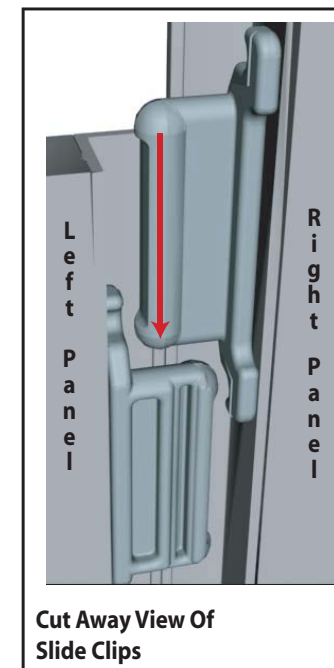

Components connect together by aligning them and sliding downward connecting clips together.

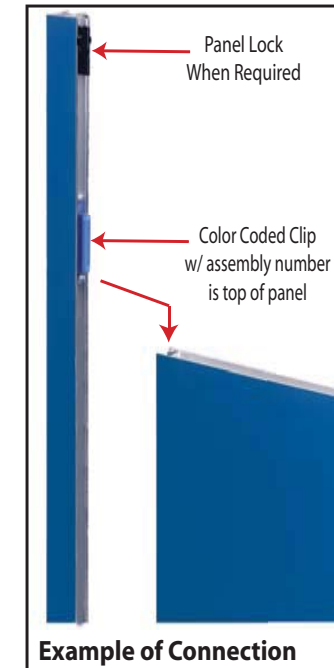

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

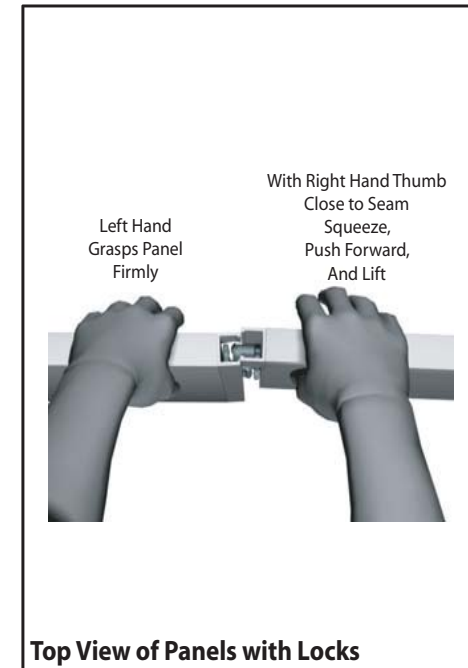

The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.



WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


Item	Qty.	Description
1	1	72"h Vertical Extrusion
2	1	96"h Vertical Extrusion
3	1	96"h Vertical Extrusion
4	1	96"h Vertical Extrusion
5	1	96"h Vertical Extrusion
6	1	96"h Vertical Extrusion
7	1	96"h Vertical Extrusion
8	1	96"h Vertical Extrusion
9	1	96"h Vertical Extrusion
10	1	96"h Vertical Extrusion
11	1	72"h Vertical Extrusion

Item	Qty.	Description
12	4	30"w Horizontal Extrusion
13a	2	12.791"h Vertical Extrusion
13b	2	38.5298" Curved Extrusion
13c	2	4.809"w Horizontal Extrusion
14	6	25.7202" Curved Extrusion
15	4	12"w Horizontal Extrusion
16	6	46"w Horizontal Extrusion
17	4	30"w Horizontal Extrusion

Steps:

- 1) Connect extrusions [13a to 13b to 13c] together.
- 2) Connect horizontal extrusions between vertical extrusions, placing infills where indicated.
 - Note:* Lock extrusion [13a] to horizontal [12] and [13c] to vertical [2].
- 3) Place extrusion cap on vertical extrusions [1 and 11].
 - Note:* Cap must stay attached to top of vertical extrusions [1 and 11].

** Sections highlighted in BLUE must stay assembled when shipping in large crate

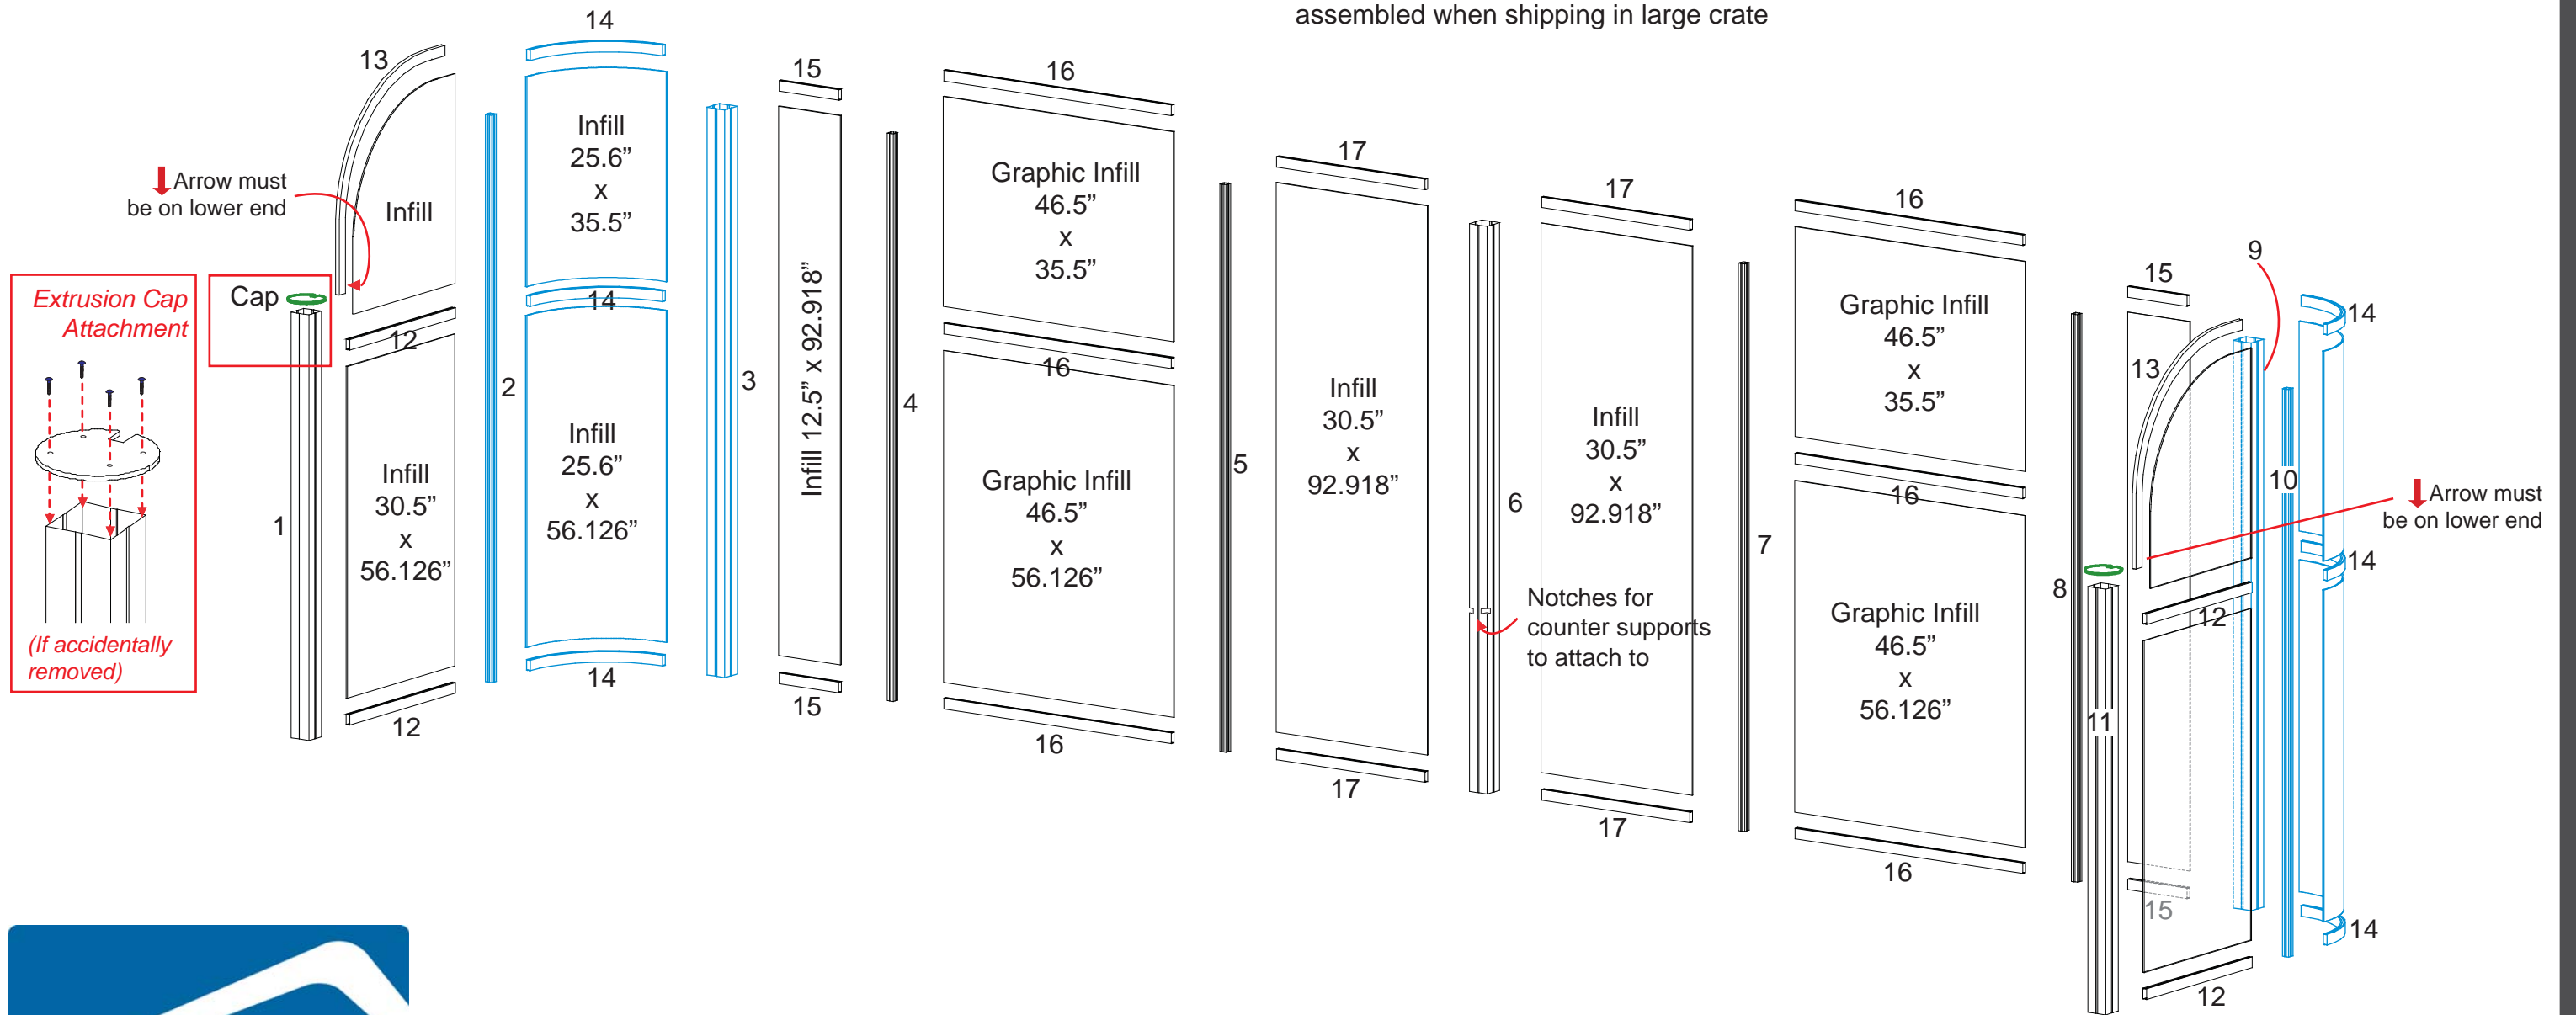


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item	Qty.	Description
18	1	96"h Vertical Extrusion
19	1	96"h Vertical Extrusion
20	4	21"w Horizontal Extrusion
21	6	12"w Horizontal Extrusion

Steps:

- 1) Connect vertical extrusions [18 and 19] to assembled backwall by connecting lower horizontal extrusions [20] between vertical extrusions.
- 2) Slide infills between vertical extrusions.
- 3) Attach upper horizontal extrusions [20] between vertical extrusions [6, 18 and 19].
- 4) Attach counter supports [21] to vertical extrusions [6, 18 and 19] where indicated.

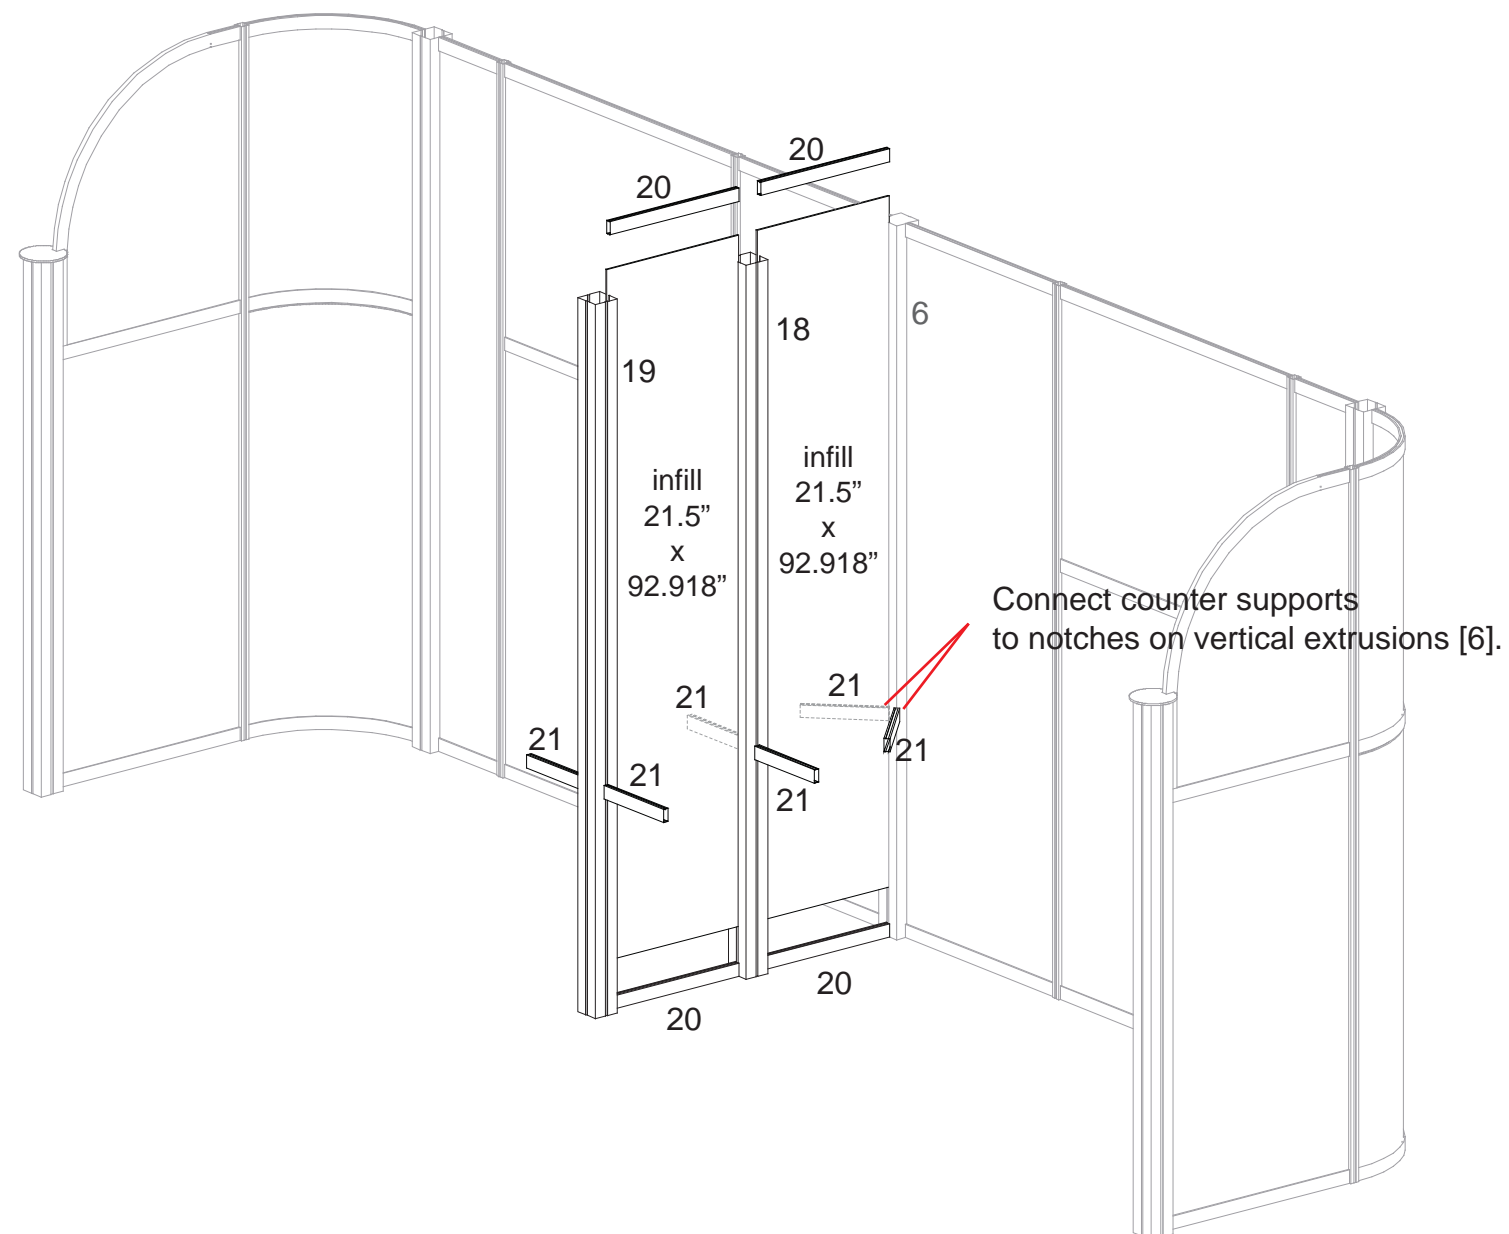



WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

LT Panel System

Item	Qty.	Description
1	1	30" w x 31" h Flat Panel
2	1	31" h 90° Corner Extrusion
3	1	34" w x 31" h Flat Panel with Door
4	1	31" h 90° Corner Extrusion
5	1	30" w x 31" h Flat Panel
6	1	31" h 90° Corner Extrusion
7	1	34" w x 31" h Flat
8	1	31" h 90° Corner Extrusion

Steps:

1) Assemble counter base by starting at panel #1 and continue in numerical order.

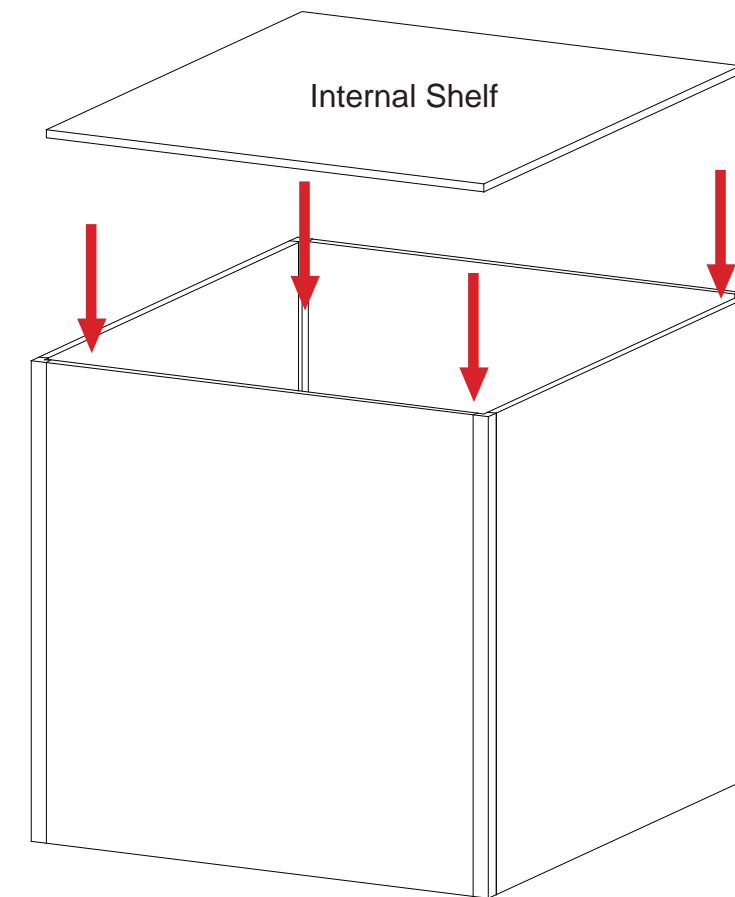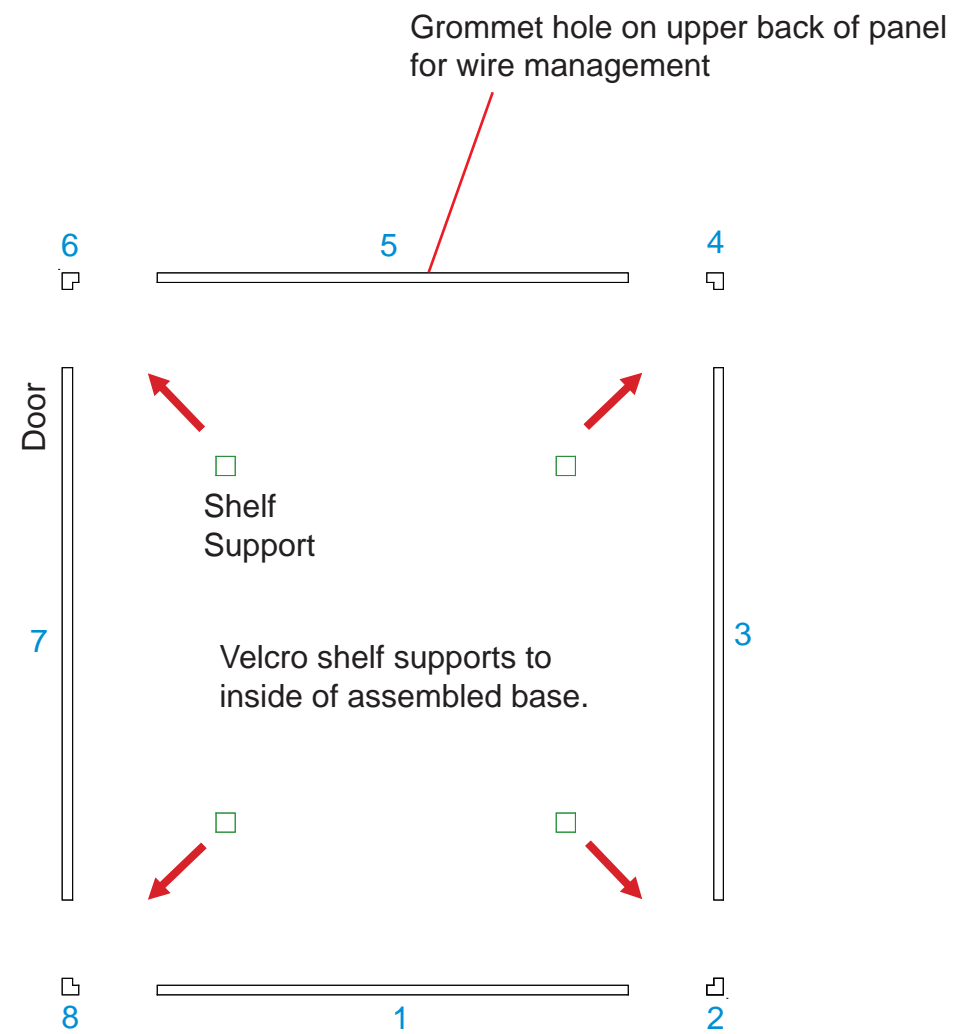


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Steps:

- 1) Set assembled counter base in front of vertical extrusion [19].
- 2) Place counter top ① on assembled base.
- 3) Set counter tops ②, ③ atop supports [21], then connect counter pieces together and adjust counter supports [21] if needed.



Note: See counter top attachment detail below.

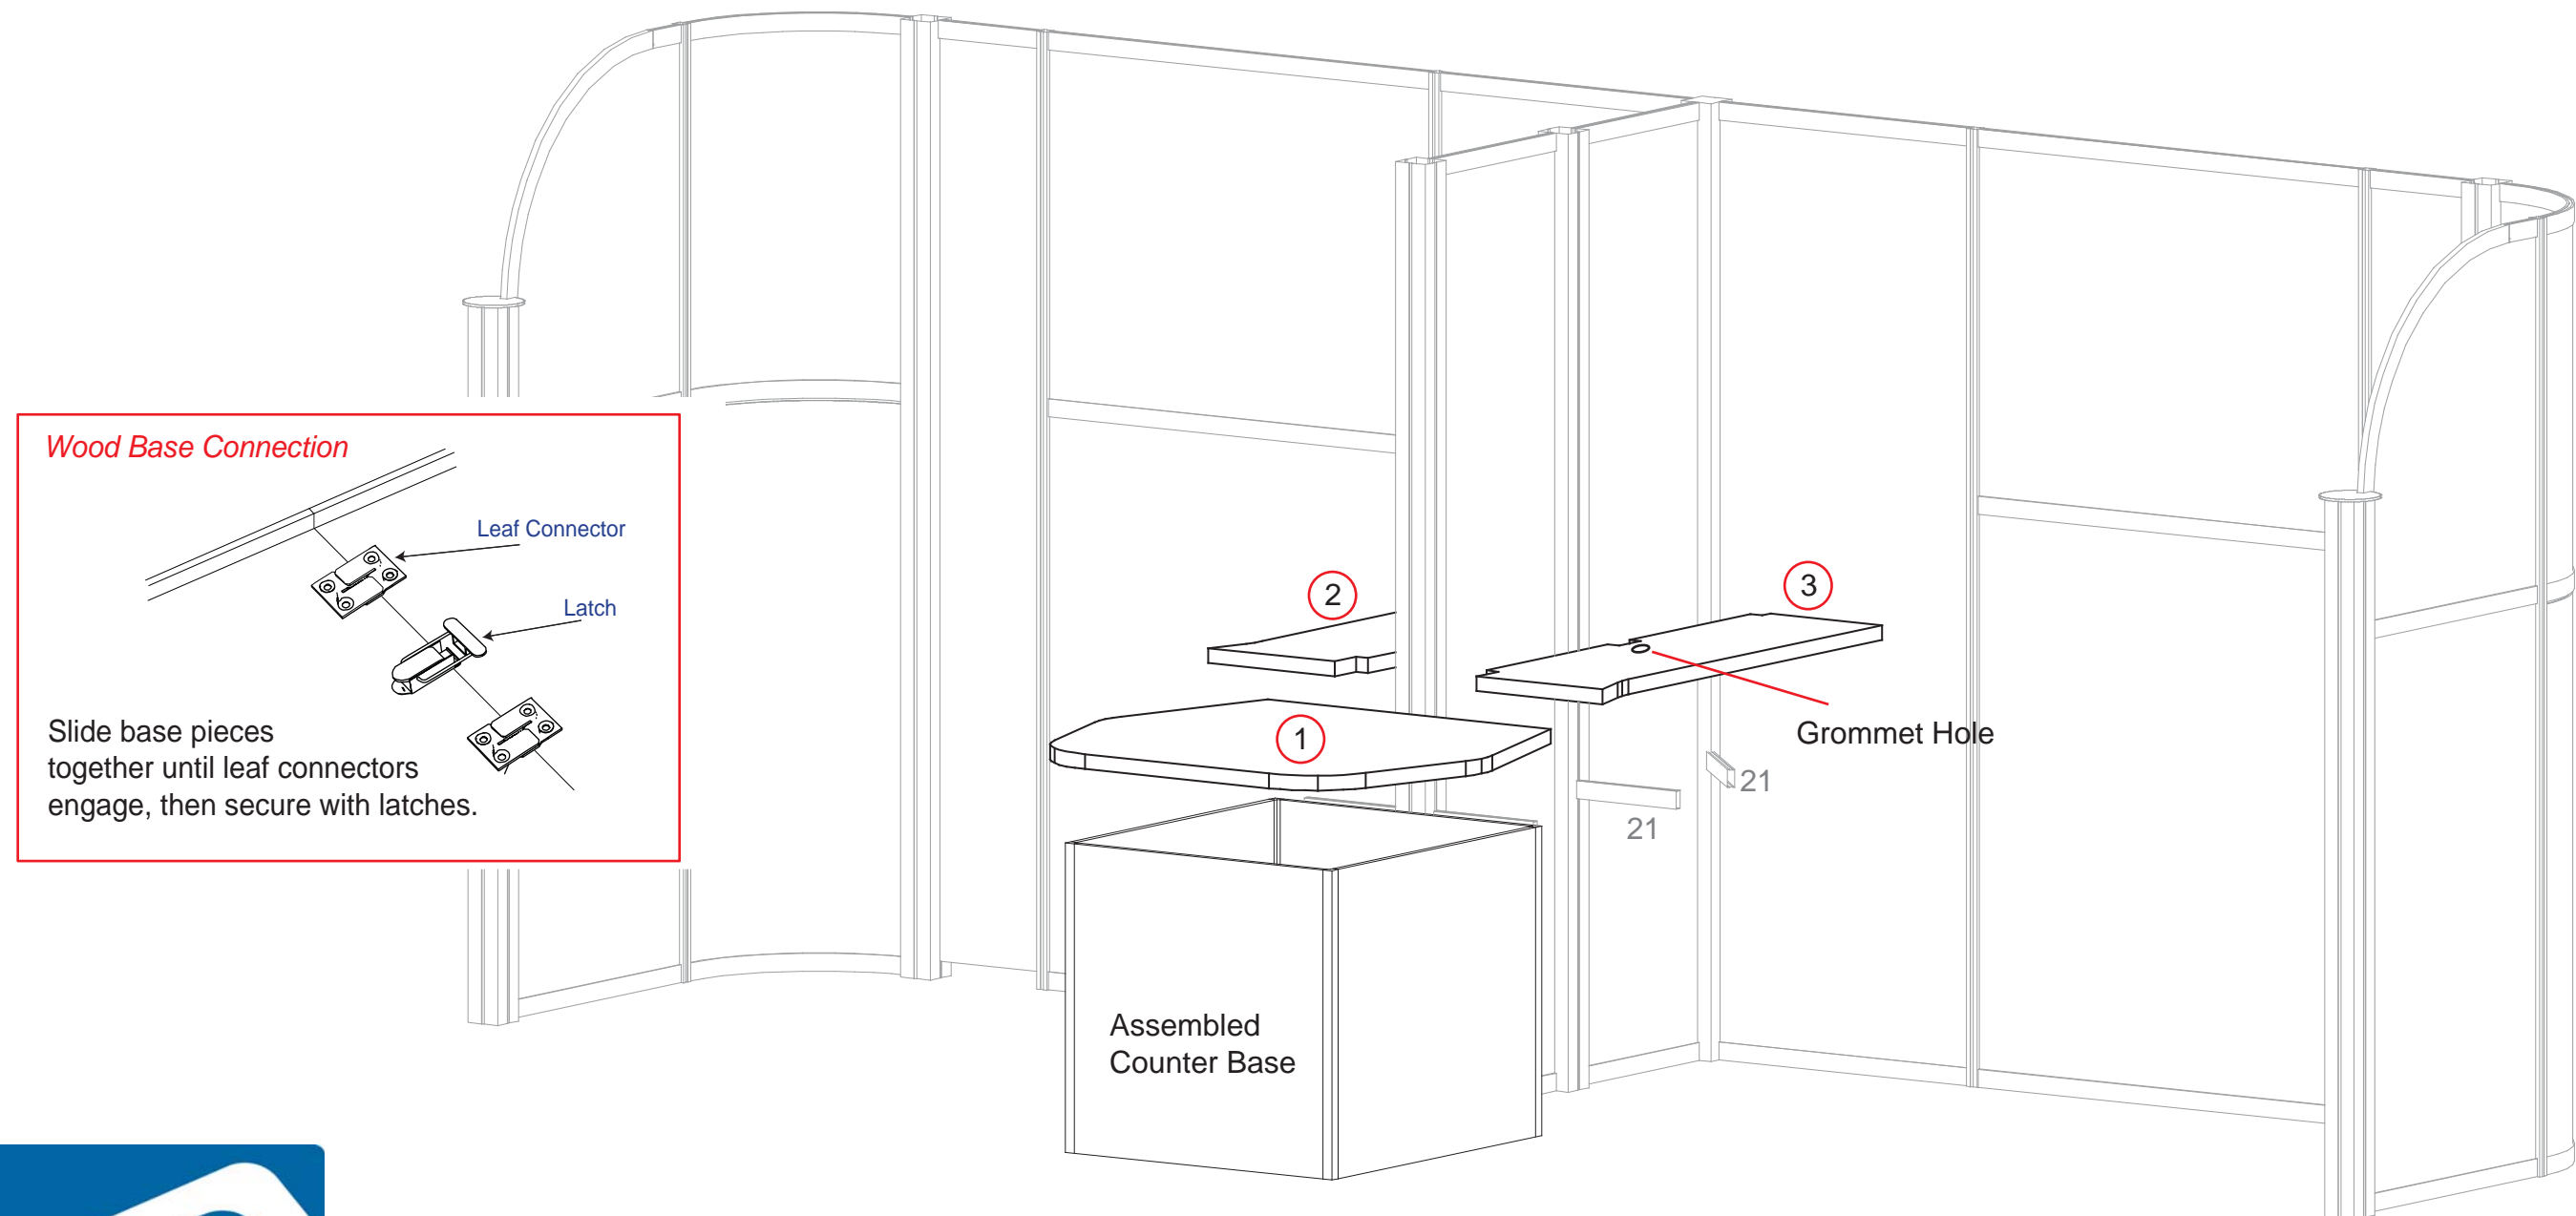

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Steps:




- 1) Hook ceilings with puck lights to top of assembled backwall.
- 2) Attach literature racks to assembled backwall where indicated.

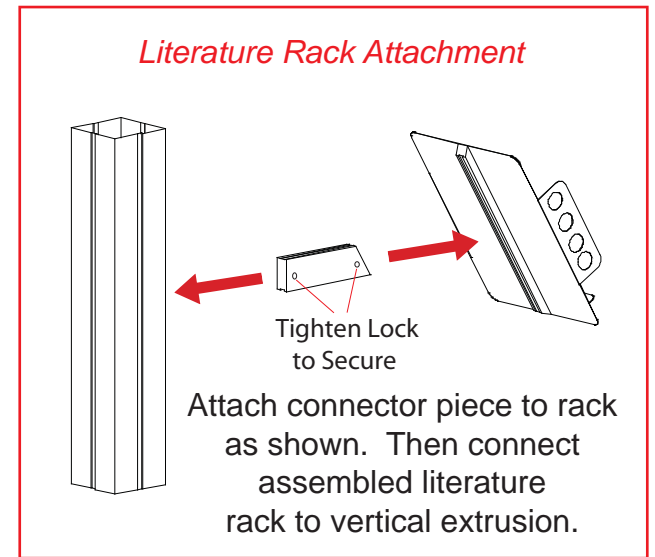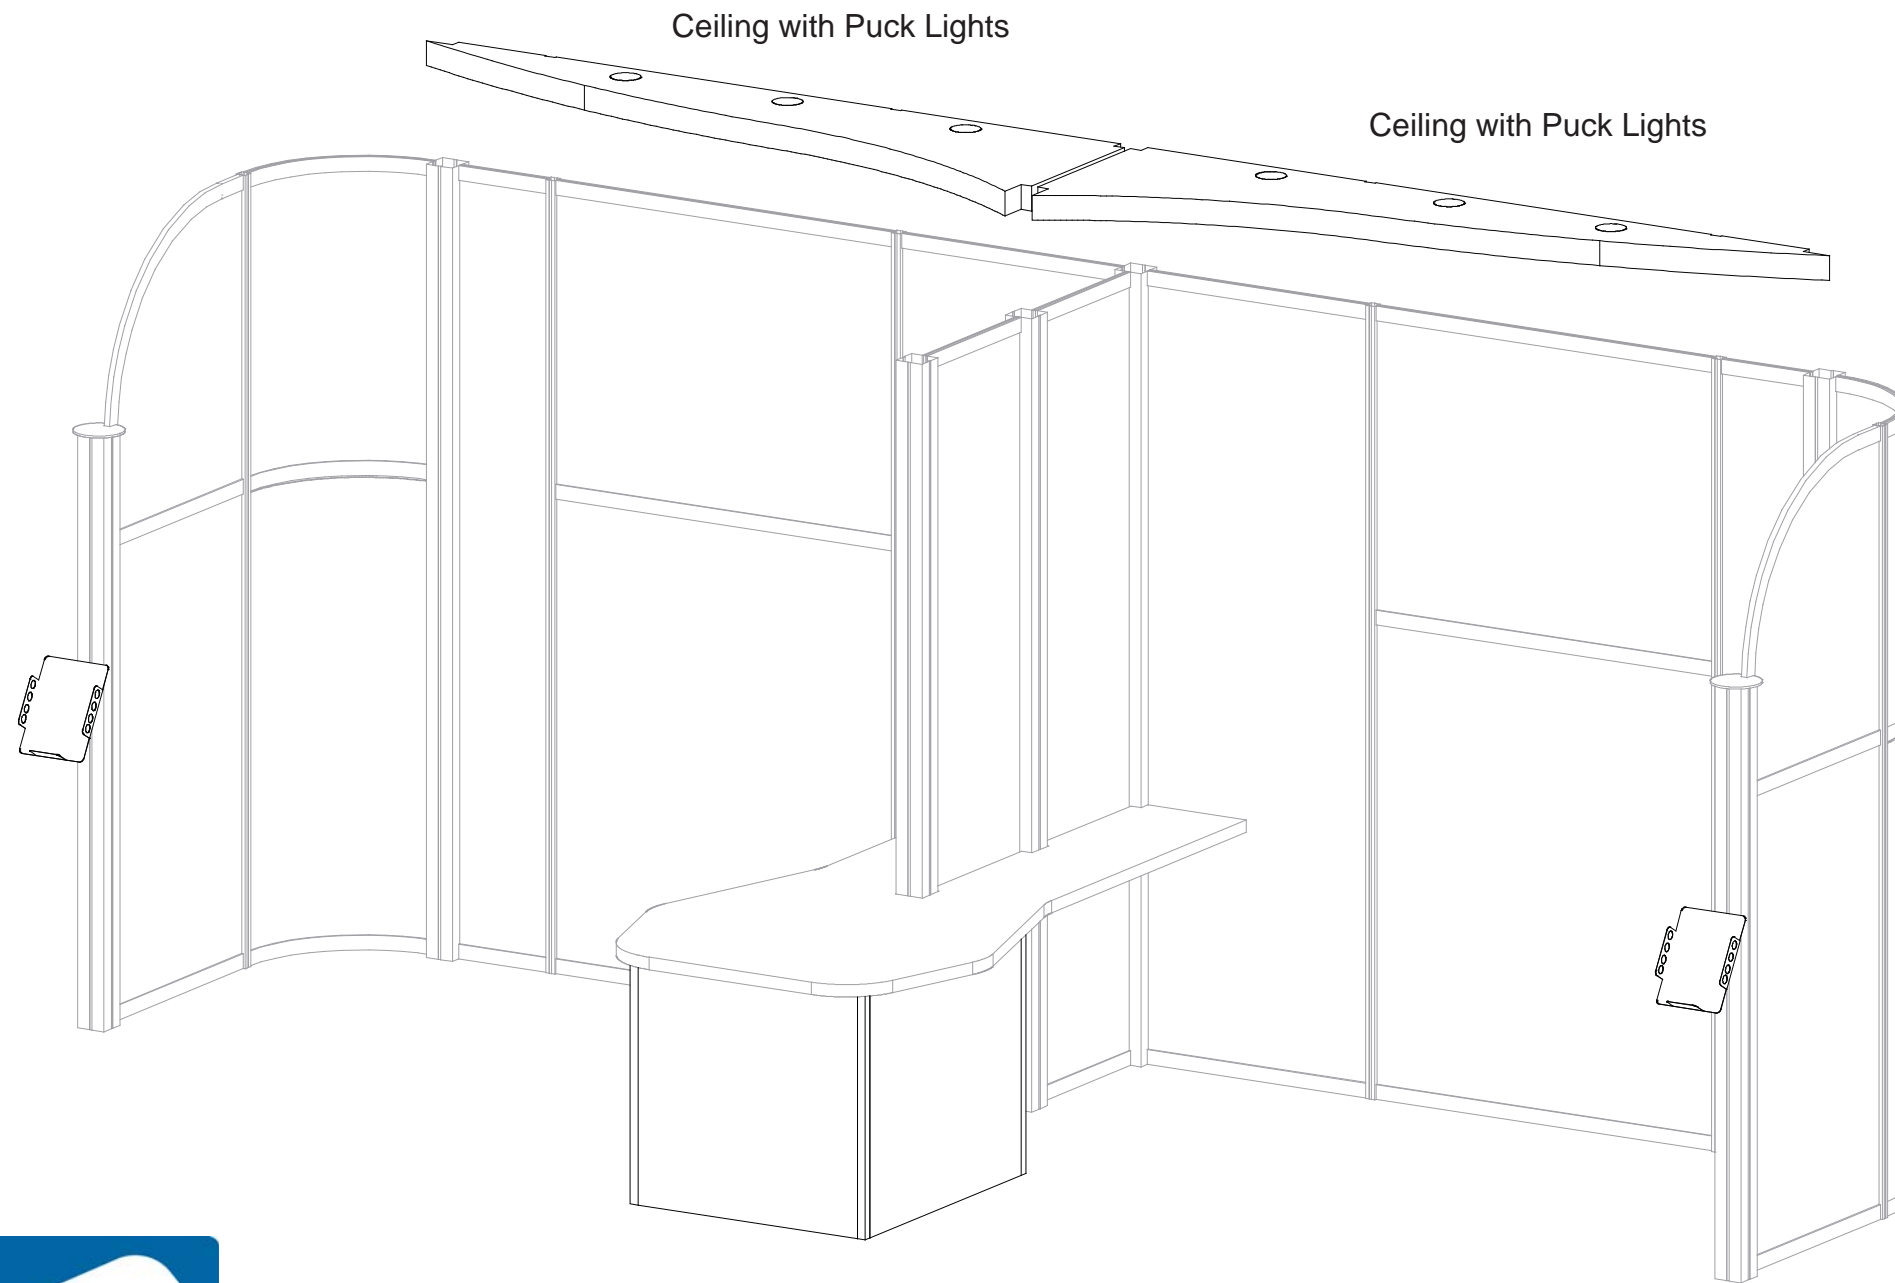


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Steps:

- 1) Attach monitor mounts to assembled backwall where indicated.
- 2) Velcro graphic panels where indicated.

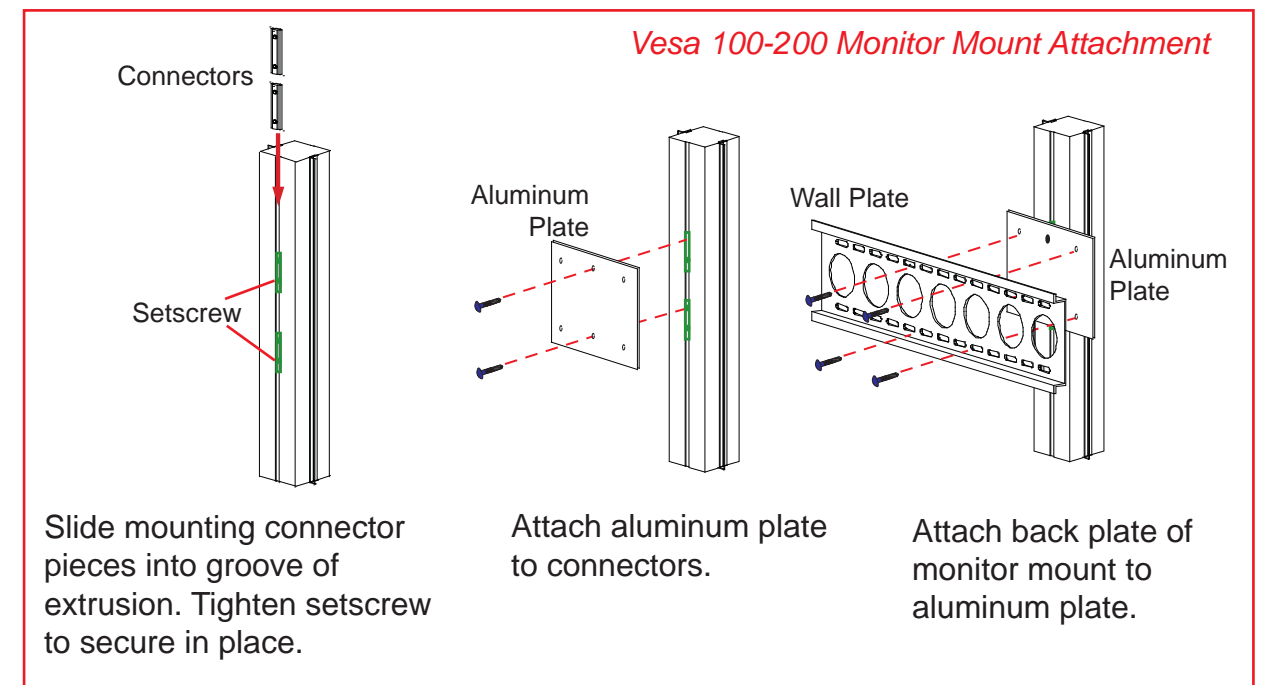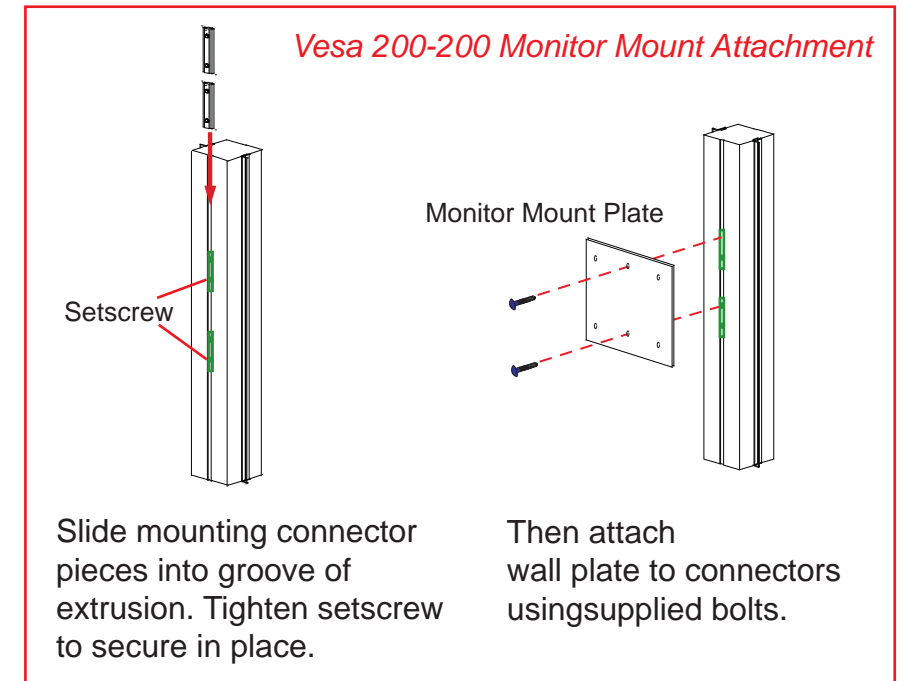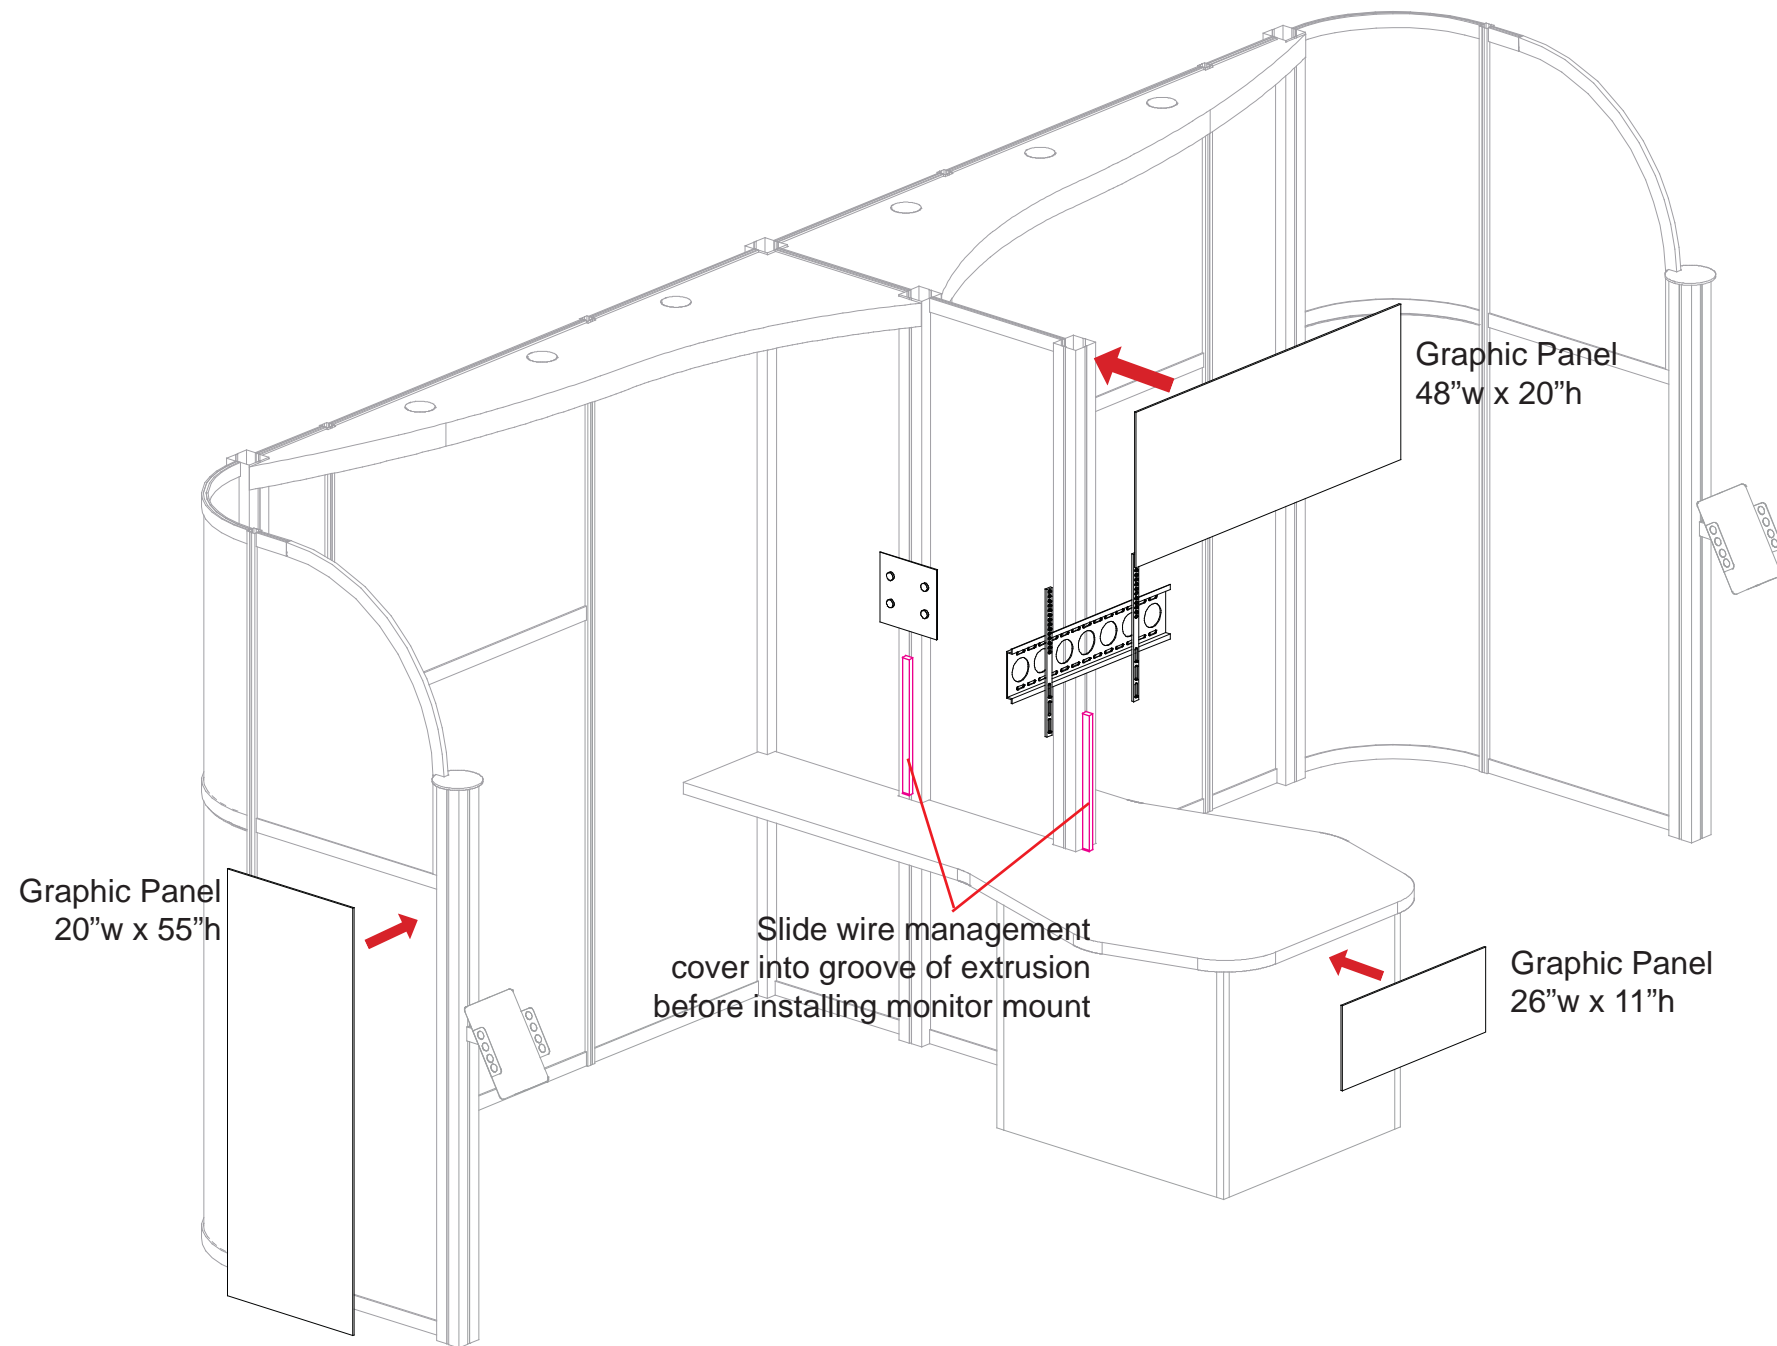

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

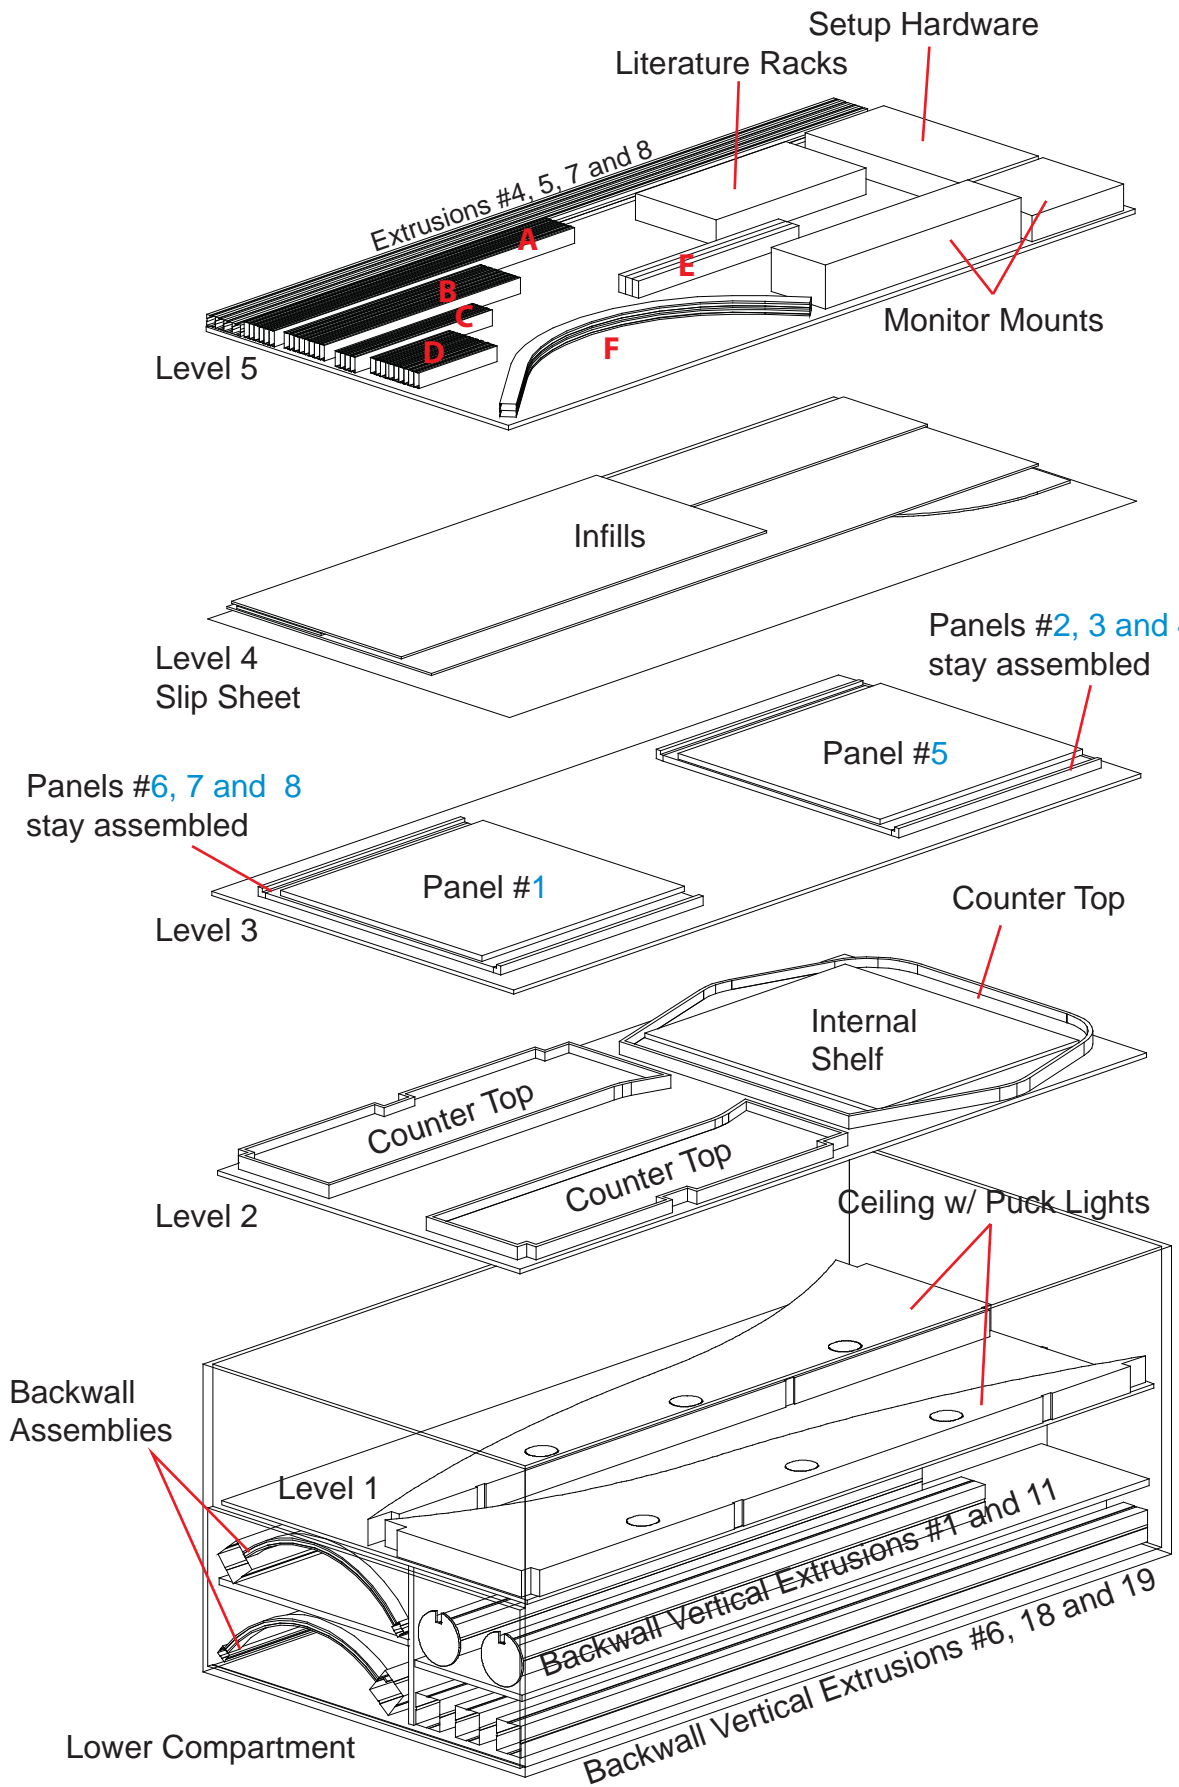

Part List

- A - (4) Extrusions #16
- B - (4) Extrusions #17
- C - (4) Extrusions #20
- D - (4) Extrusions #12
- (6) Extrusions #21
- E - Wire Cover
- F - Curved Extrusions #13

