

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

euro lt | HYBRIDS

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

General Setup Instructions for Extrusion System



The Tool

Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Typical Connection

Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.



Typical Connection (cont'd)

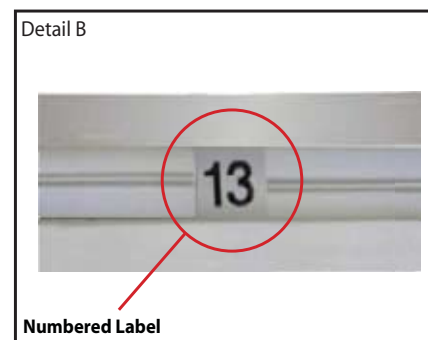


Numbered Label

Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.




Horizontal Inline Connection (remove only one setscrew)

Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

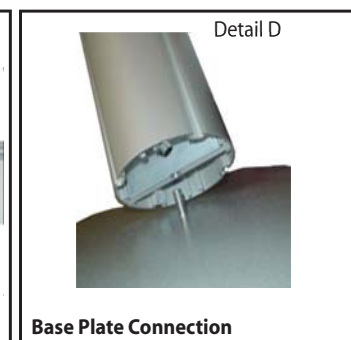

Base Plate Connection


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

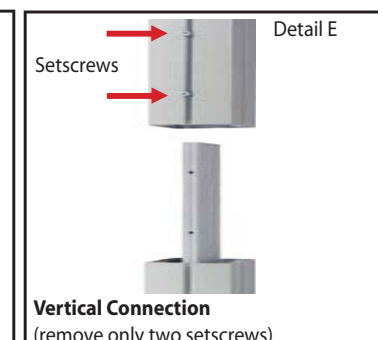

Vertical Connection (remove only two setscrews)


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.

Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

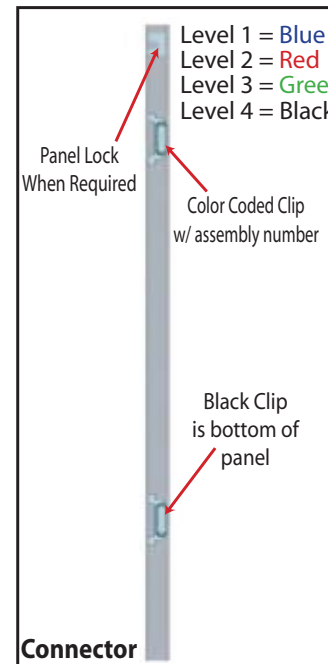


Connector

Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

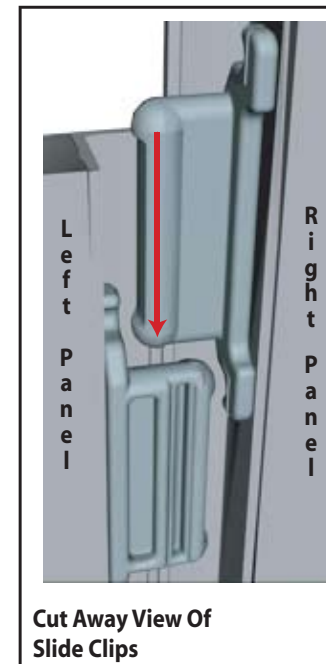


Cut Away View Of Slide Clips

Components connect together by aligning them and sliding downward connecting clips together.

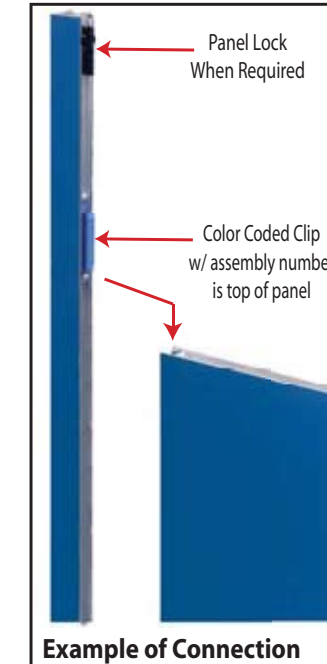

Example of Connection

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

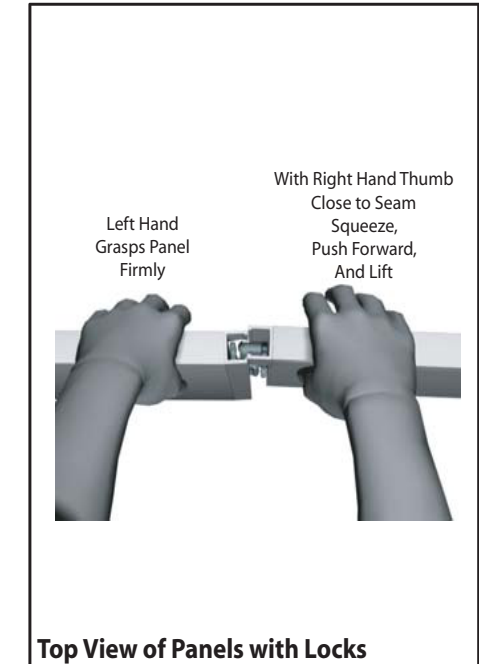

Top View of Panels with Locks

The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING



866.652.2100

Part Number	Qty	Description
3/3a	1/1	48" h Vertical Extrusion
4/4a	1/1	48" h Vertical Extrusion
5/5a	1/1	48" h Vertical Extrusion
6/6a	1/1	48" h Vertical Extrusion
11	8	24" w Horizontal Extrusion
12a/12b/12c	2/2/2	37" W Curved Horizontal Extrusion
12d/12e/12f	1/1/1	37" W Curved Horizontal Extrusion w/ holes for counter
12g/12h/12i	1/1/1	37" W Curved Horizontal Extrusion w/ pins for ceiling
14	1	34.418" h Vertical Extrusion

Steps

- 1) Connect vertical extrusions together using connecting pieces, see Connection Detail.
- 2) Attach horizontal extrusions [11] between vertical assemblies, placing inserts as indicated.
- 3) Connect horizontal extrusions [12a to 12b to 12c] together.
- 4) Attach lower horizontal assembly [12a/12b/12c] between vertical assemblies, placing inserts and attaching separator [14] as indicated.
- 5) Continue placing inserts and attaching middle and upper horizontal assemblies [12a/12b/12c, 12d/12e/12f, and 12g/12h/12i] as shown.

- * Contains pins that must face forward and are 1/4" up from bottom of extrusion.
- * Contains holes that must face forward and are 1" up from TOP of extrusion.
- * Contains slots that must face inward towards center of booth for extrusion connection.

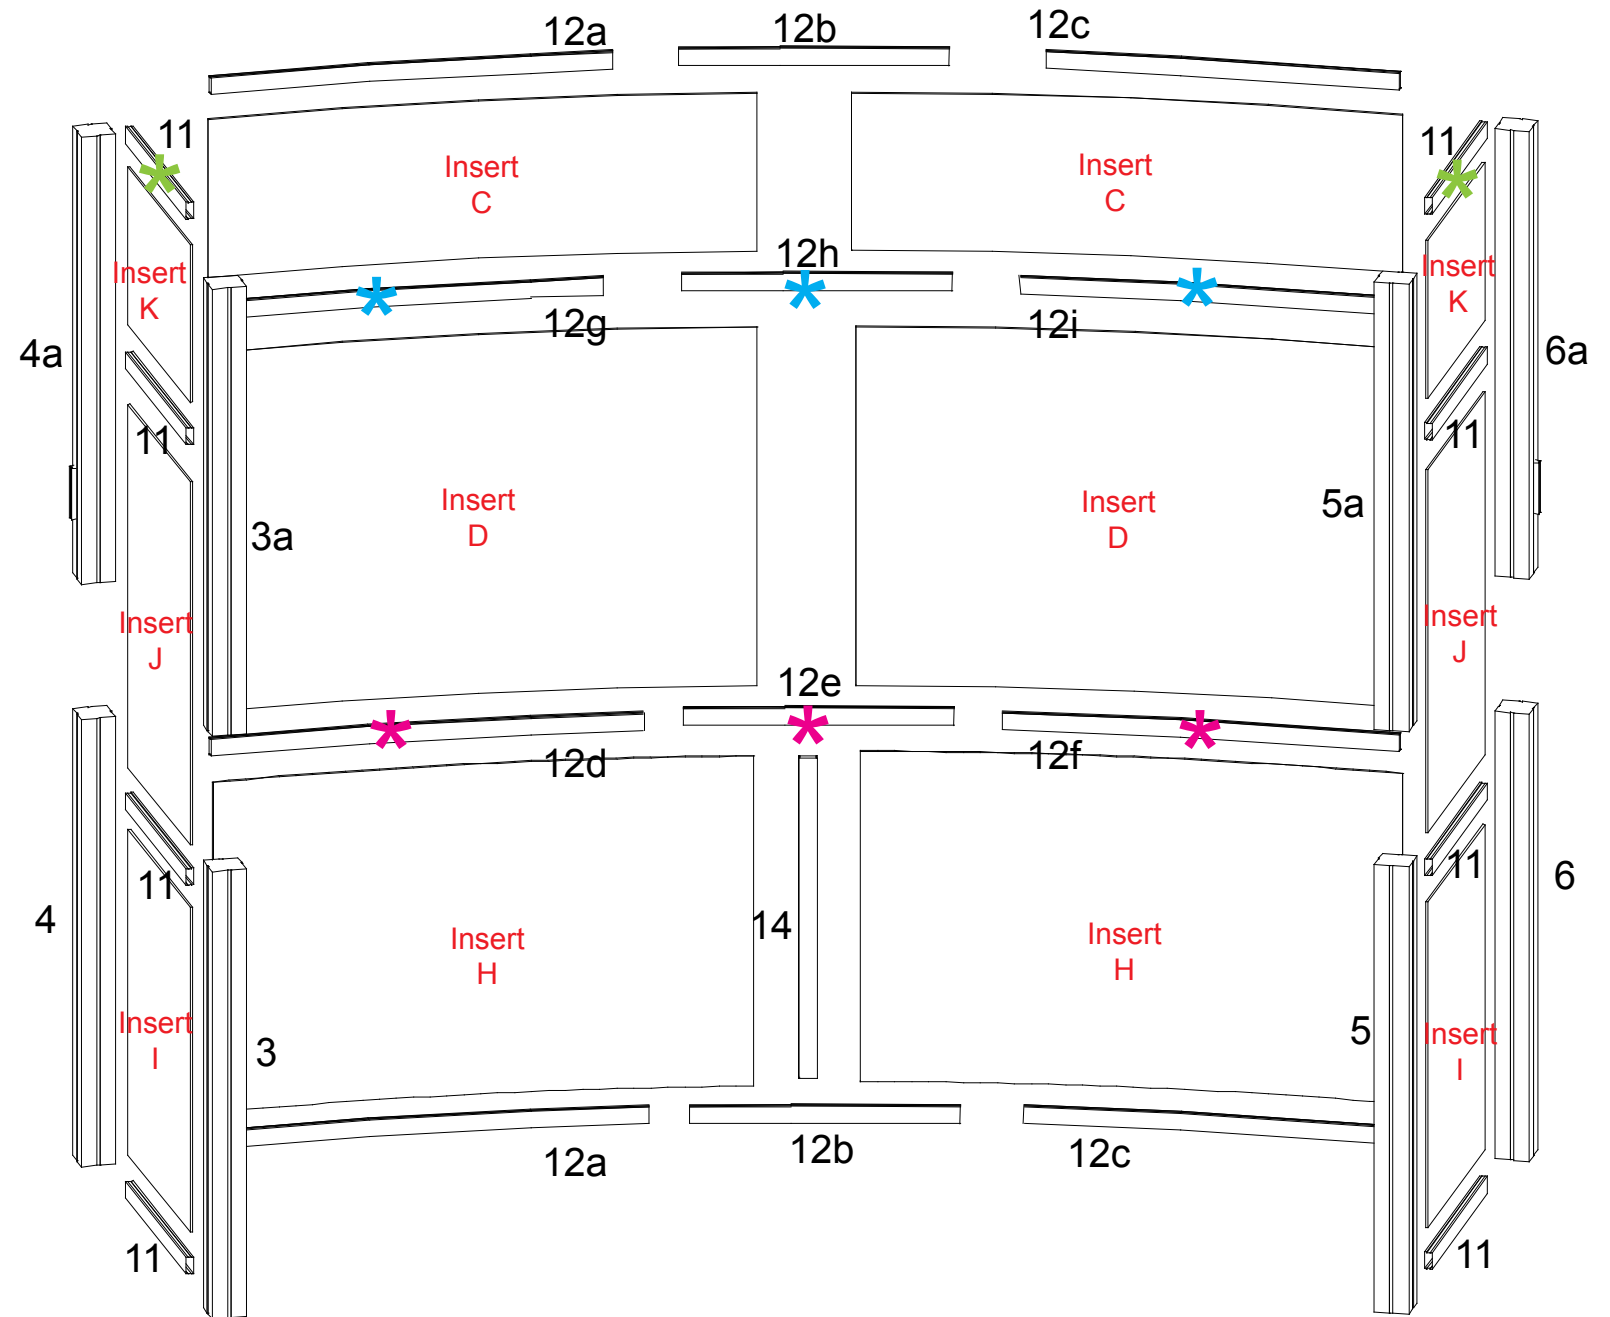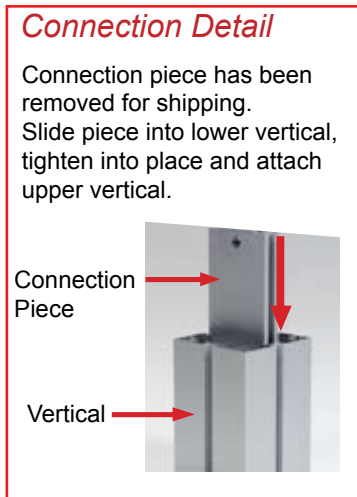


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100


Part Number	Qty	Description
16a/16b	2/2	48.96"w Curved Horizontal Extrusion
19	1	33.918"h Vertical Extrusion
20	1	33.918"h Vertical Extrusion
21	1	33.918"h Vertical Extrusion
22	1	33.918"h Vertical Extrusion

- Steps
- 1) Connect horizontal extrusions [16a to 16b] together.
 - 2) Attach lower horizontal extrusion assemblies [16a/16b] between vertical extrusions.
 - 3) Attach vertical extrusions [19 thru 22] to lower horizontal extrusions, leave loose.
 - 4) Place inserts and attach doors where indicated, then tighten vertical extrusions [19 thru 22].
 - 5) Attach horizontal extrusion assemblies [16a/16b] between vertical extrusions and atop inserts and doors.

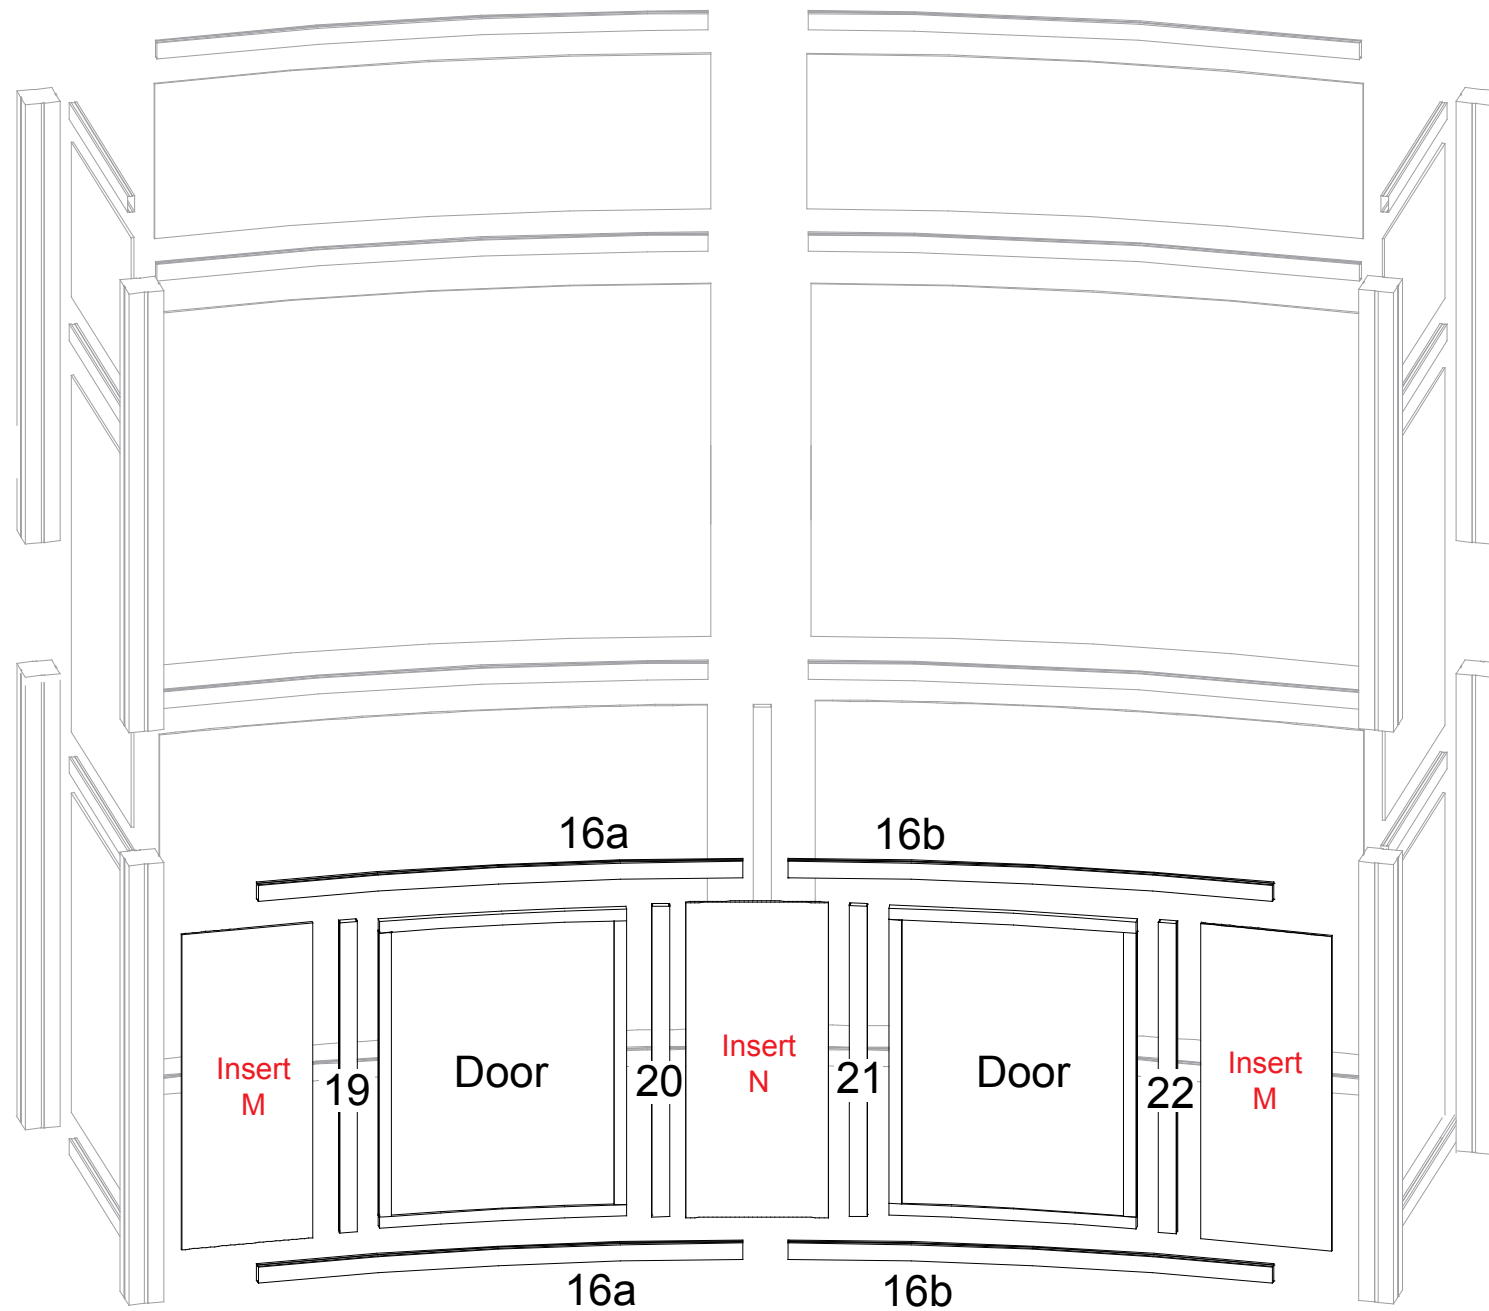

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Place internal shelf atop Velcroed shelf support, then place counter atop assembled alcove.

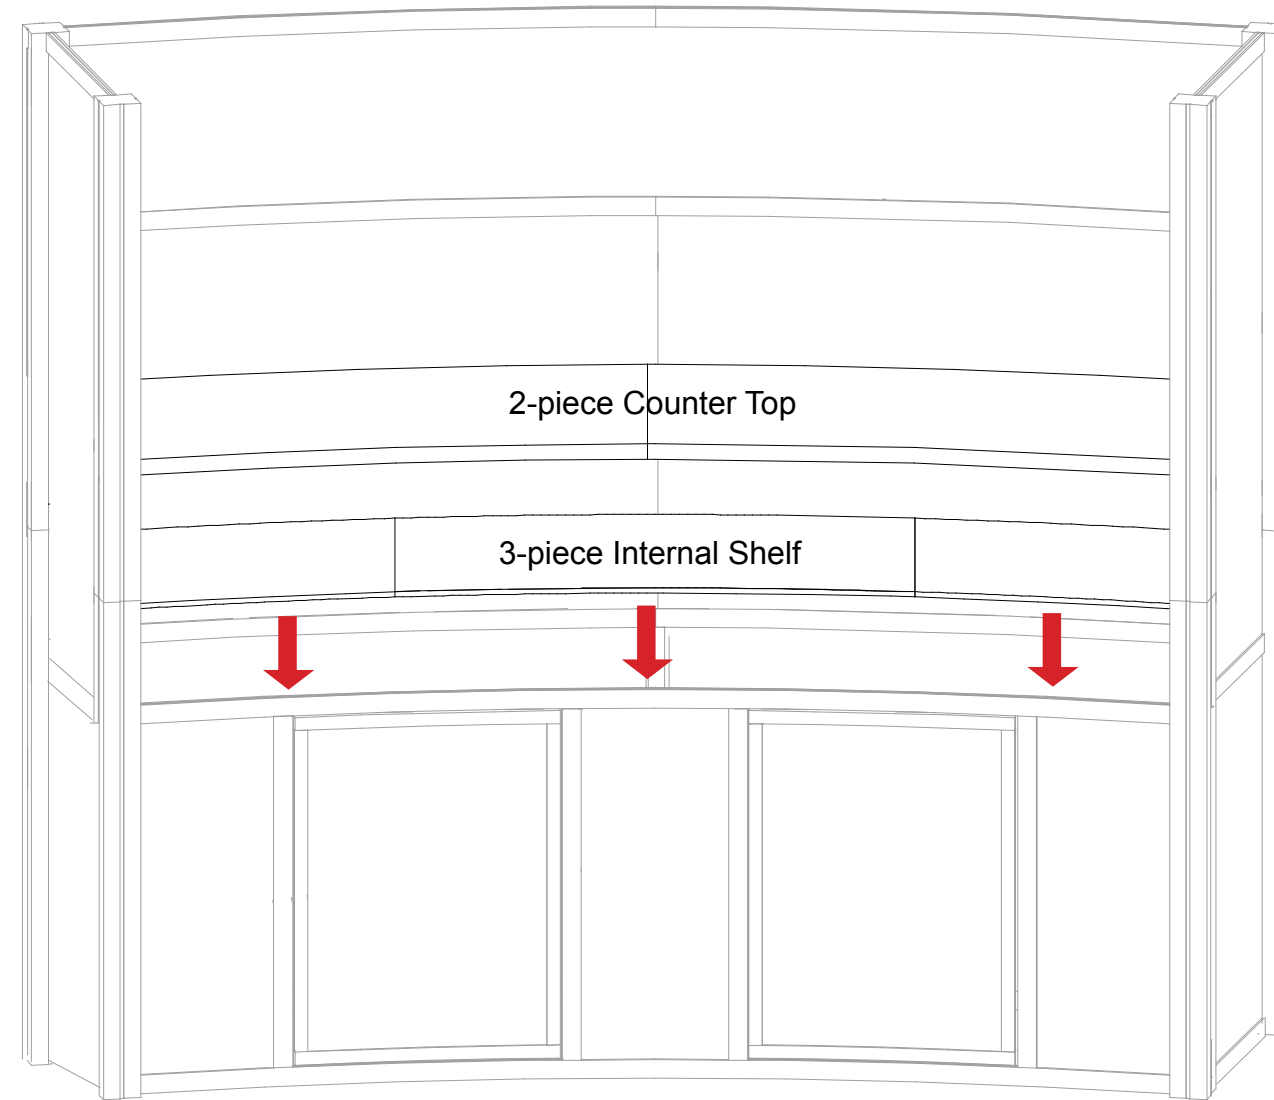


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Part Number	Qty	Description
16a/16b	1/1	48.96" w Curved Horizontal Extrusion
16c/16d	1/1	Curved Horizontal Extrusion
12j/12k/12l	1/1/1	Curved Horizontal Extrusion

- Steps cont'd from previous pages:
- 6) Attach upper horizontal extrusions [16a/16b] between vertical extrusions, placing header inserts where indicated.
 - 7) Connect extrusions [12j to 12k to 12l] then connect to slots located in the center of extrusions [11] from previous steps.
 - 8) Attach reflectors [P] to Velcro on extrusions [12] then attach lights.

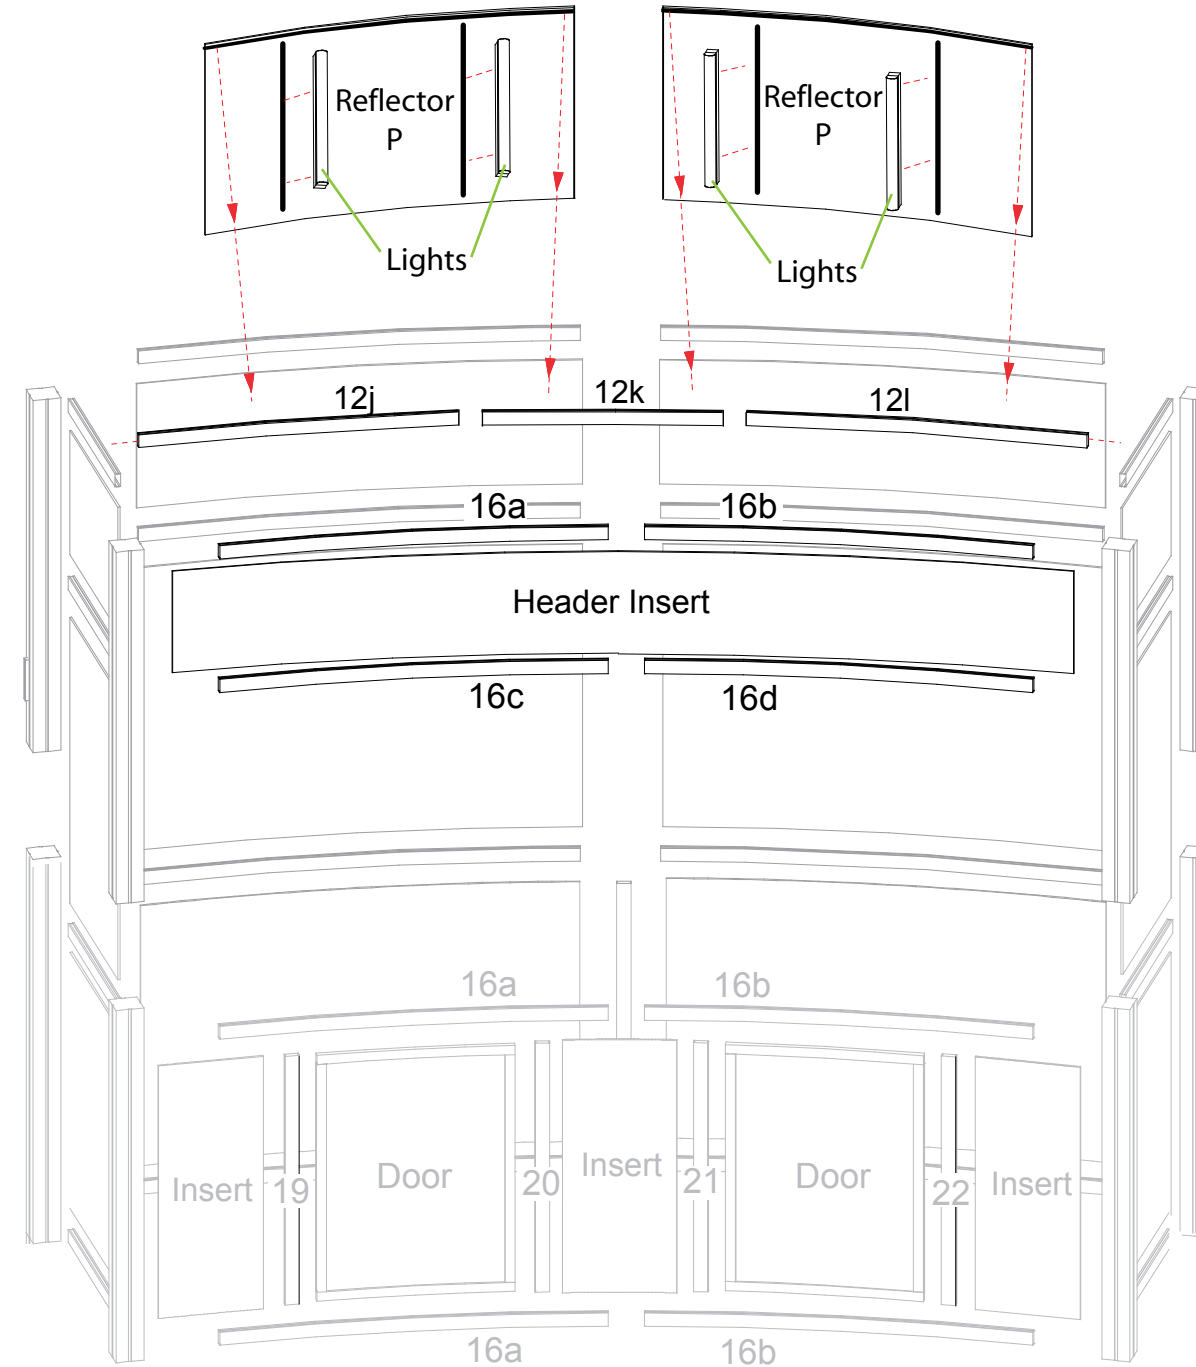


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Place Ceiling into assembled Header Sections atop pins.

Lights need to be removed for packing purposes.

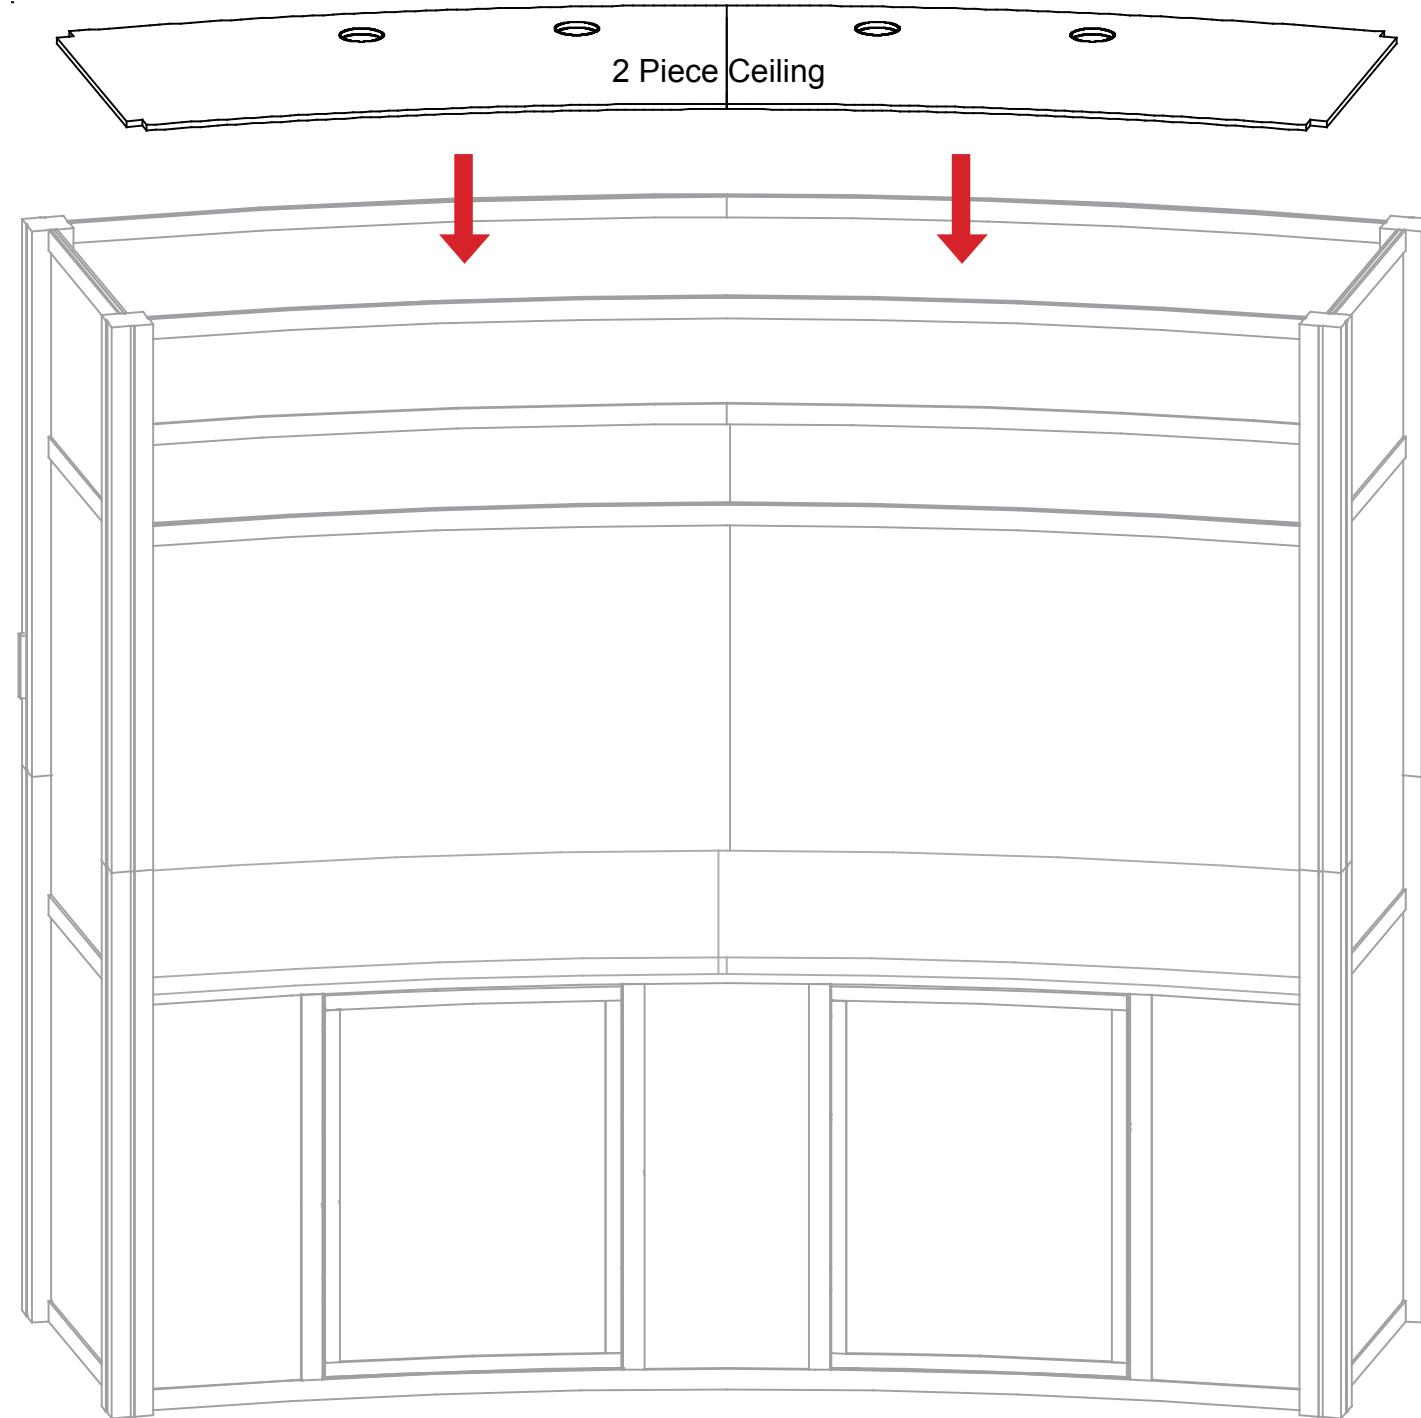

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Counter Base



Part Number	Description
1	Side Panel
2	90° Connector/Back Panel/90° Connector
3	Side Panel
4	90° Connector/Front Panel w/ Door/90° Connector

Modul Extrusion



Part Number	Description
25	Vertical Extrusion
26	Vertical Extrusion

Steps

- 1) Attach vertical extrusion [25] to lower vertical extrusion [26] and connect to rotating base using hardware provided.
- 2) Assemble counter base together in numerical number around vertical post and atop base.
- 3) Velcro shelf supports to inside of assembled base, then set internal shelf atop supports by sliding down over vertical extrusion.
- 4) Slide Counter Top over vertical extrusion and place atop assembled base.
- 5) Attach monitor mount to connectors on vertical extrusion.
- 6) Repeat steps for additional workstation.

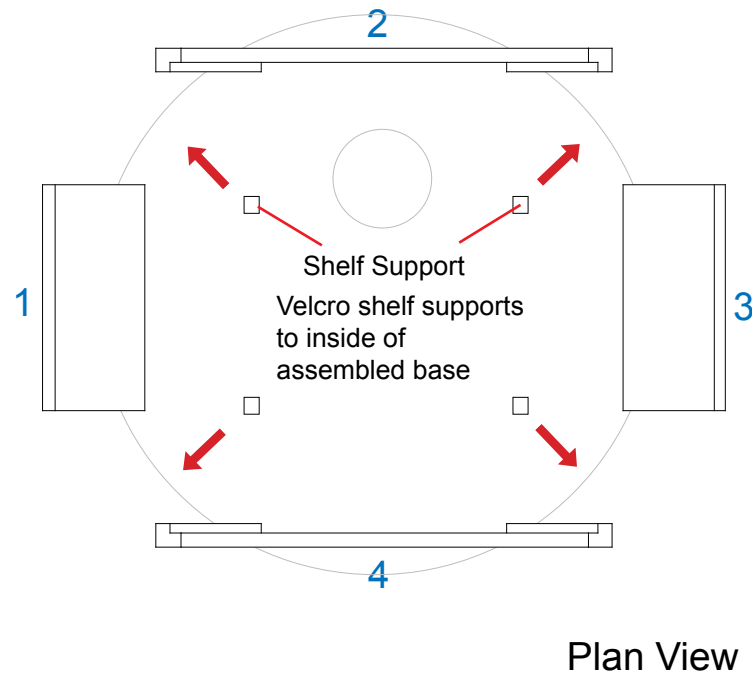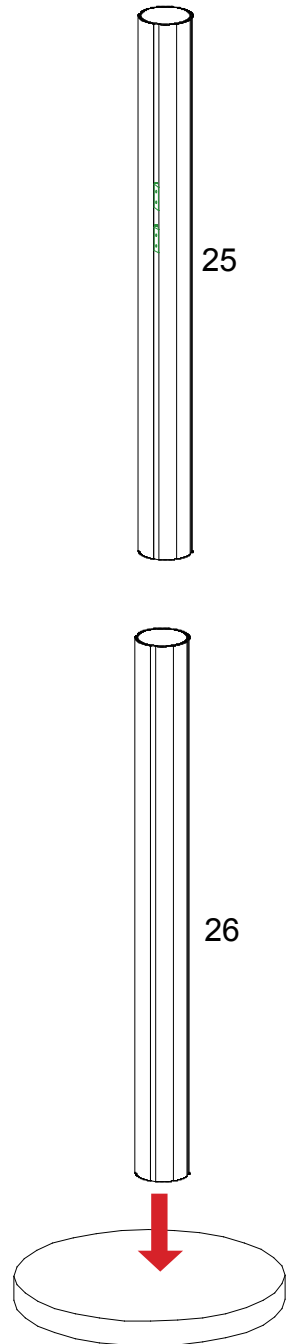

Plan View

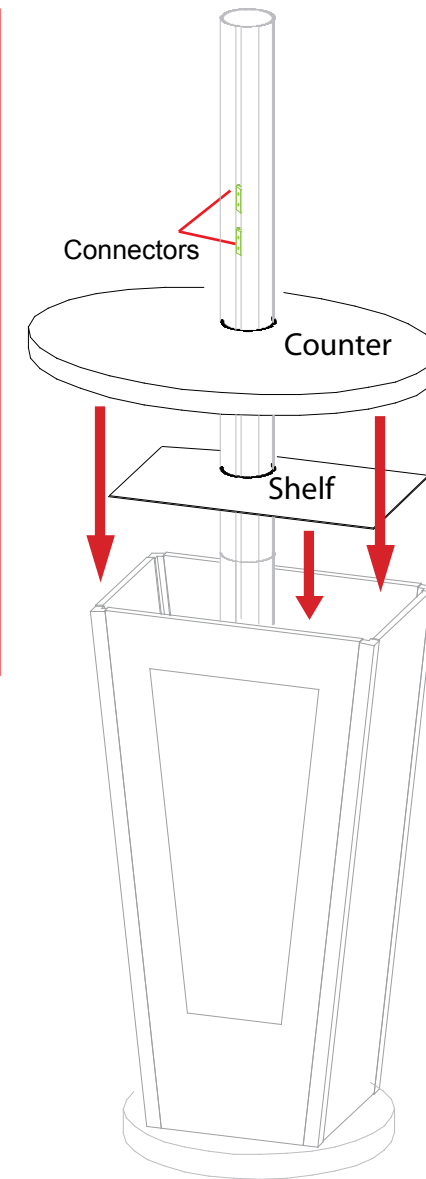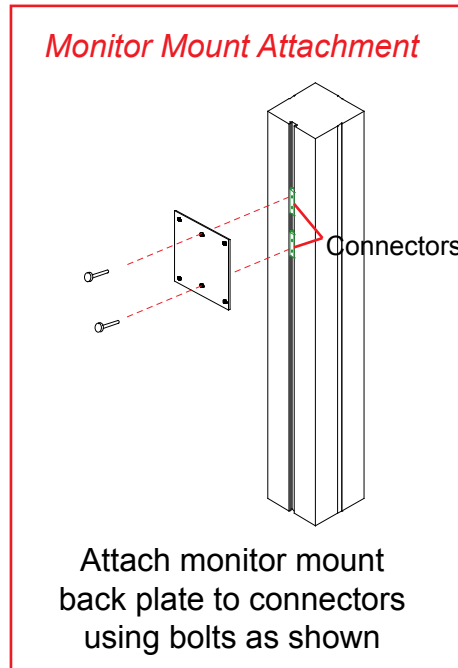

Rotating Base

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL
SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING