10'

Plan View

20'

Perspective View

SETUP INSTRUCTIONS

If you would like to tell us about your experience with your setup instructions please email us at **info@classicexhibits.com**

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.

- The setup instructions are created specifically for this configuration.

- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.

- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**

- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.
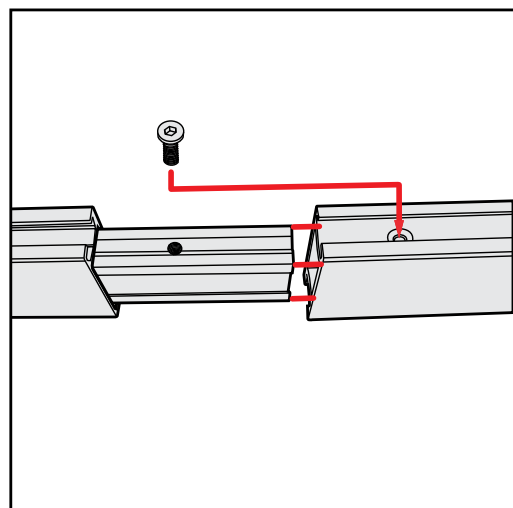
Disassembly

- For loss prevention, tighten all setscrews and locks during disassembly
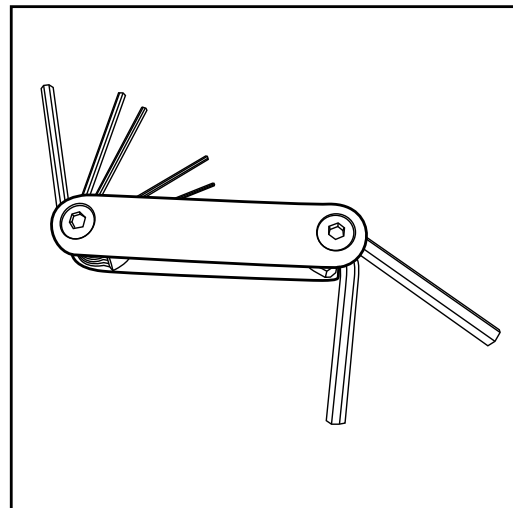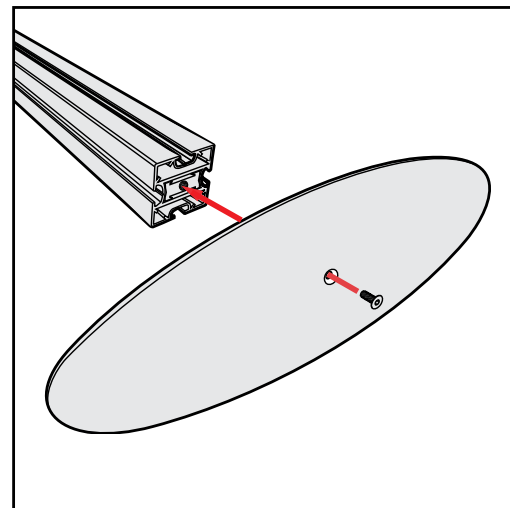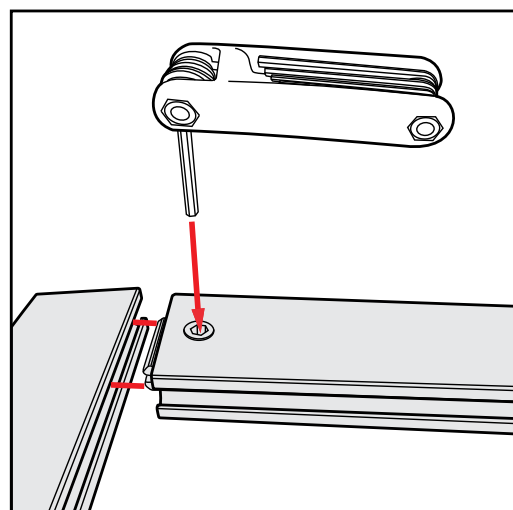
Hex Tool - Essential for Assembly
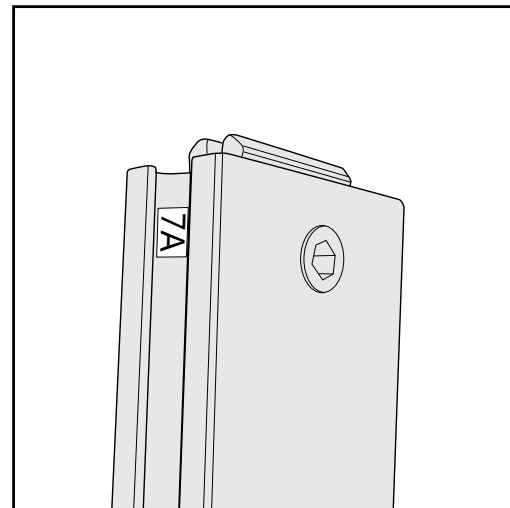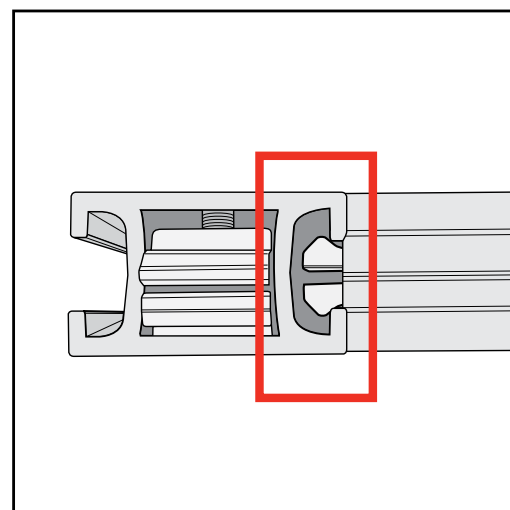
Part Identification - Numbering

Spline Connection

Base Plate & Extrusion Connection

Extrusion & Lock Connection
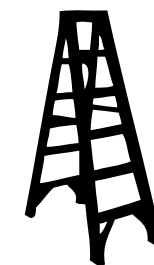
Engaged Lock

WARNING

DO NOT USE POWER TOOLS

LADDERS OR LIFTS MAY BE REQUIRED

ALL CONNECTIONS MUST BE TIGHTLY SECURED

VisIonary™ © 2017
DESIGNS

SEG Graphic Installation

1) Locate channels along the edges of extrusions

2) Insert graphic corners first into channels then center point of graphic into channels. Allows for proportional fit around the perimeter of the extrusion.

3) Working from center to corner, slide silicon edge on graphic into channel.

4) After all edges of graphic have been inserted into channels, step back and assess graphic fit, make adjustments where needed.


Fold edges over.

Insert into groove of frame
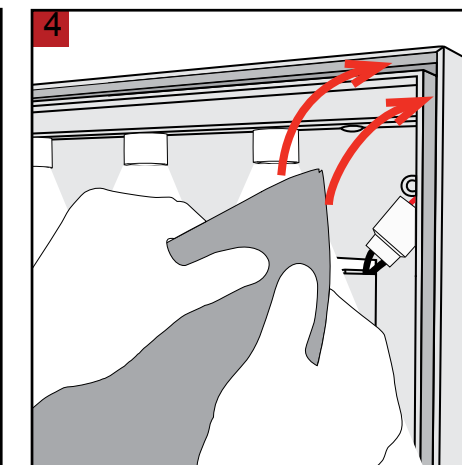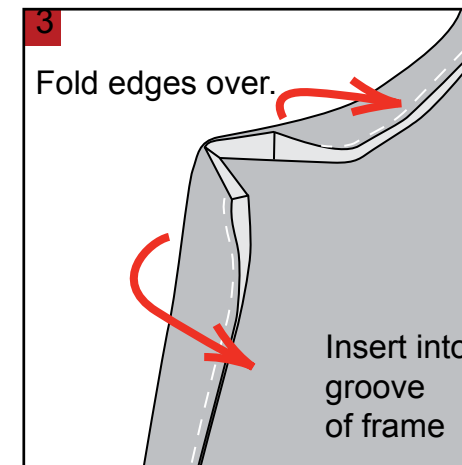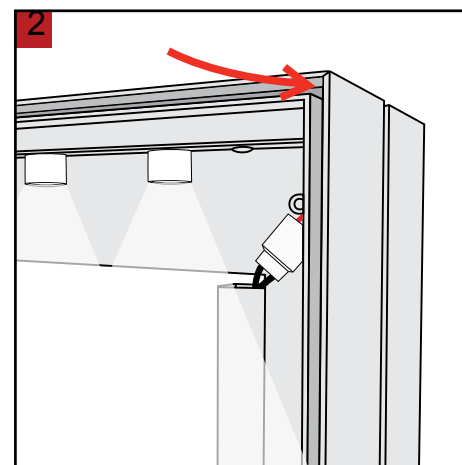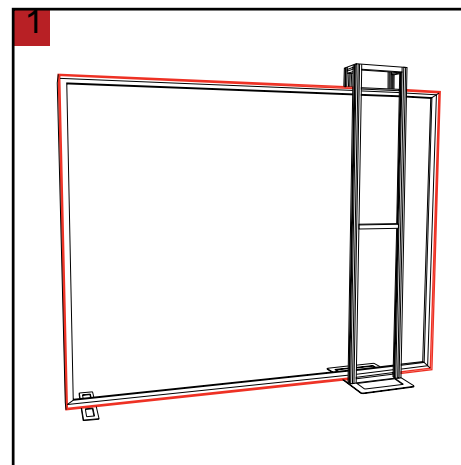
LT Panel Assembly

1) With a vertical offset, place LT-Panels side-by-side; slide vertically offset panel down to lock panels together and in place.

2) Corner Connectors (90°, T-Connector, Straight Connector) connect just as panels connect together. Repeat Step 1 for installing corner connectors to panels.
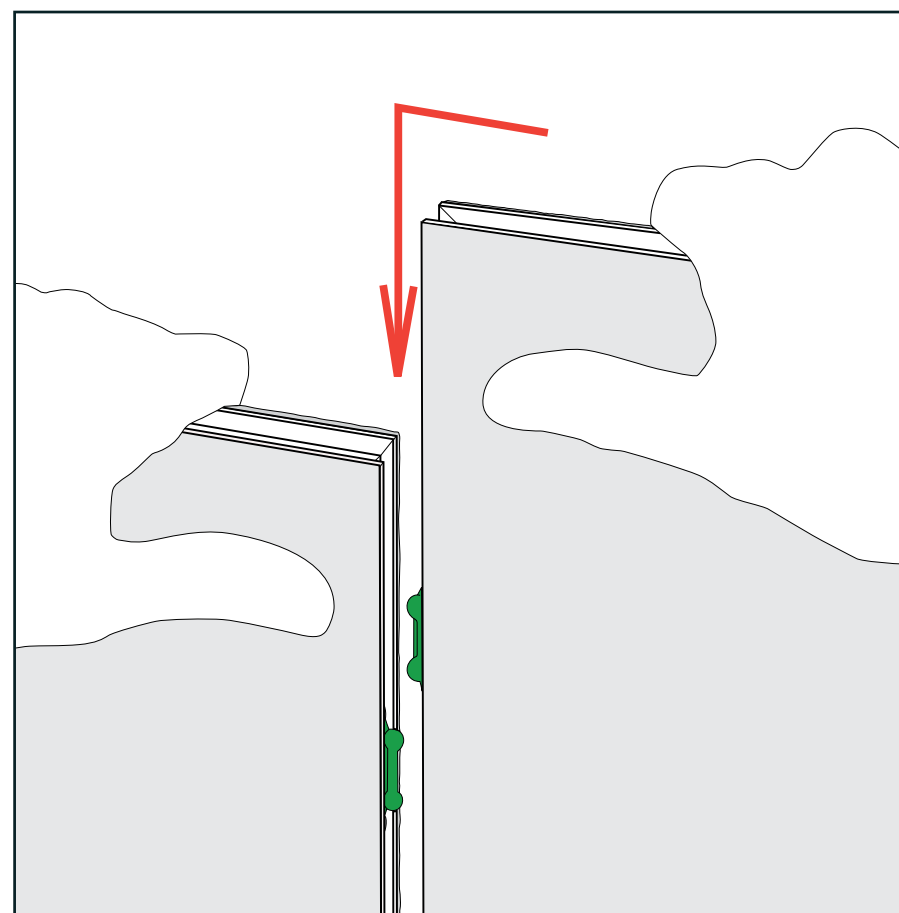
LT Panel Disassembly

1) To disassemble push panel with upper locks horizontally to disengage top lock clip.
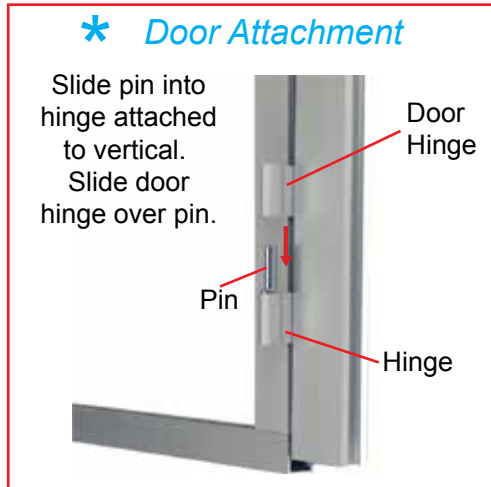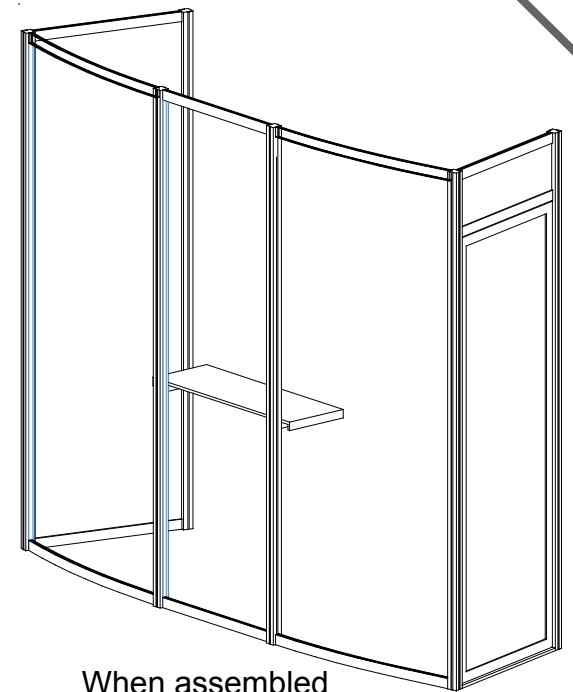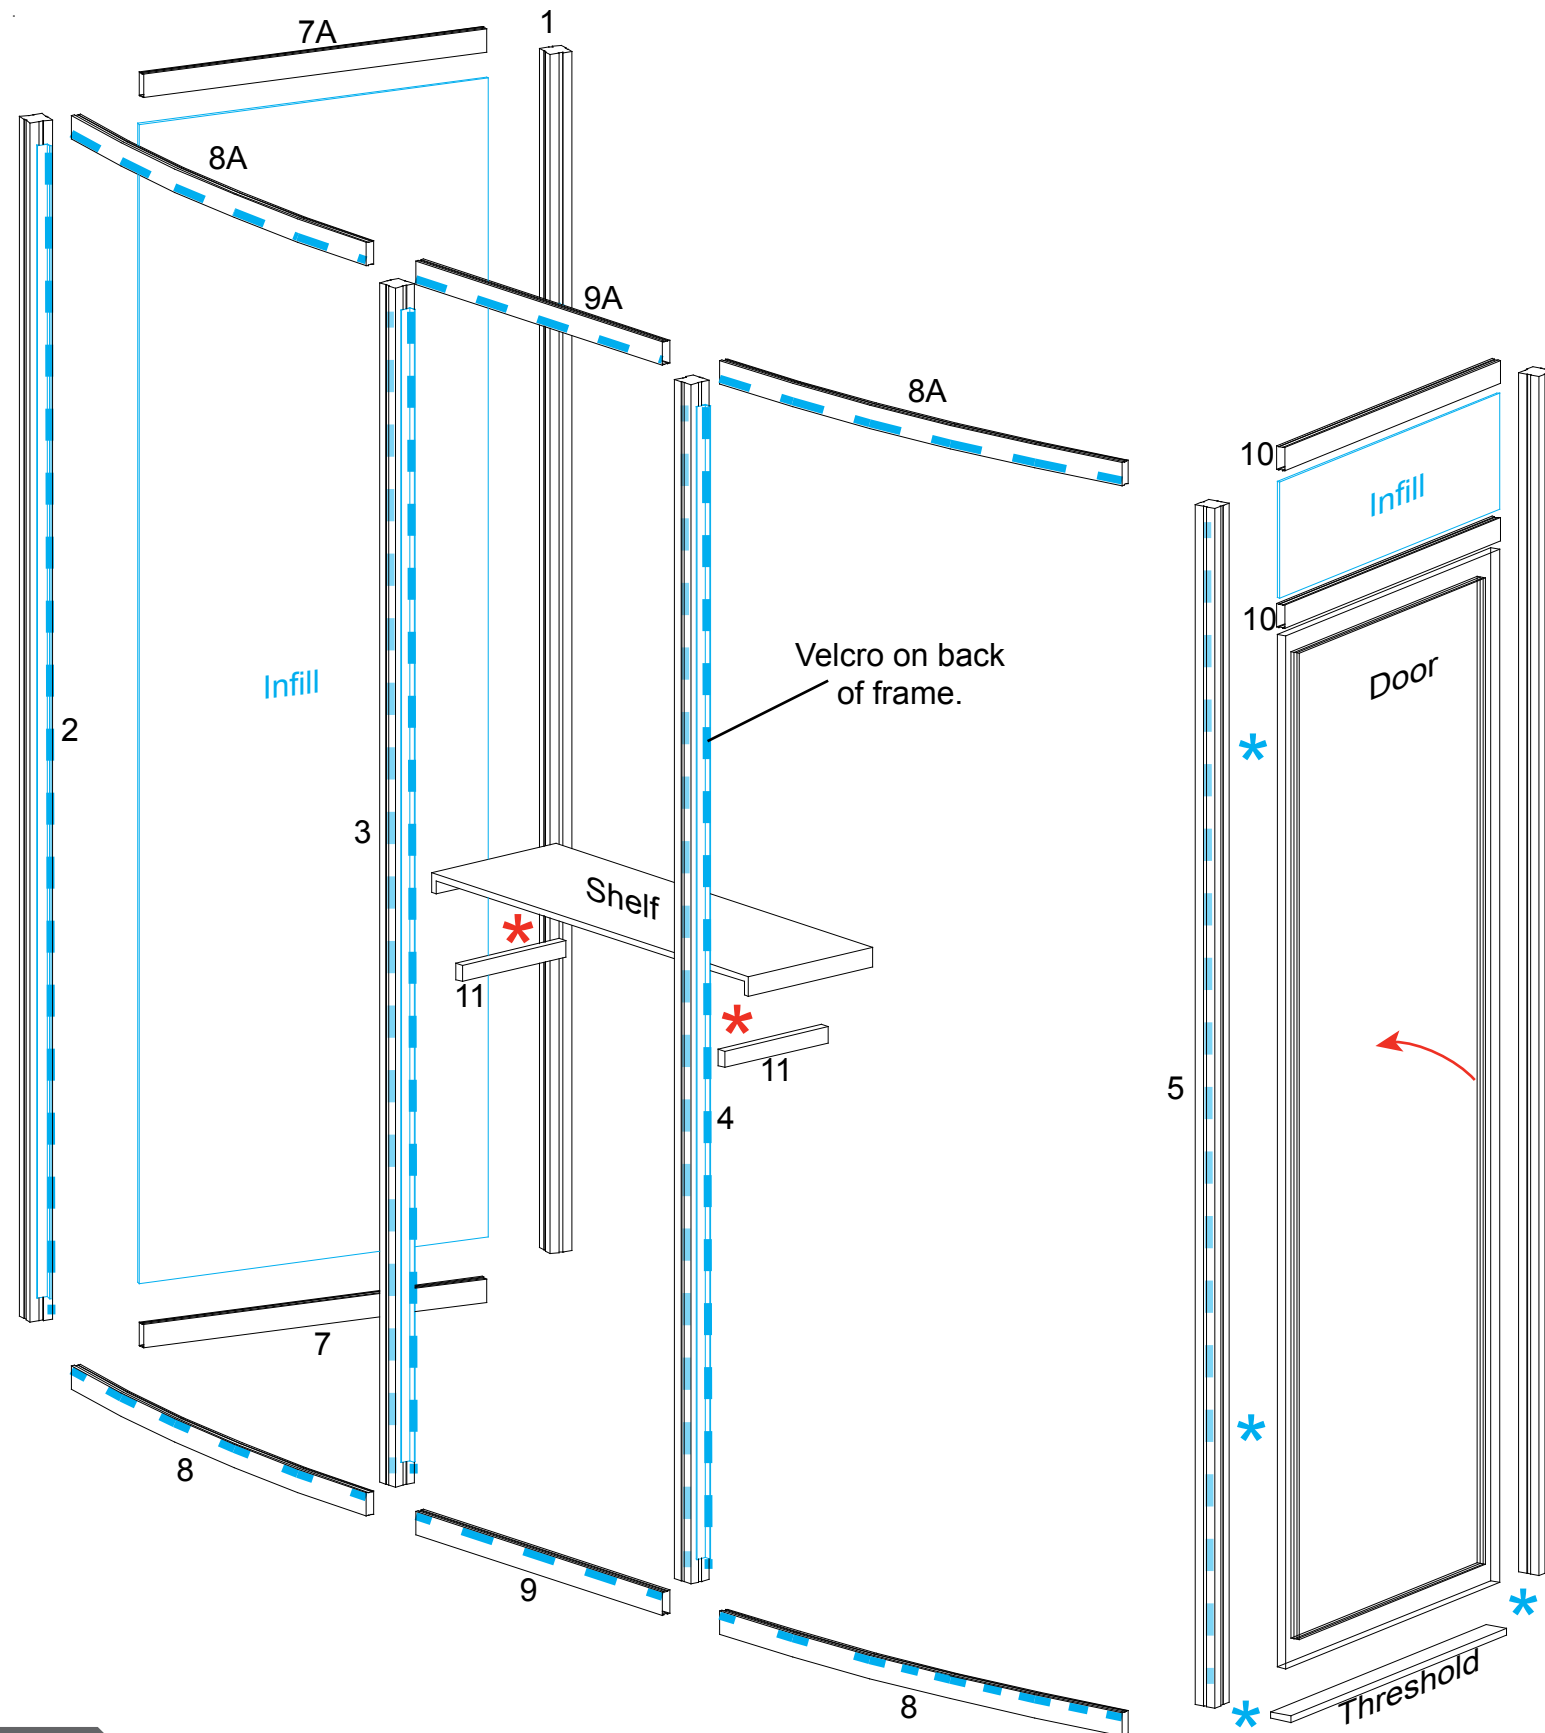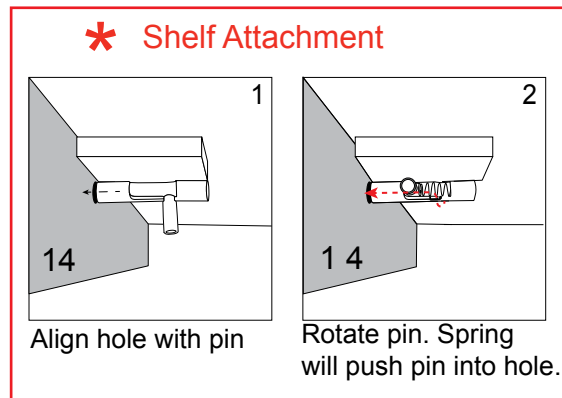
2) Slide panels or connectors vertically in opposing directions to release latches and disconnect parts.

While pushed in, pull panel up to disassemble

Push Panel in to disengage the lock.

www.classicexhibits.com
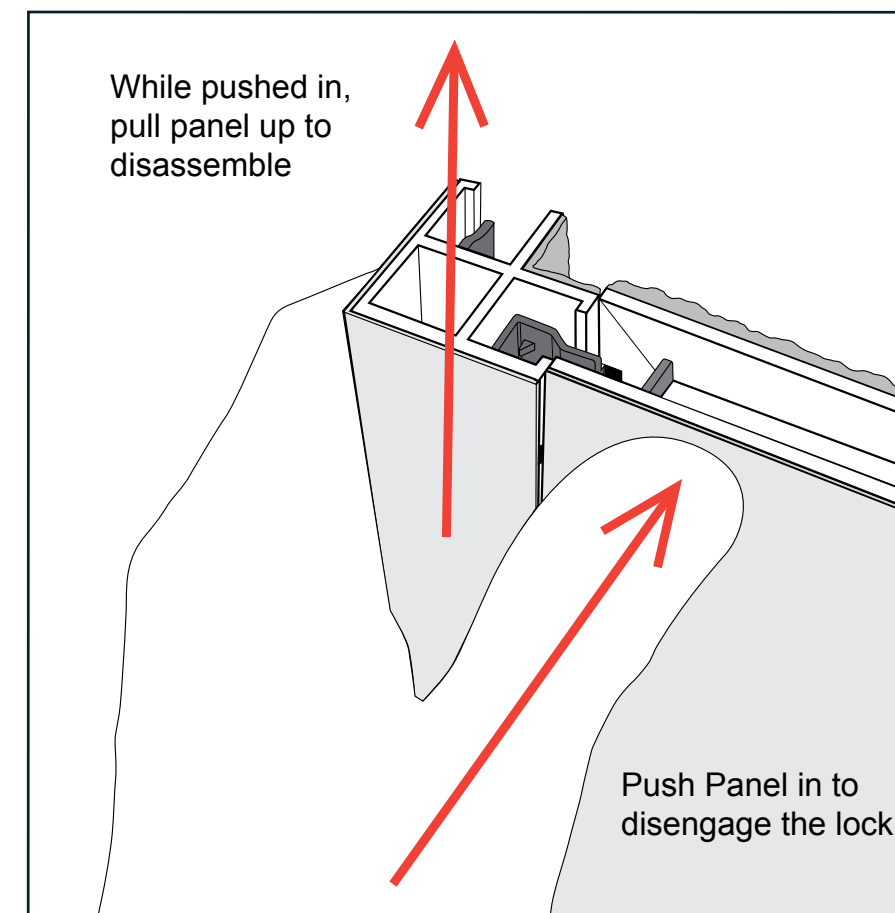
| Item	Qty.	Description
1	1	92"h S44 Vertical Extrusion
2	1	92"h S44 Vertical Extrusion
3	1	92"h S44 Vertical Extrusion
4	1	92"h S44 Vertical Extrusion
5	1	92"h S44 Vertical Extrusion
6	1	92"h S44 Vertical Extrusion
7/7A	1/1	28"w Z45 Horizontal Extrusion
8/8A	2/2	40.088" Z45 Curved Horzontal
9/9A	1/1	28"w Z45 Horizontal Extrusion
10	2	28"w Z45 Horizontal Extrusion
11	2	10"w Z32 Horizontal Extrusion

Steps:
1) Attach horizontals [7] & [7A] to verticals [1] & [2] with infill in between horizontals as shown.
2) Attach horizontals [8] & [8A] between verticals [2] & [3].
3) Attach horizontals [9] & [9A] between verticals [3] & [4].
4) Attach horizontals [8] & [8A] between verticals [4] & [5].
5) Connect horizontals [10] between verticals [5] & [6] with infill inserted inbetween the two extrusions as shown.
6) Install door threshold between verticals [5] & [6].
7) Install door between verticals [5] & [6] using hinges on door and vertical [5].
   See Door Attachment detail.
   NOTE: door swings towards inside of frame.
8) Apply graphics to Velcro located on inside of frame.
9) Connect Assembled shelf to back of verticals [3] & [4].
   See Shelf Attachment detail.

＊ Shelf Attachment

1

14

Align hole with pin

2

1 4

Rotate pin. Spring will push pin into hole.

When assembled

Infill

Infill

Velcro on back of frame.

Shelf

Door

Threshold

Velcro － － －

＊ Door Attachment

Slide pin into hinge attached to vertical. Slide door hinge over pin.

Door Hinge

Pin

Hinge

Slide Connector into Groove of Extrusion

Tighten setscrew to secure

Door Threshold
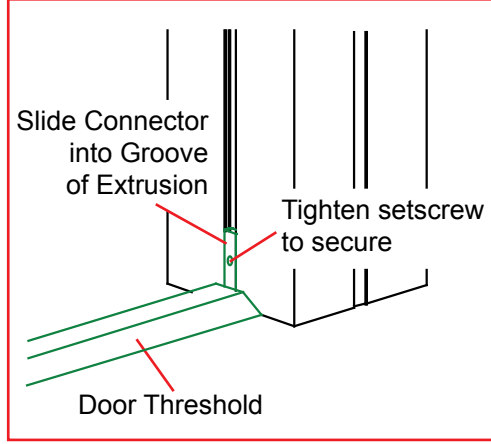
| Item	Qty.	Description
12/12A	1/1	92"w TSP46 Vertical Extrusion
13/13A	1/1	96.5532"w TSP46 Curved Horizontal Extrusion
14	1	88.417"h Z32 Vertical Extrusion

Steps:
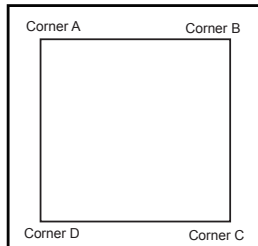1) Attach horizontal [13] between verticals [12] & [12A].
2) Connect horizontal [13A] between verticals [12] & [12A].
   See TSV1 Lock detail
3) Attach vertical [14] between horizontals [13] & [13A].
4) Install assembled frame between verticals [1] & [6].

6

1

13A

12

14

12A

13

✳ TSV1 Lock Detail

TSP46

Lock

Tighten setscrew
to secure extrusions

© 2017
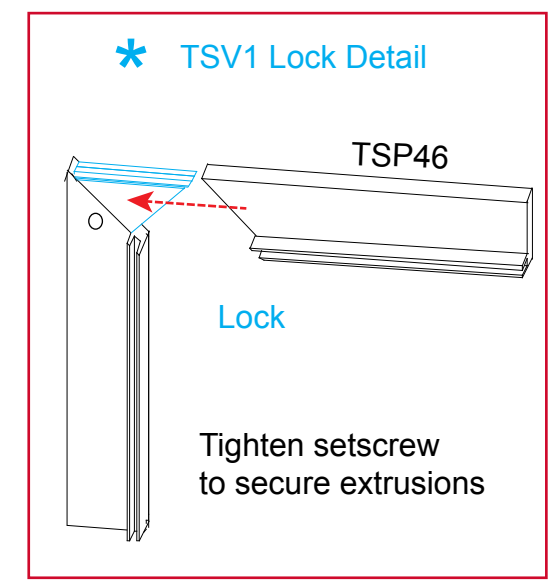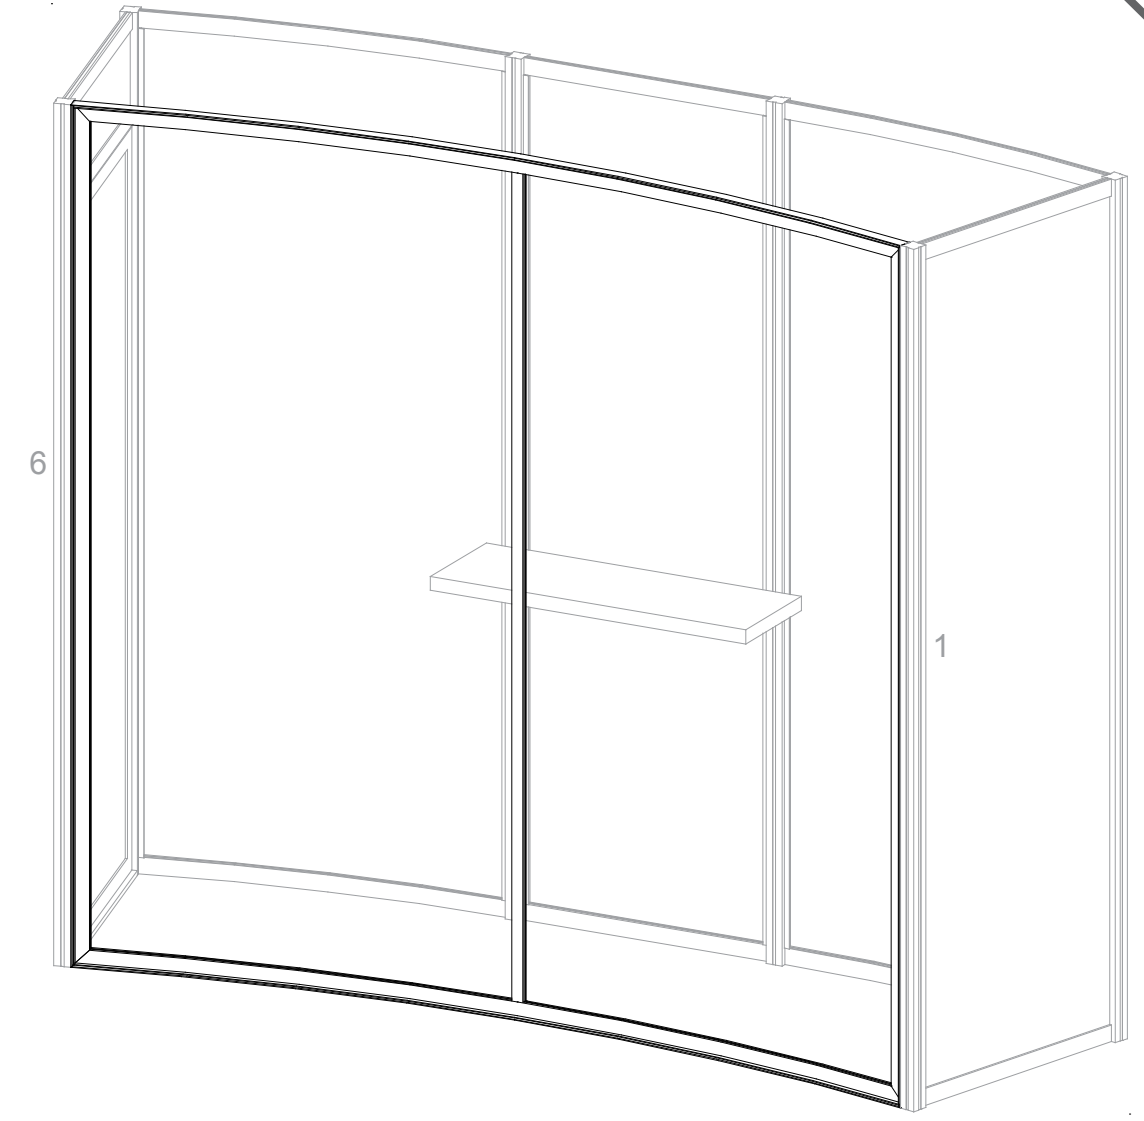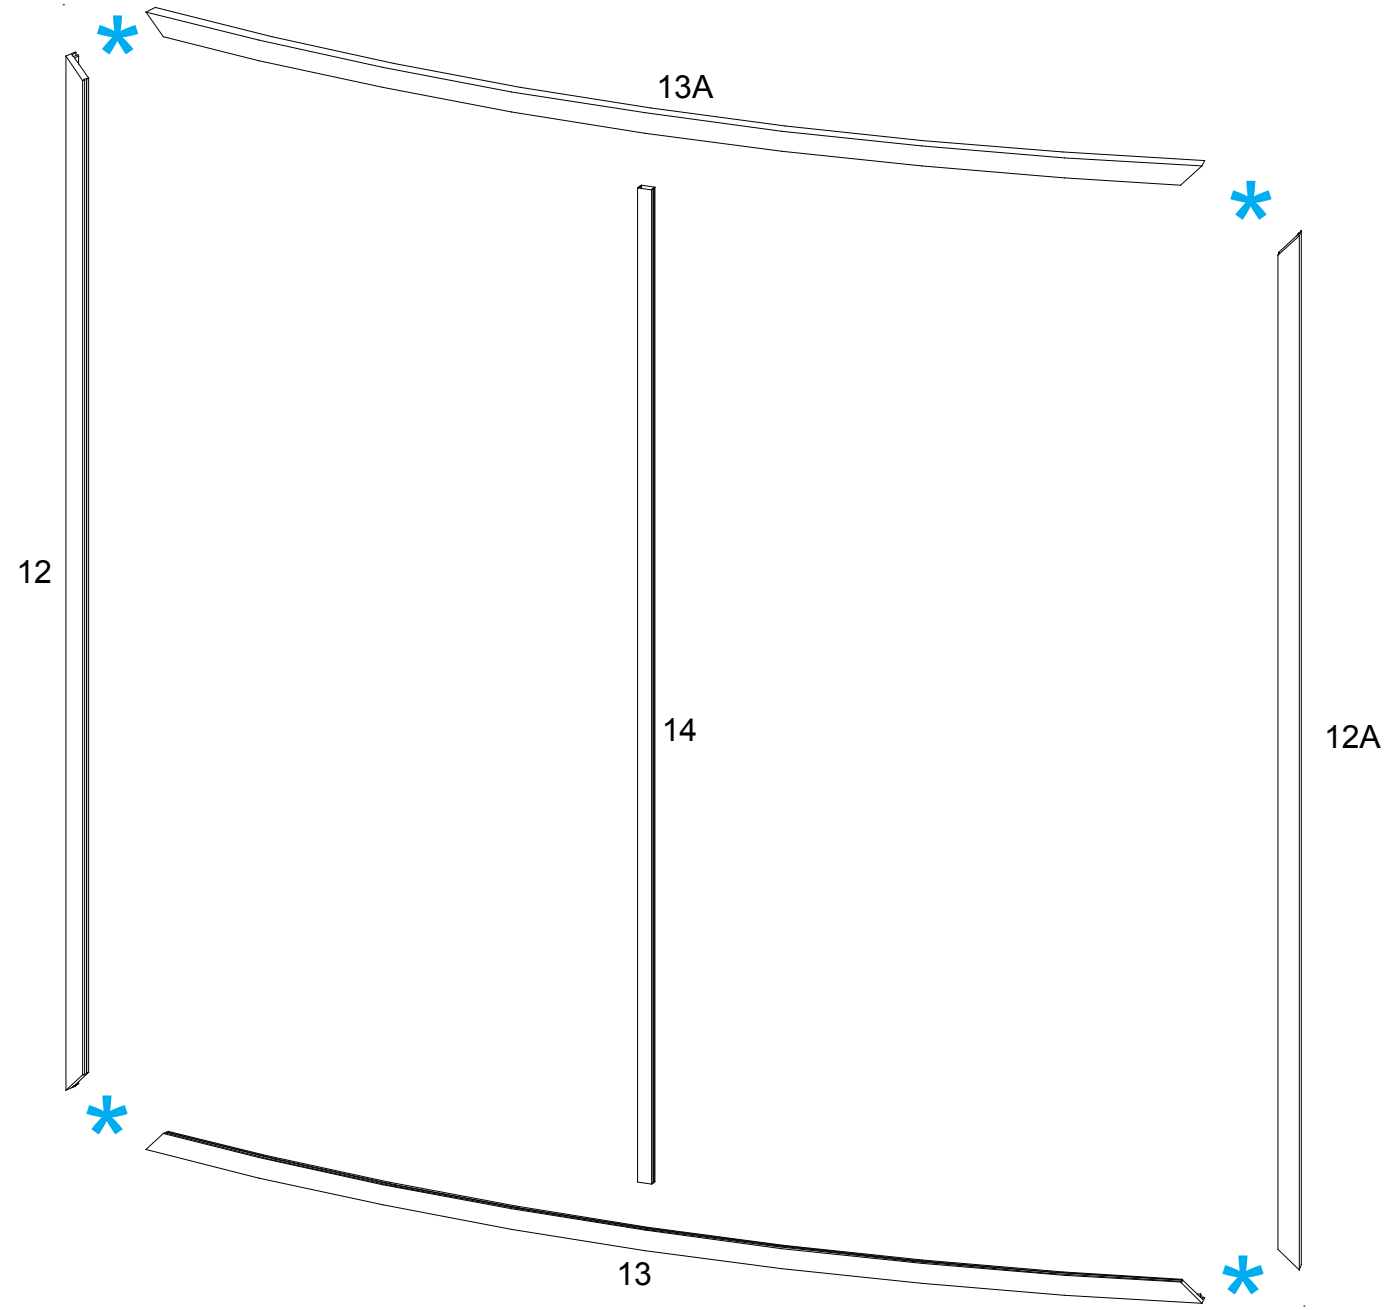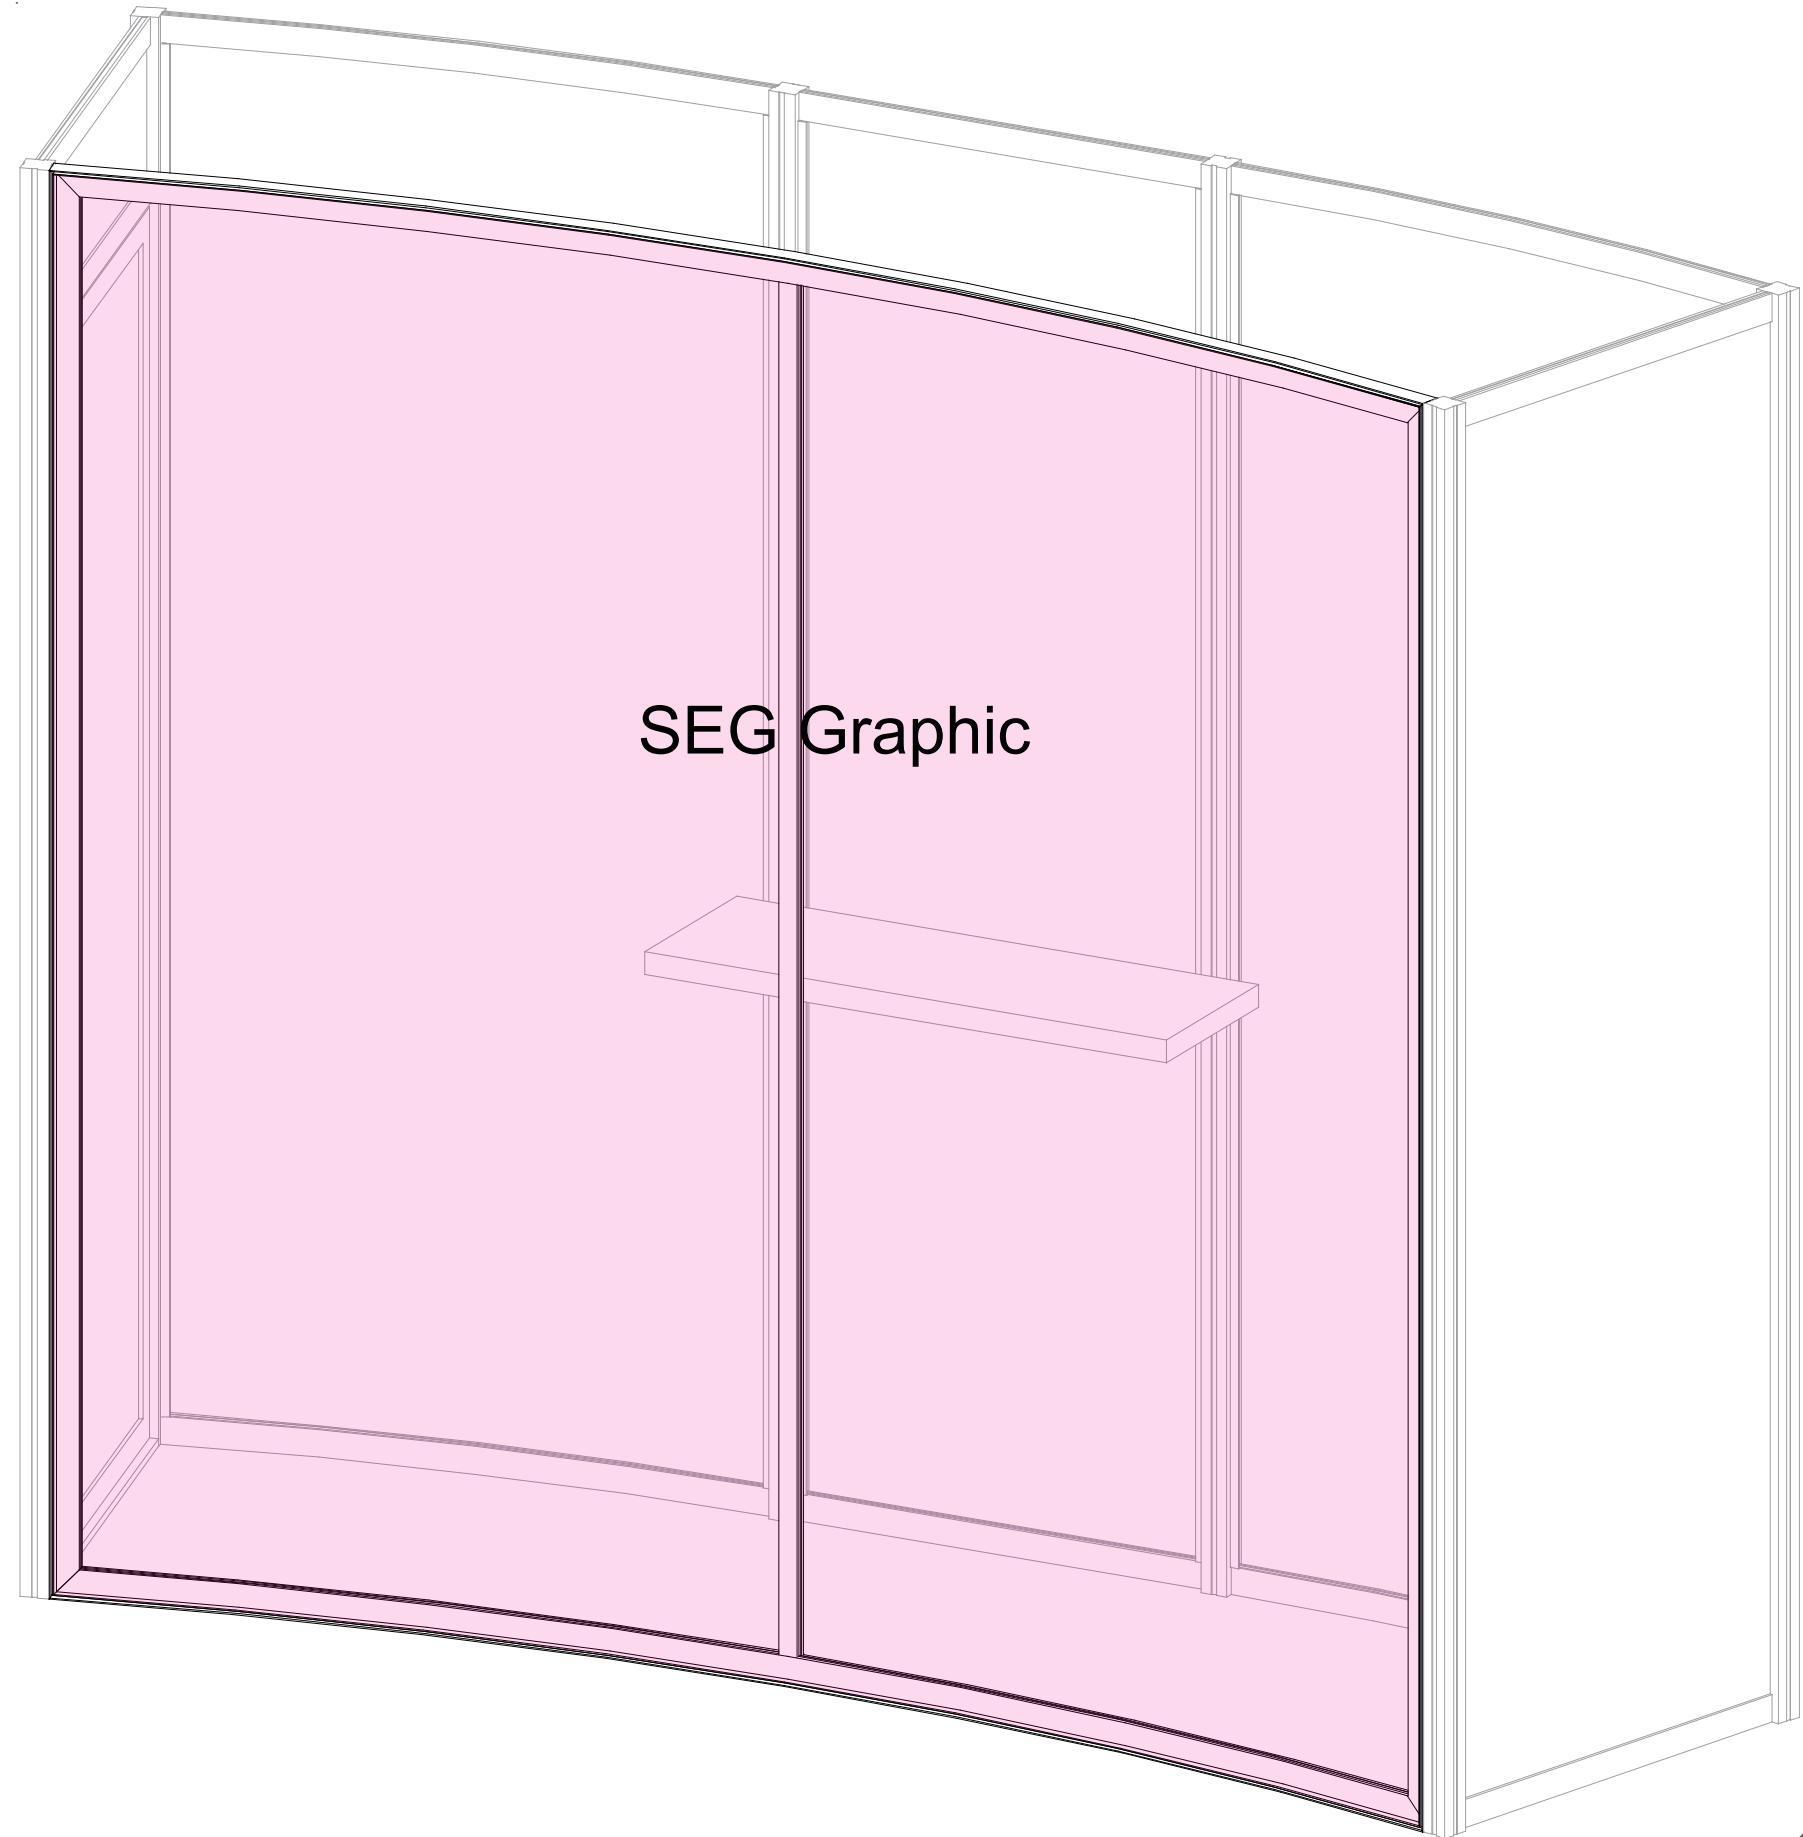
Steps:
1 Install SEG Graphic to assembled frame as shown.

SEG Graphic Installation

Corner A   Corner B

Corner D   Corner C

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.
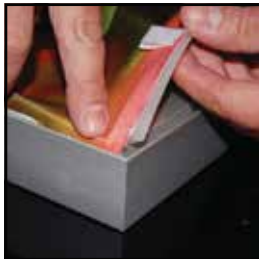
Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.

Step 2
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.

Graphic Removal

Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.

SEG Graphic

visionary ™
DESIGNS

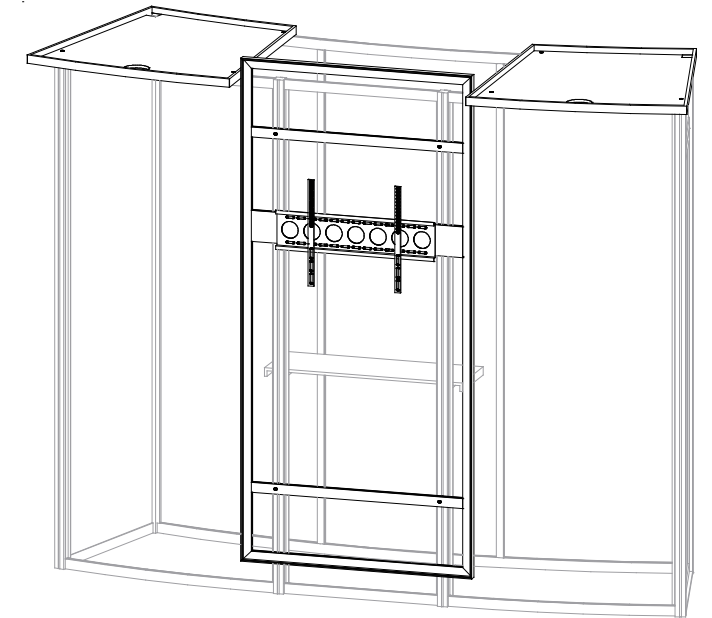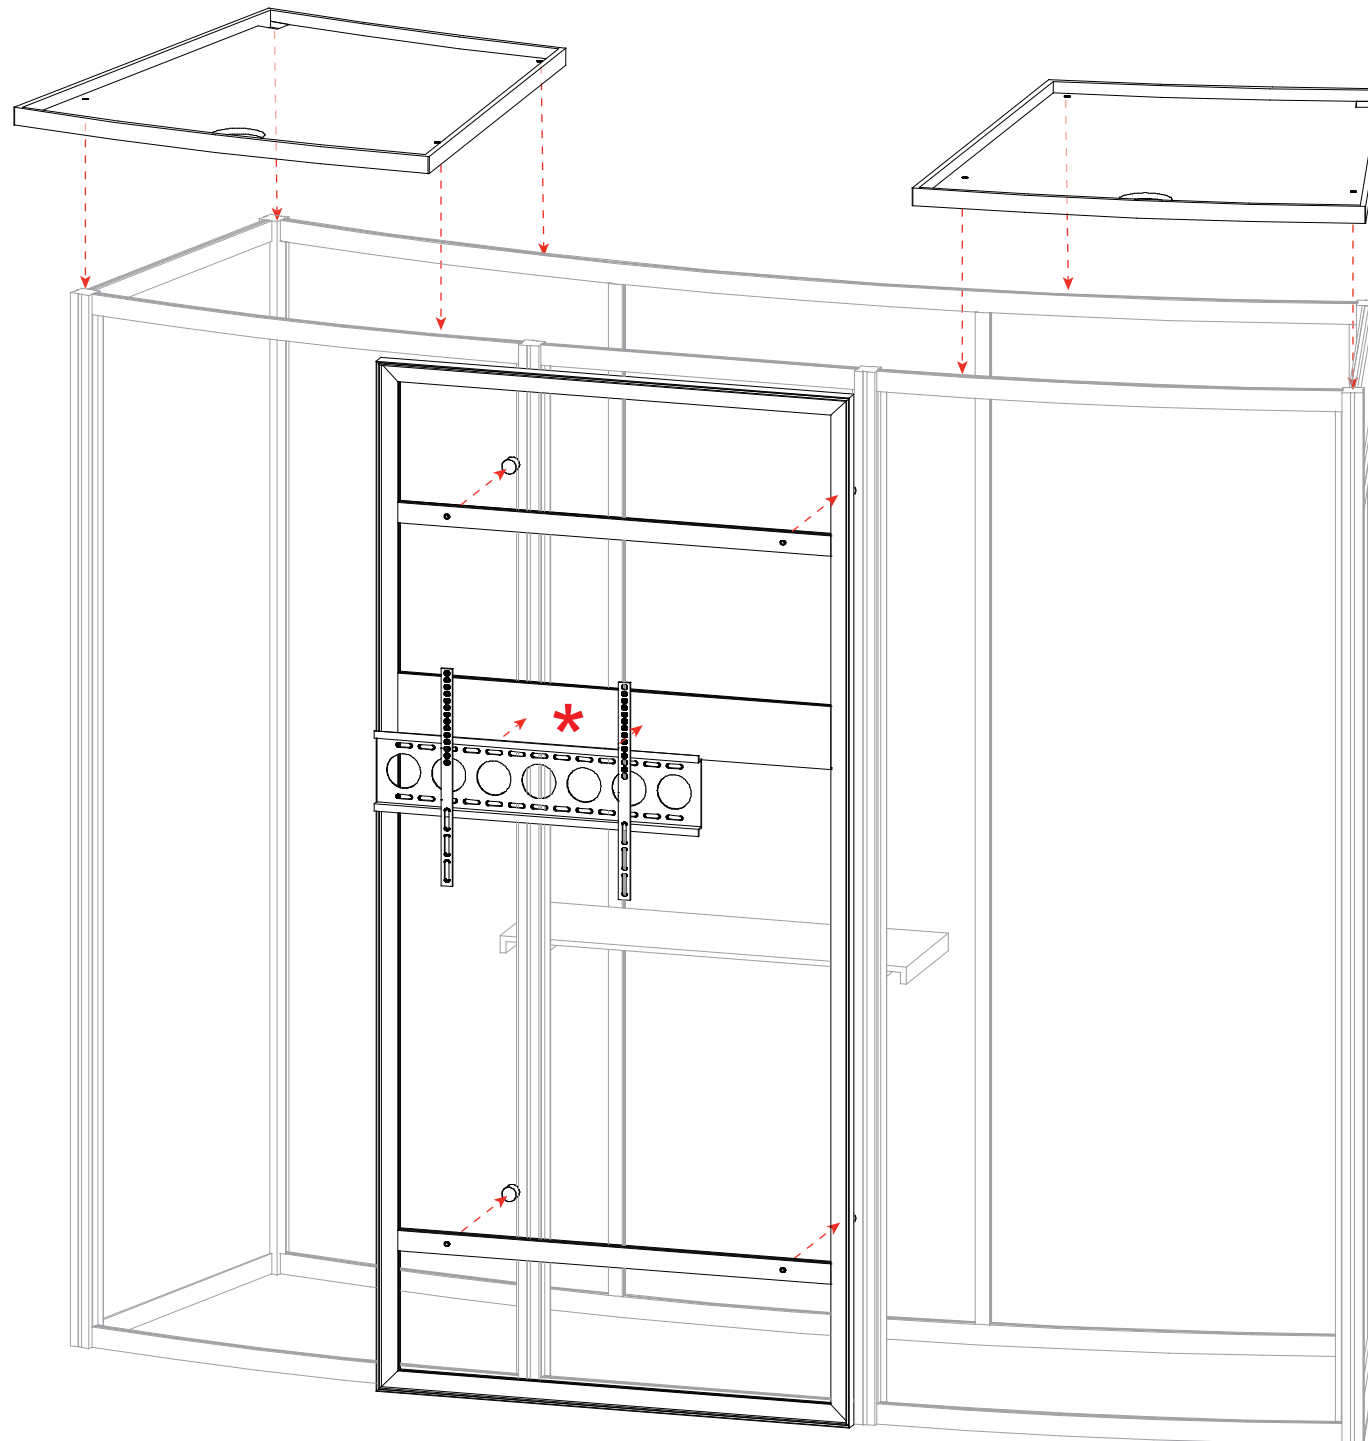| Item	Qty.	Description
15A/15B	1/1	42" TSP46 Horizontal Extrusion
16A/16B	1/1	90" TSP46 Vertical Extrusion
17A/17B	1/1	38.417" Z45 Horizontal Extrusion
18	1	38.417" Z140 Horizontal Extrusion

Steps:
1) Connect Horizontals [15A, 15B] to Verticals [16A, 16B].
2) Connect Horizontals [17A, 17B, 18] between Verticals [16A, 16B].

15B

17B

18

16A

16B

17A

15A

When assembled

visionary DESIGNS ™
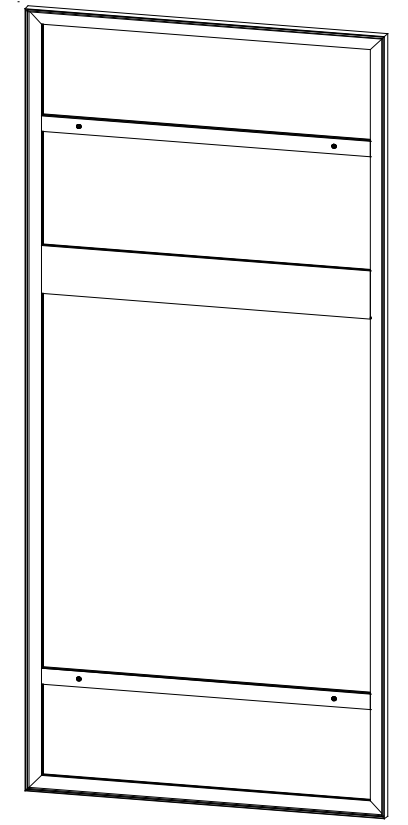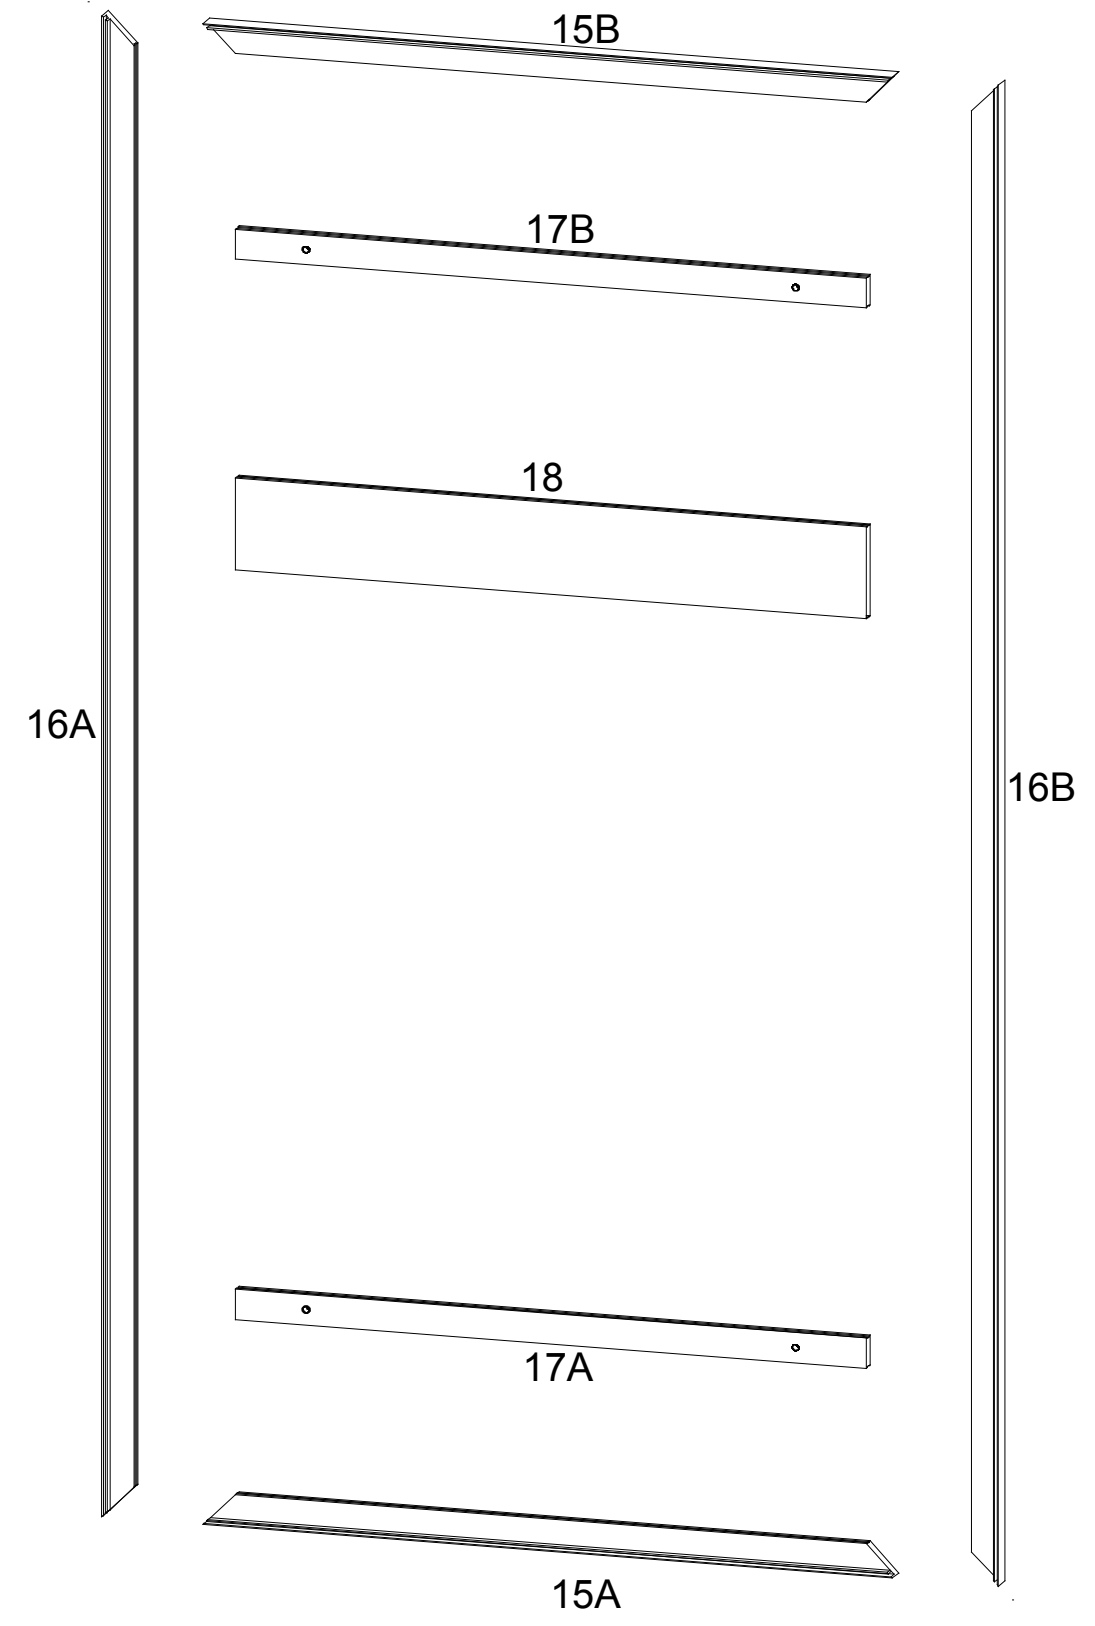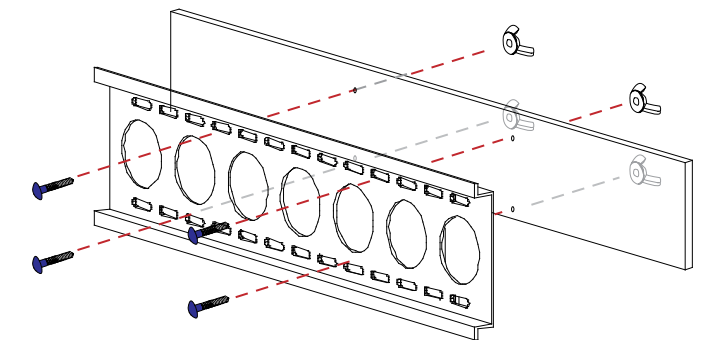
Steps:
1) Connect Ceilings to assembled lower frame with bolts.
2) Connect Front Frame assembly to assembled frame, including standoffs between the frames.
3) Attach Monitor Mount to Front Frame assembly (see detail).

When assembled

* Monitor Mount Attachment

Attach monitor plate to horizontal bar using bolts & wing nuts.

w w w . c l a s s i c e x h i b i t s . c o m

Visionary DESIGNS™ © 2017

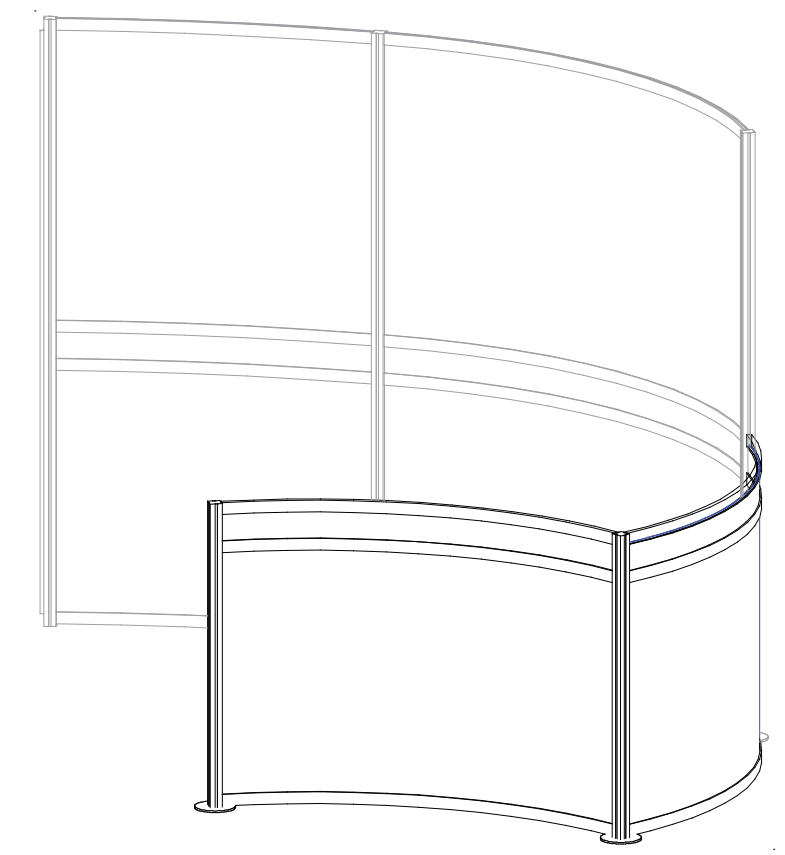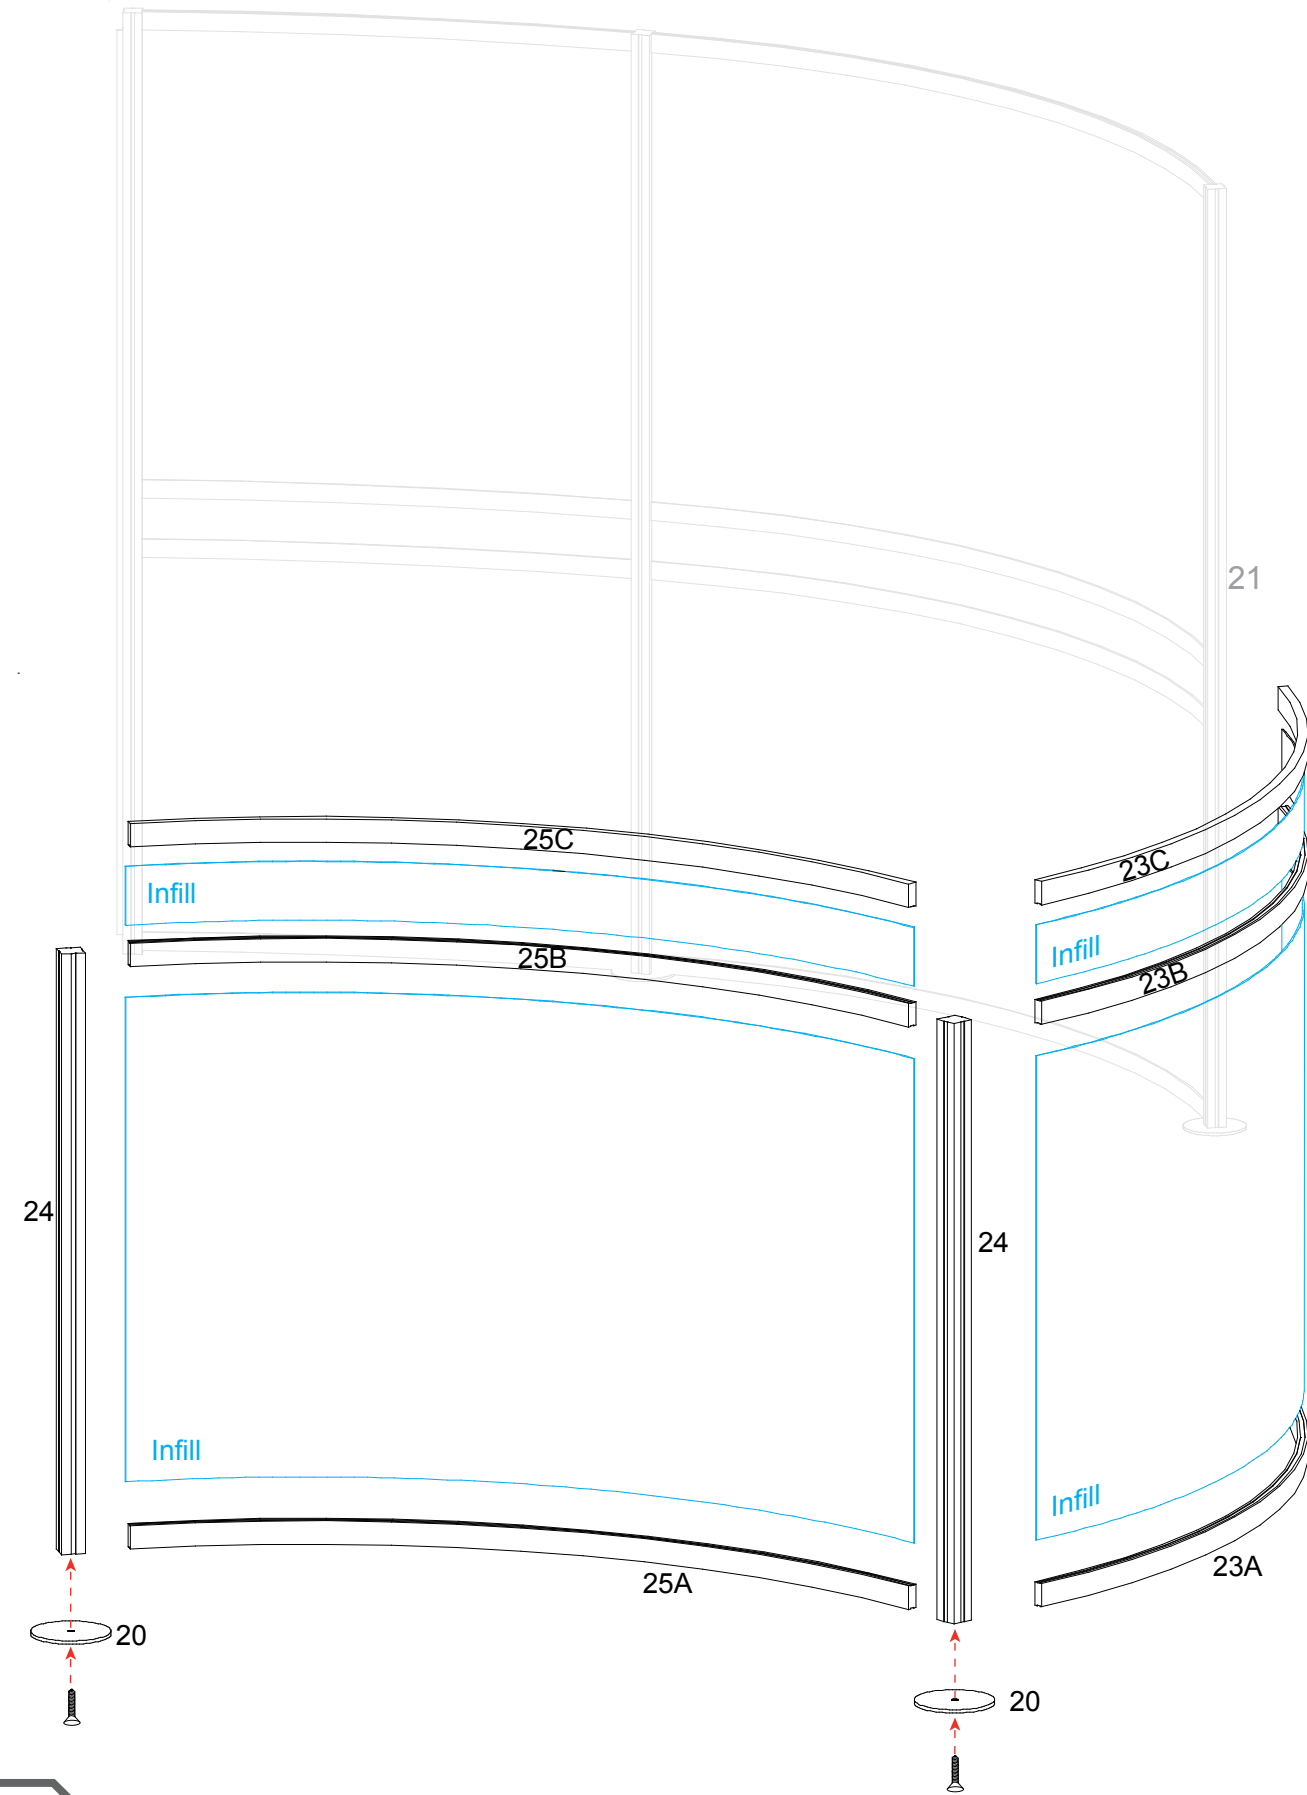| Item	Qty.	Description
19A/19B	1/1	47.4869" Z45 Curved Horizontal
19C/19D	1/1	47.4869" Z45 Curved Horizontal
20	2	Baseplates
21	2	91.75" S44 Vertical Extrusion
22A/22B	1/1	82.4817" Z45 Curved Horizontal
22C/22D	1/1	82.4817" Z45 Curved Horizontal

Steps:
1) Connect Baseplates [20] to Verticals [21].
2) Connect Horizontals [19A,19B, 19C, 19D] between Verticals [3] of existing assembly and [21], including Infills as shown.
3) Connect Horizontals [22A, 22B, 22C, 22D], including Infills as shown.

When assembled

www.classicexhibits.com

visionary DESIGNS™ © 2017
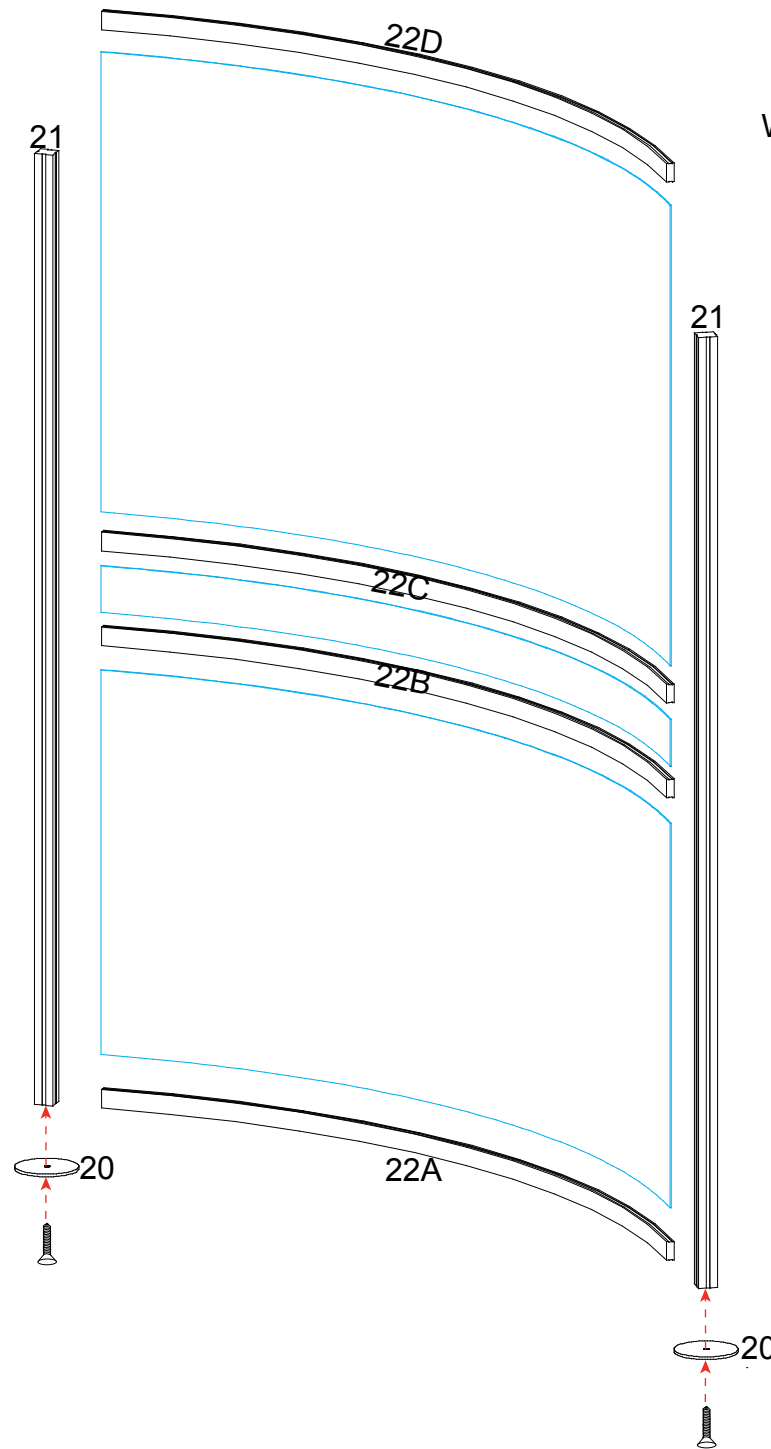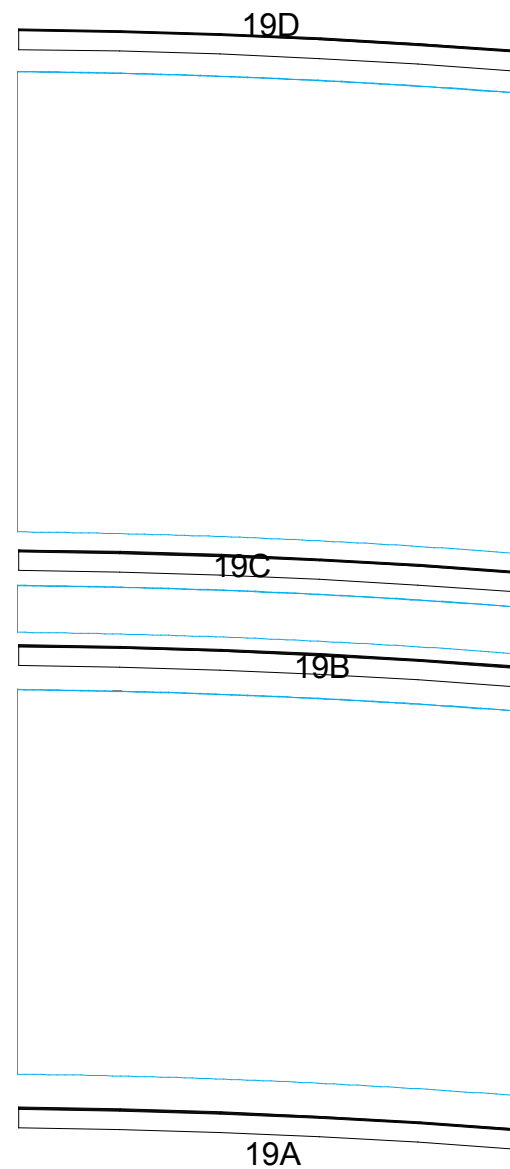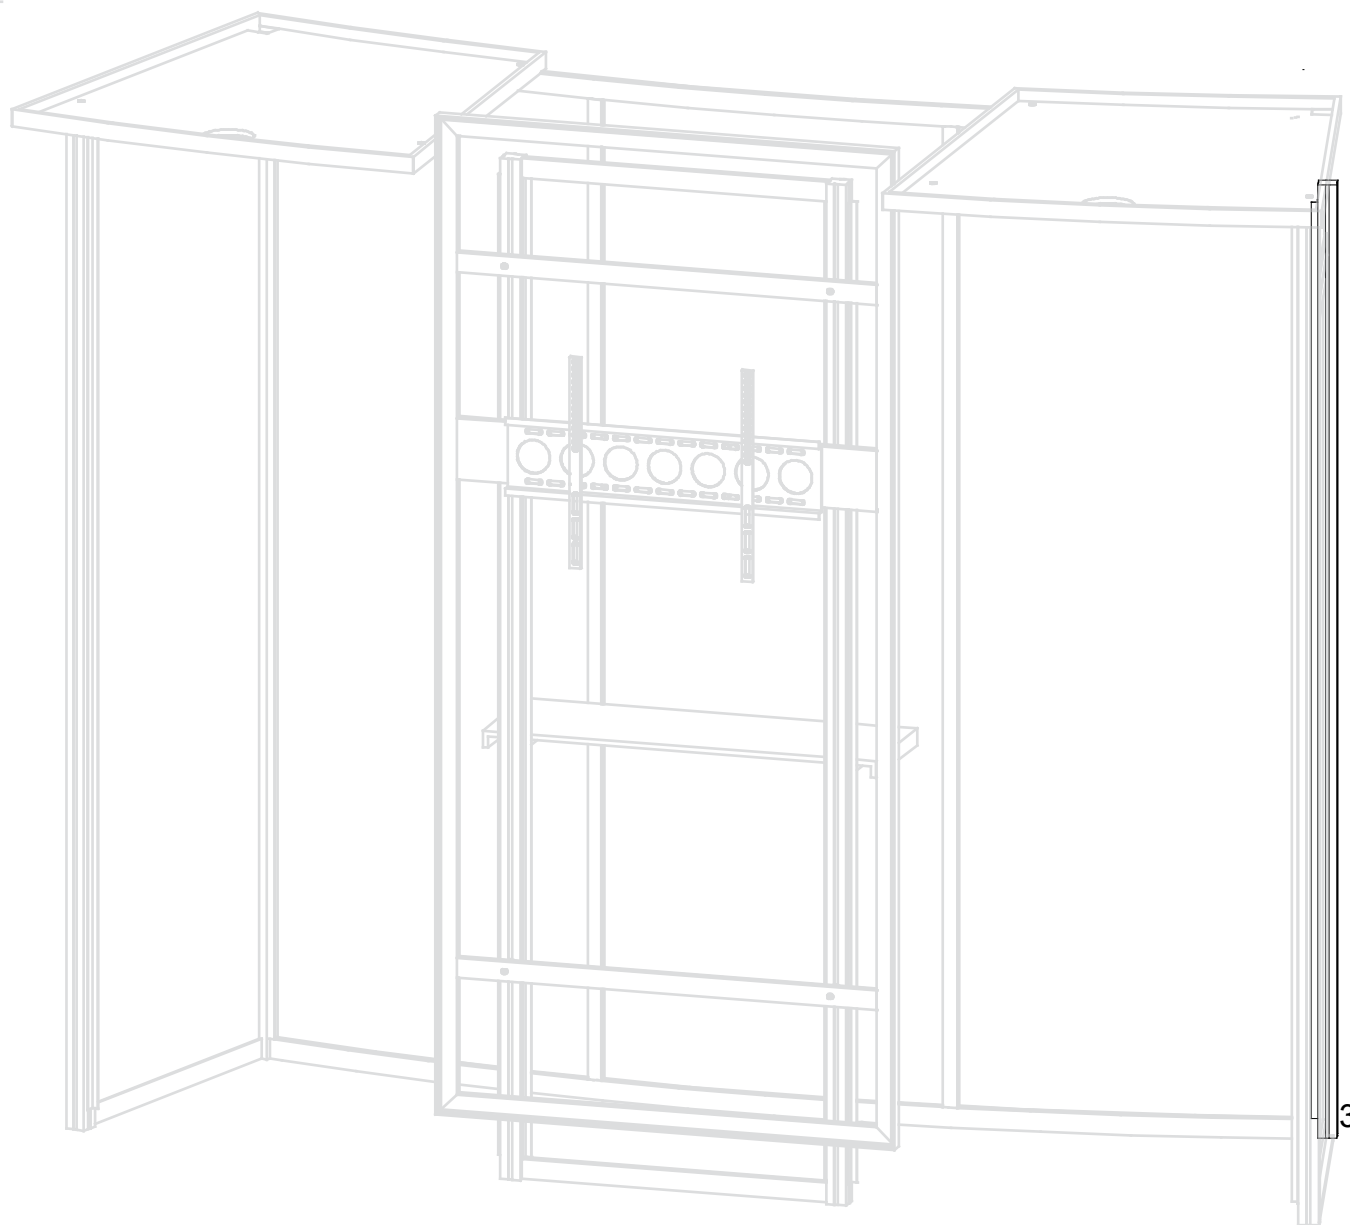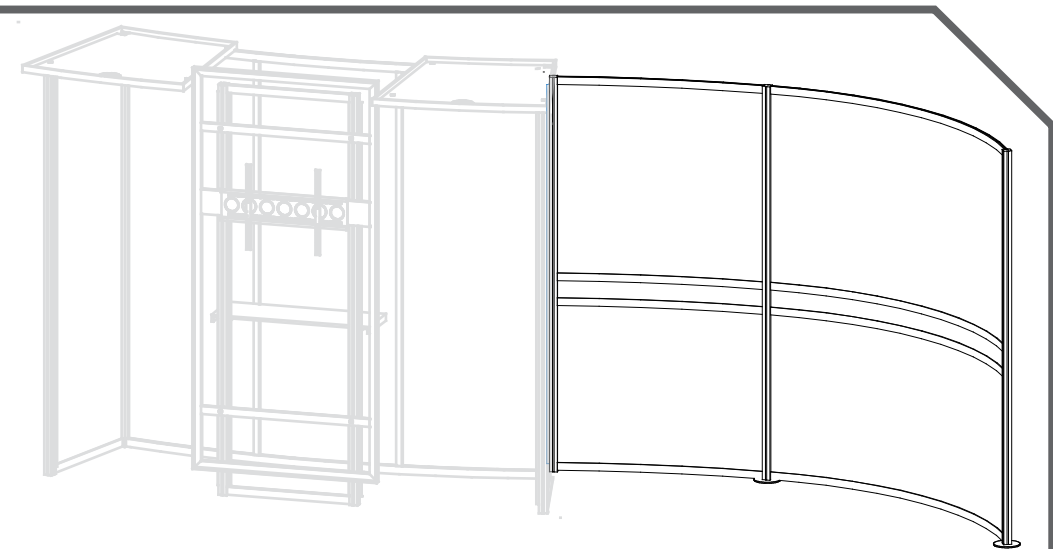
Item	Qty.	Description
20	2	Baseplates
23A/23B	1/1	63.7801" Z45 Curved Horizontal Extrusion
23C	1	63.7801" Z41 Curved Horizontal Extrusion
24	2	46" S44 Vertical Extrusion
25A/25B	1/1	63.7801" Z45 Curved Horizontal Extrusion
25C	1	63.7801" Z41 Curved Horizontal Extrusion

Steps:
1) Connect Baseplates [20] to Verticals [24].
2) Connect Horizontals [23A, 23B, 23C] between [21] of existing curved wall, and [24],including Infills as shown.
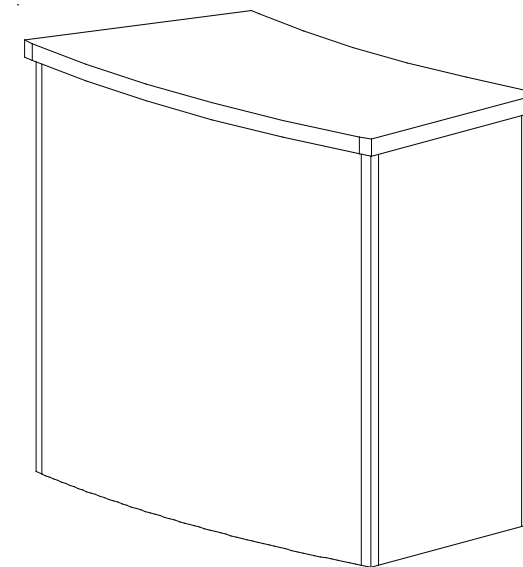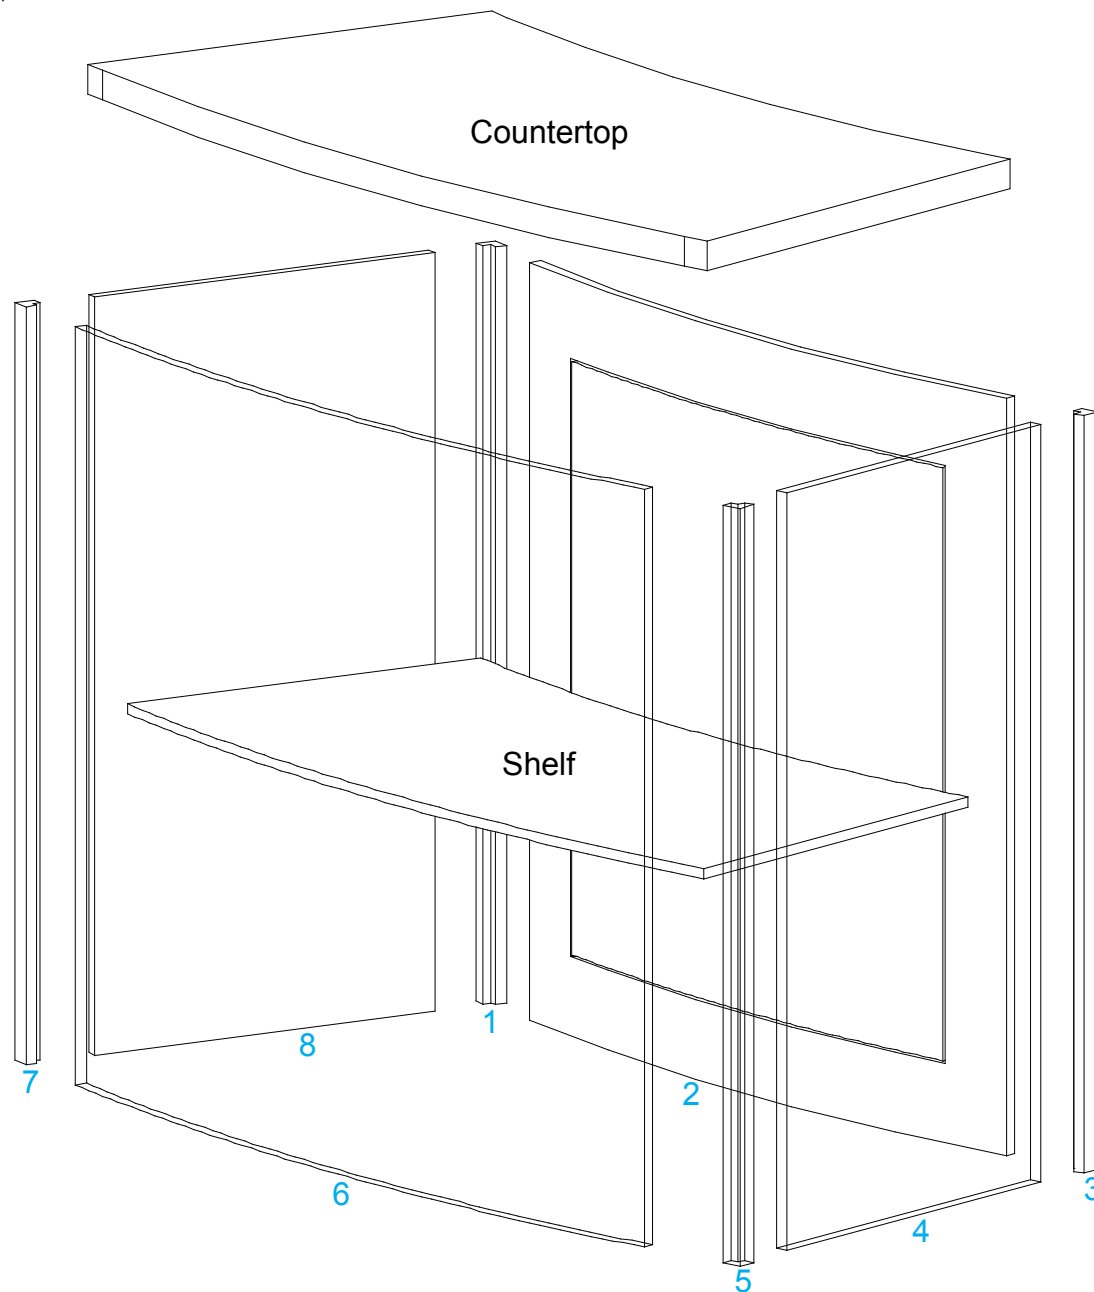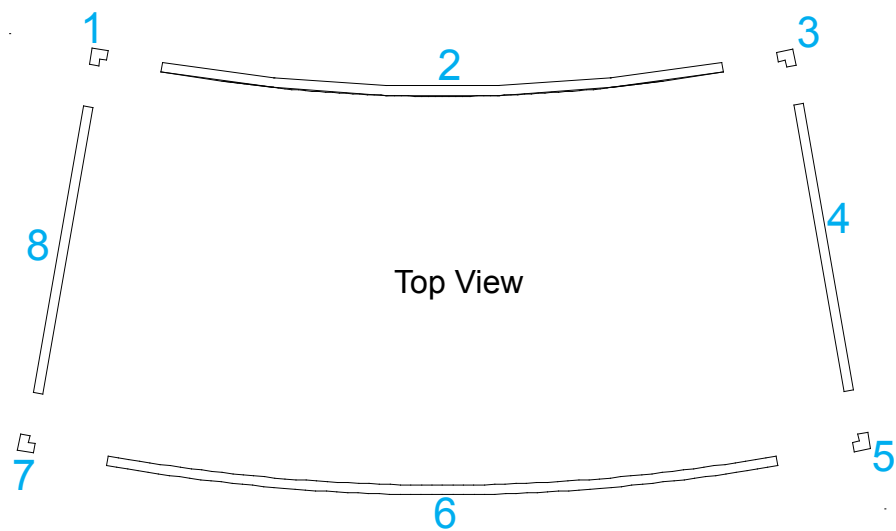3) Connect Horizontals [25A, 25B, 25C] between Verticals [24] and [24], including Infills as shown.
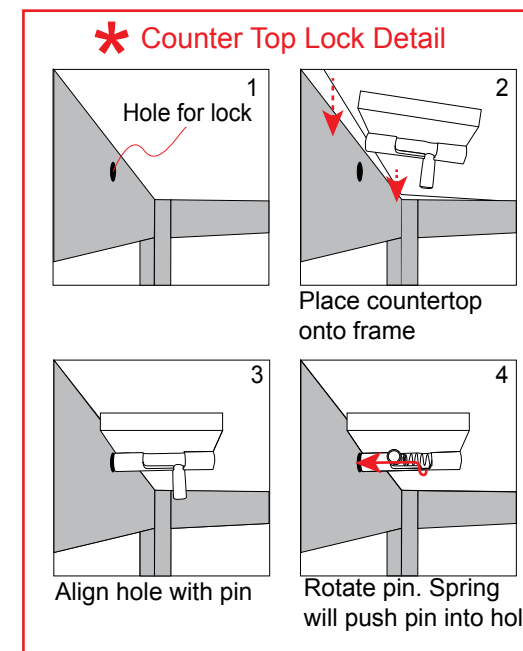
When assembled

Item	Description
1	38" 90° Connector
2	36.9738" x 38" Curved Panel w/Door
3	38" 90° Connector
4	19"w x 38"h Side Panel
5	38" 90° Connector
6	44.13"w x 38" Side Panel
7	38" 90° Connector
8	19"w x 38"h Side Panel

Steps:
1) Assemble LT Panels in numerical order as shown.
2) Place Shelf into assembled counter.
3) Place Countertop onto assembled counter.

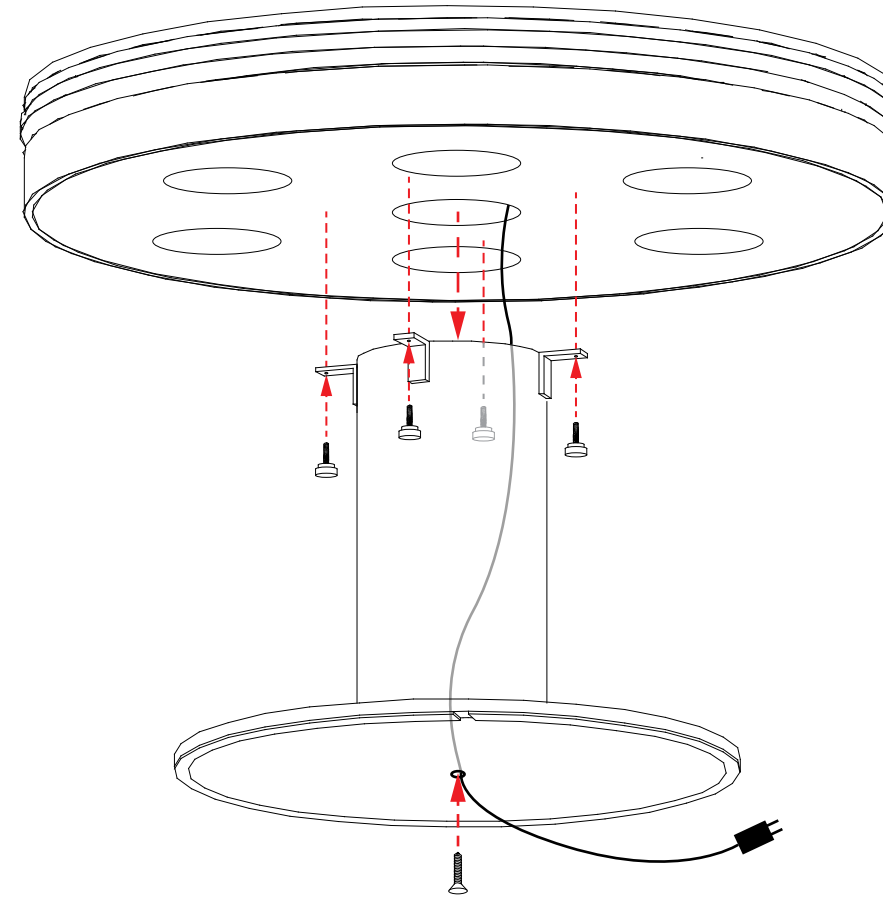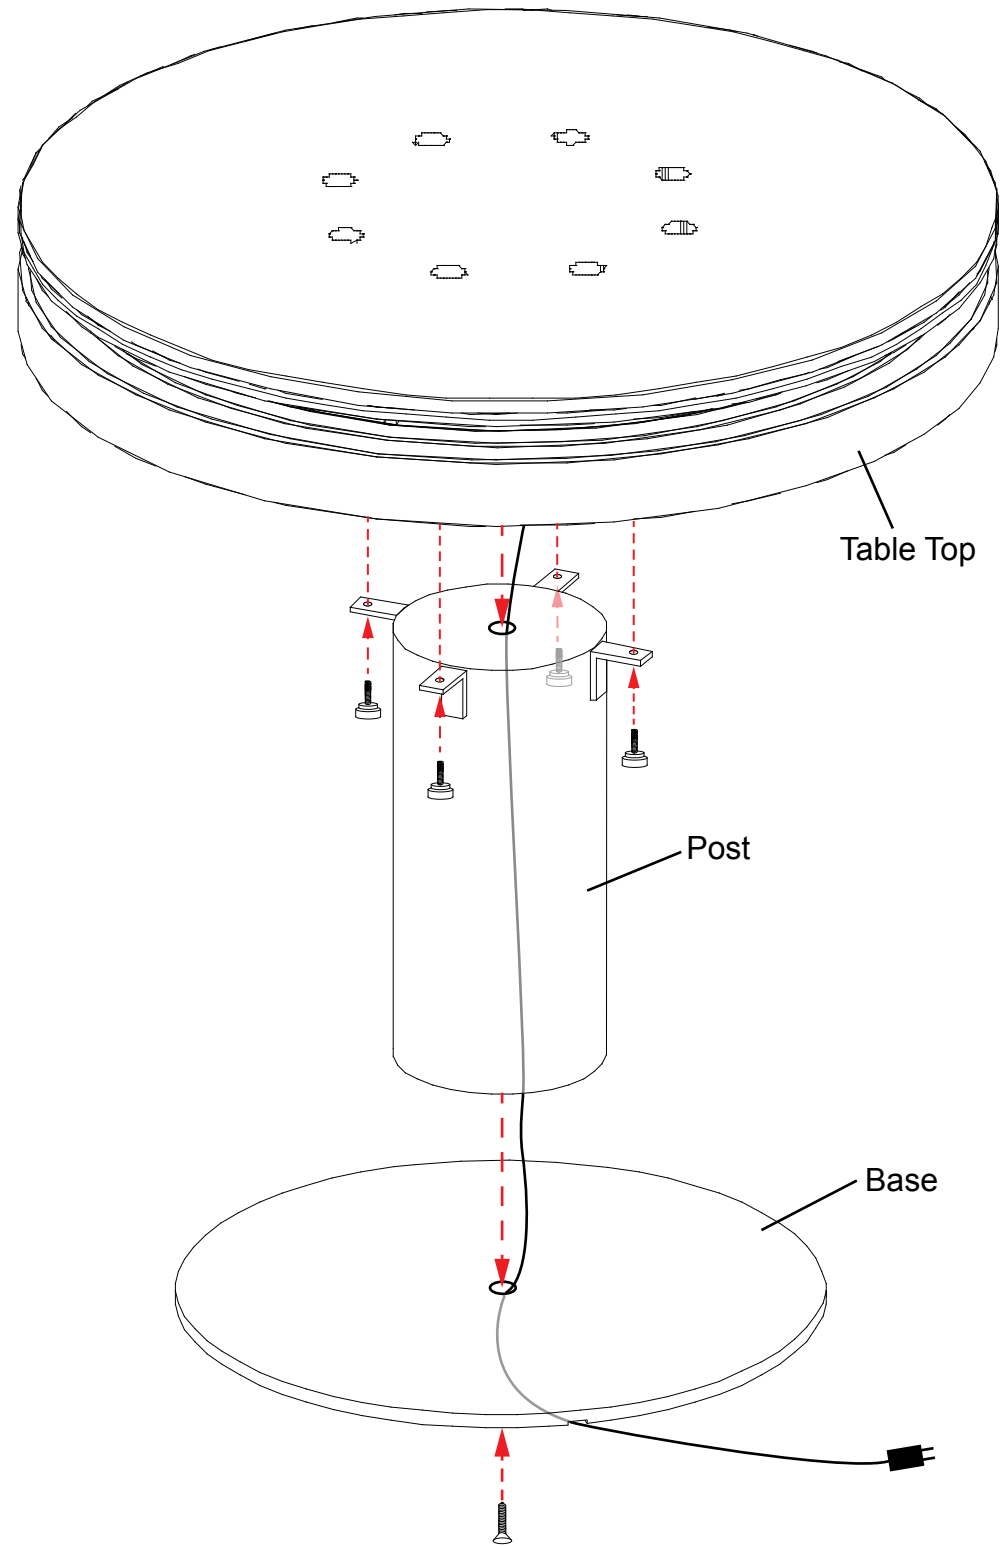Countertop

Shelf

Top View

When assembled

* Counter Top Lock Detail

1. Hole for lock
2. Place countertop onto frame
3. Align hole with pin
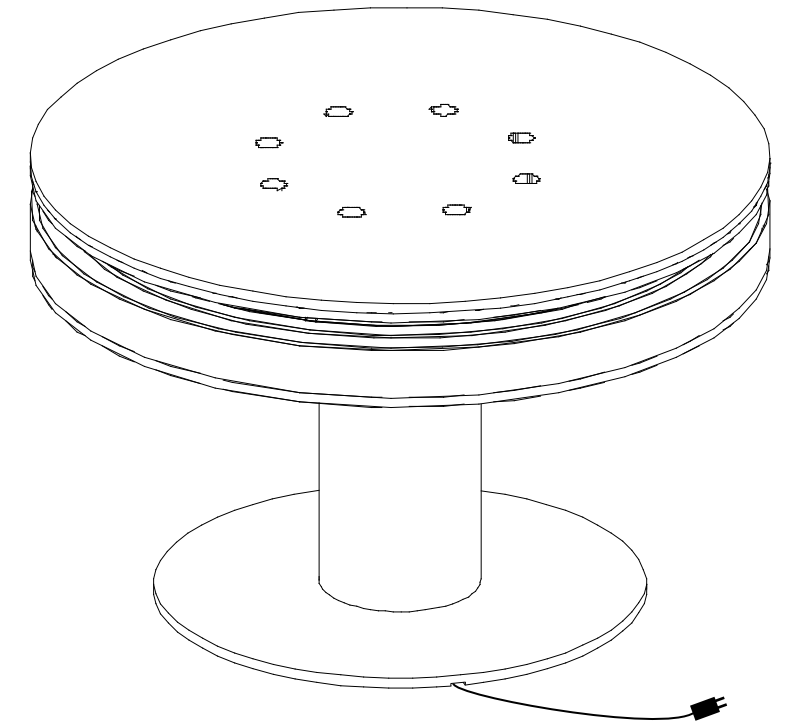4. Rotate pin. Spring will push pin into hole.

Visionary™ DESIGNS © 2017

Steps:
1) Connect Base to Center Post, using bolt.
2) Feed cord, from Table Top, through Center Post and Base.
3) Connect Table Top to Center Post with fixed brackets and bolts.

Table Top

Post

Base

Completed Assembly

Underside View