


euro It | HYBRIDS



New Additional Parts in RED

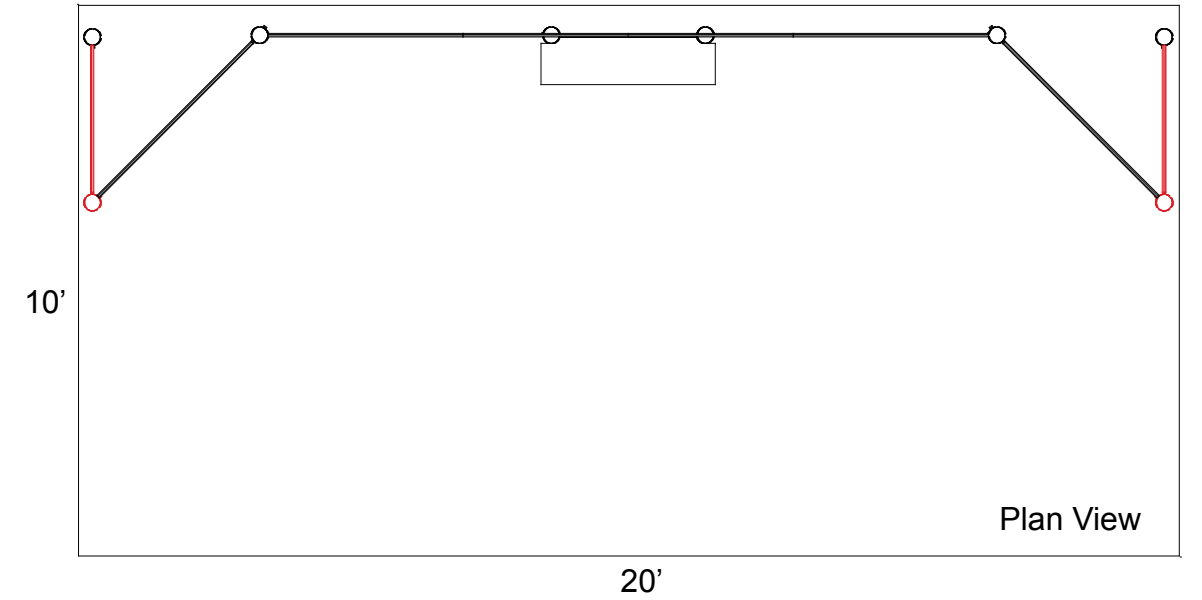

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

euro It | HYBRIDS

Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

General Setup Instructions for Extrusion System



The Tool

Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Typical Connection

Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.




Typical Connection (cont'd)

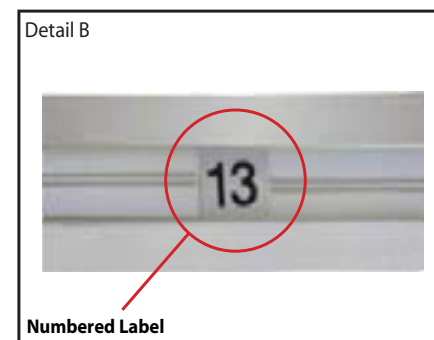


Numbered Label

Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.

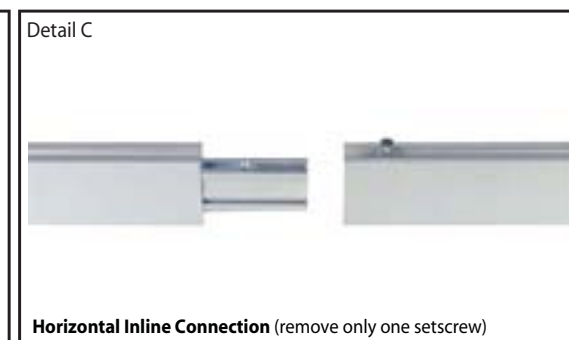


Horizontal Inline Connection (remove only one setscrew)

Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

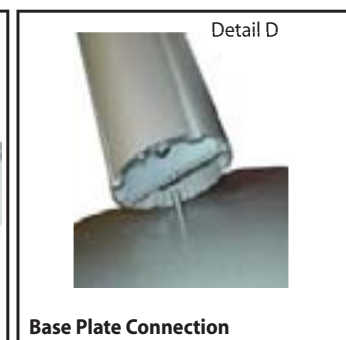

Base Plate Connection


Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

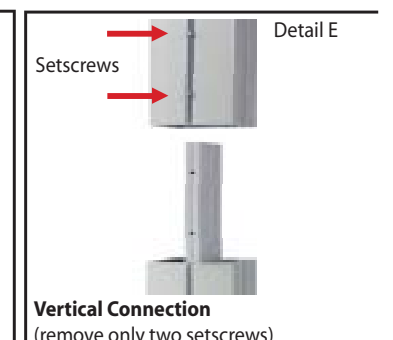

Vertical Connection (remove only two setscrews)


When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller section which then require assembly.

Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

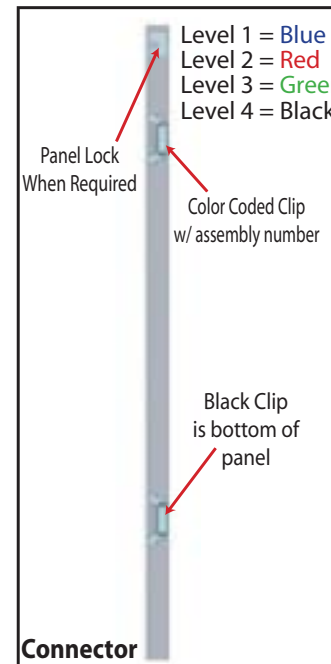


Connector

Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

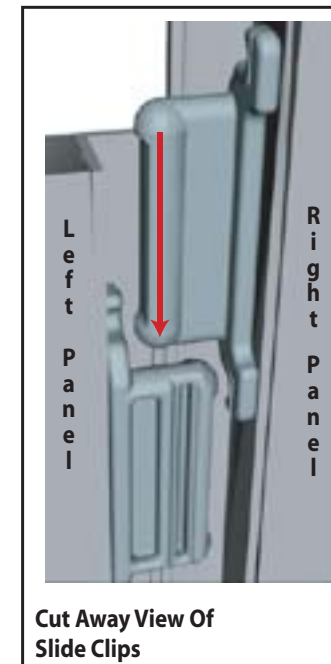


Cut Away View Of Slide Clips

Components connect together by aligning them and sliding downward connecting clips together.

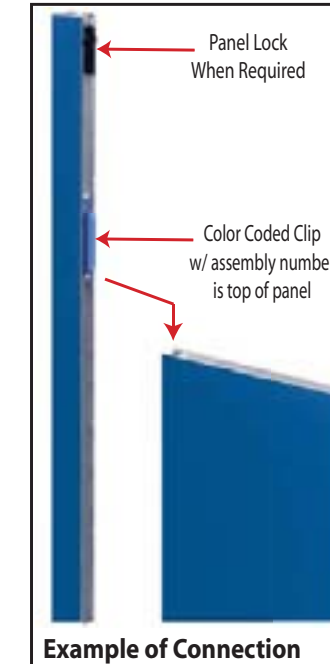

Example of Connection

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

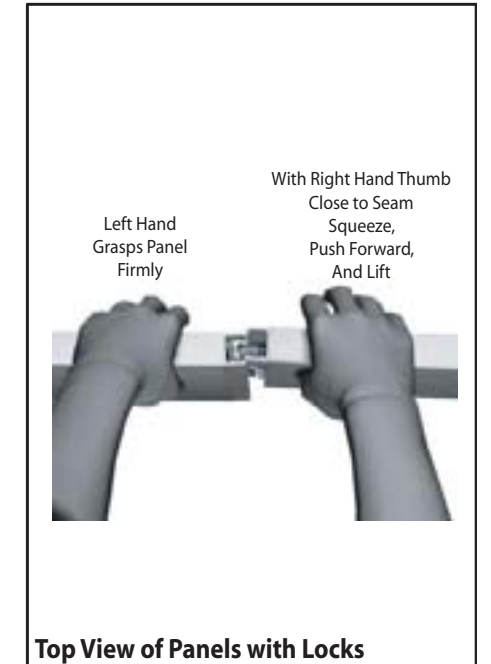





Top View of Panels with Locks

The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Item	Qty.	Description
3	1	48" h Lower vertical extrusion
4	1	48" h Upper vertical extrusion
7	1	48" h Lower vertical extrusion
8	1	48" h Upper vertical extrusion
11	4	47.488" Horizontal w/ velcro
20a/20b	4/4	30" Horizontal w/ velcro
26	1	48" h Lower vertical extrusion
27	1	48" h Upper vertical extrusion
28	1	48" h Lower vertical extrusion
29	1	48" h Upper vertical extrusion
30	2	30" Horizontal extrusion
31	2	30" Horizontal extrusion
32a/32b	1/1	27" h Vertical extrusion
33	2	14.37" Horizontal extrusion
35	1	48" h Lower vertical extrusion NEW
36	1	48" h Upper vertical extrusion NEW
37	1	48" h Lower vertical extrusion NEW
38	1	48" h Upper vertical extrusion NEW

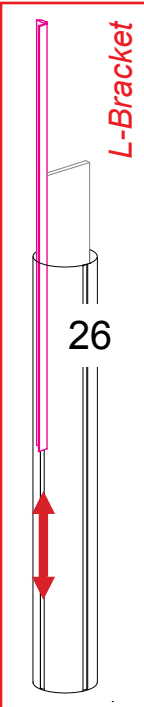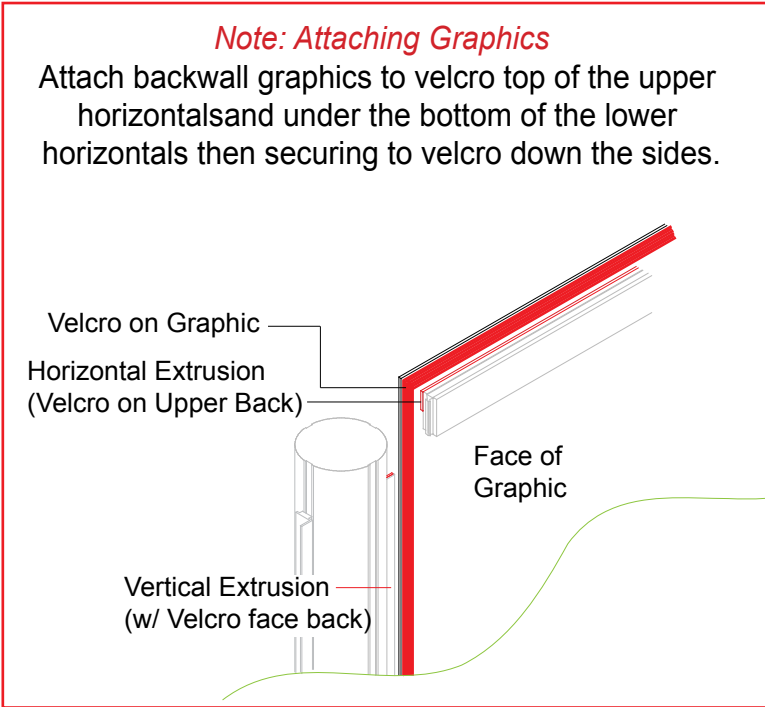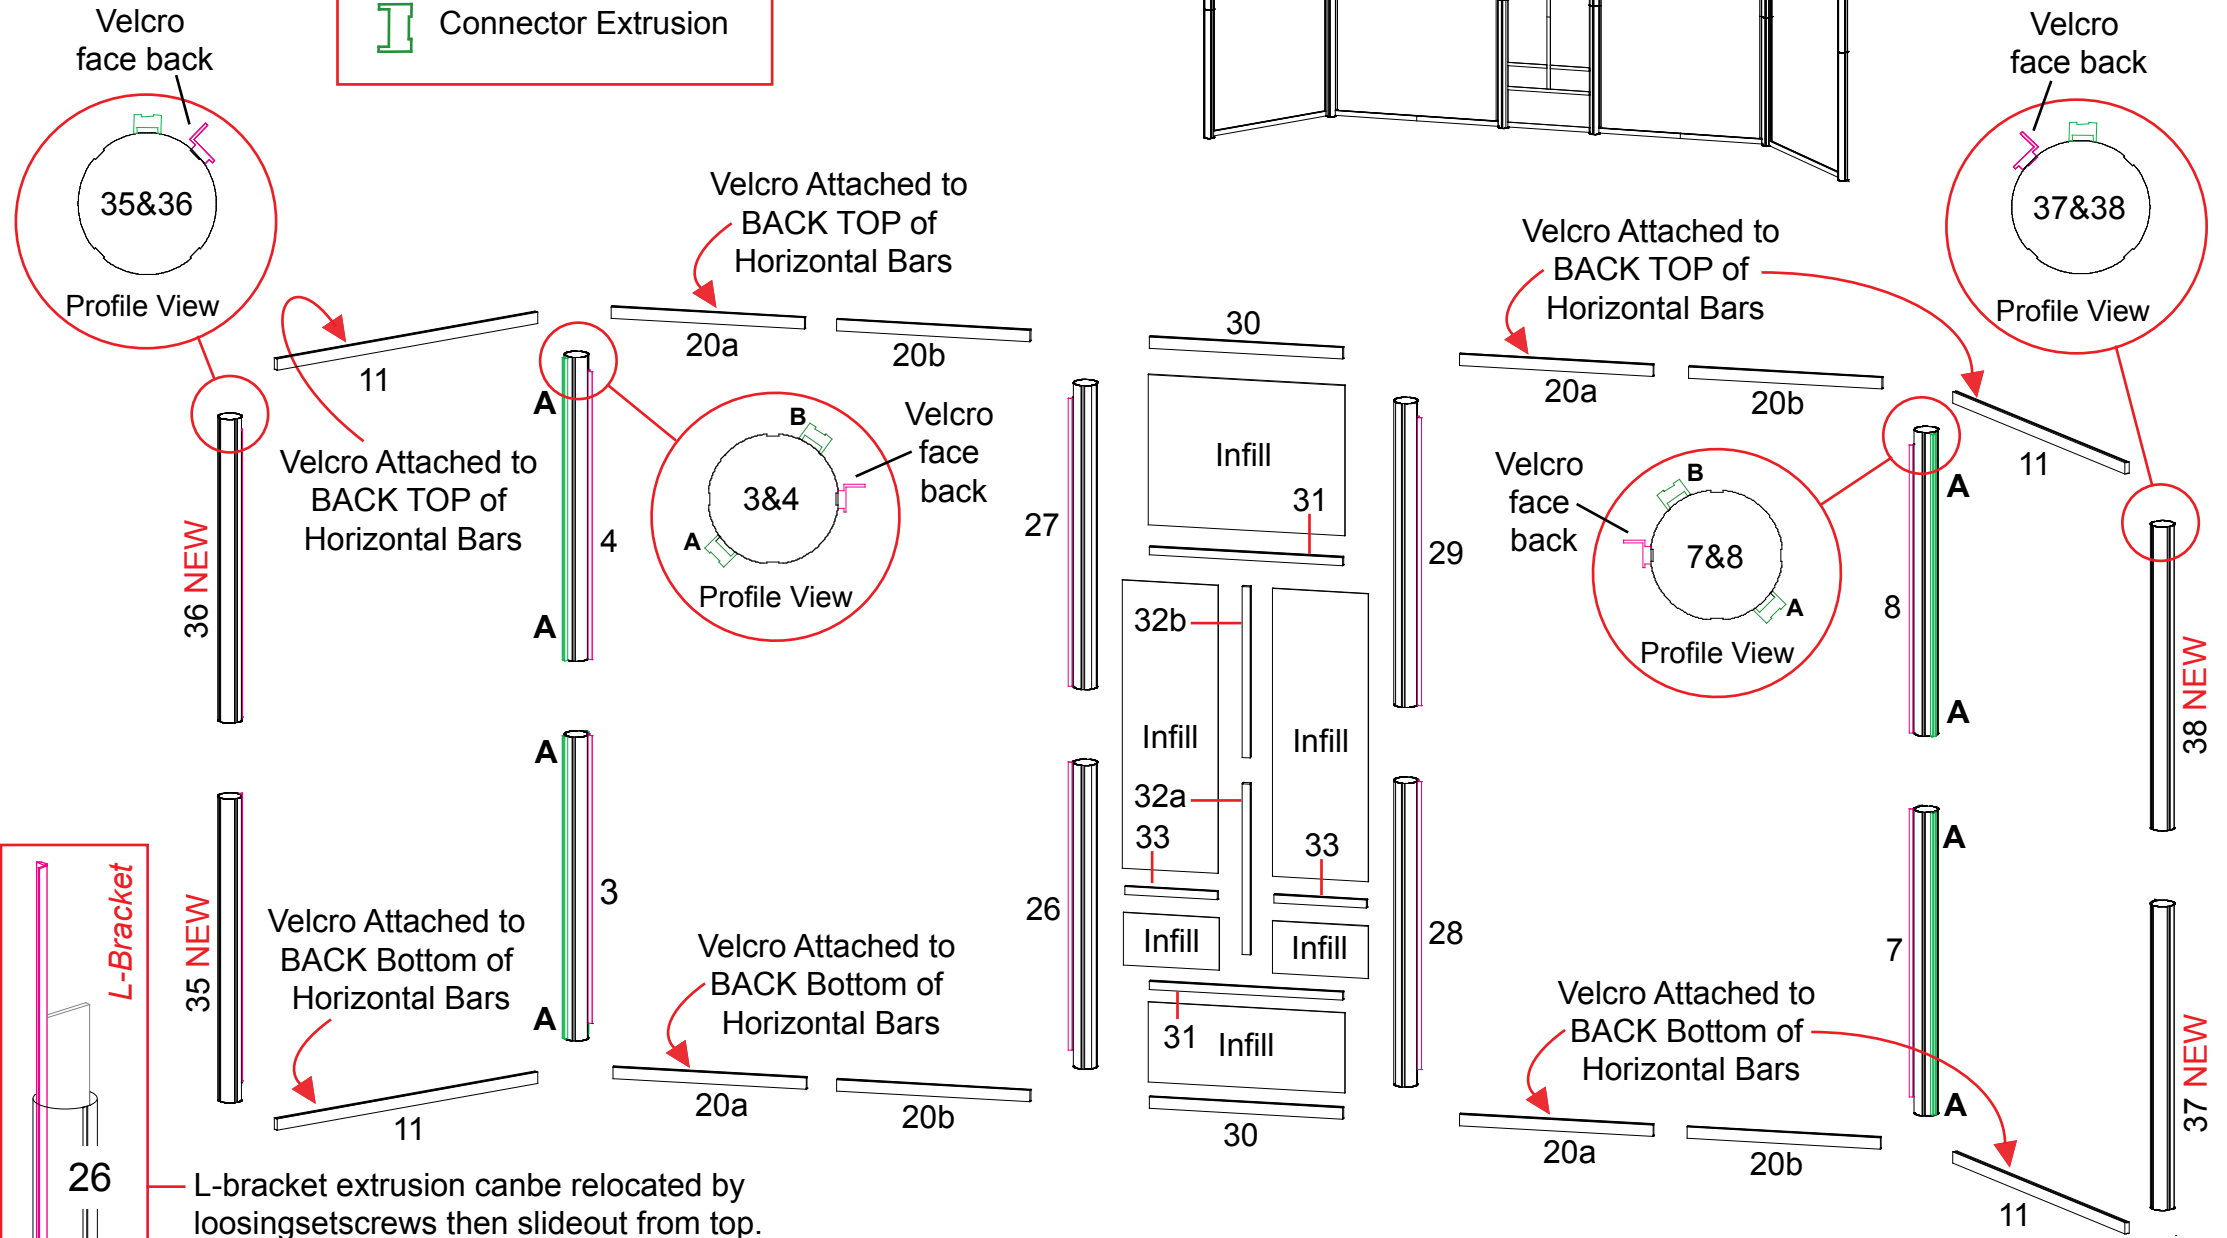
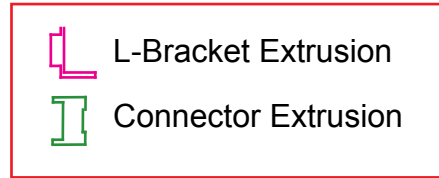


Steps

- 1) Connect vertical extrusions [35**NEW** to 36**NEW**, 3 to 4, 26 to 27, 28 to 29, 7 to 8, and 37**NEW** to 38**NEW**] together.
- 2) Connect horizontal extrusions [20a and 20b] together multiple times as shown.
- 3) Attach horizontal extrusions [11] and horizontal assemblies [20a/20b] between vertical assemblies as shown.
- 4) Attach horizontal extrusions [33] and vertical extrusion [32b] to vertical extrusion [32a].
- 5) Attach horizontal extrusions [31] to vertical extrusions [32a and 32b] placing infills in between horizontals [31 and 33].
- 6) Attach horizontal extrusions [30] and backwall assembly with infills between both left and right sections of backwall assemblies.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Item	Qty.	Description
21a/21d	1/1	36" Horizontal w/ velcro
21b/21c	1/1	42.5830" Horizontal w/ velcro
22a/22d	1/1	42.5830" Horizontal w/ velcro
22b/22c	1/1	36" Horizontal w/ velcro
23	2	20.417" Vertical extrusion
24	1	24" Vertical extrusion
25	1	24" Vertical extrusion

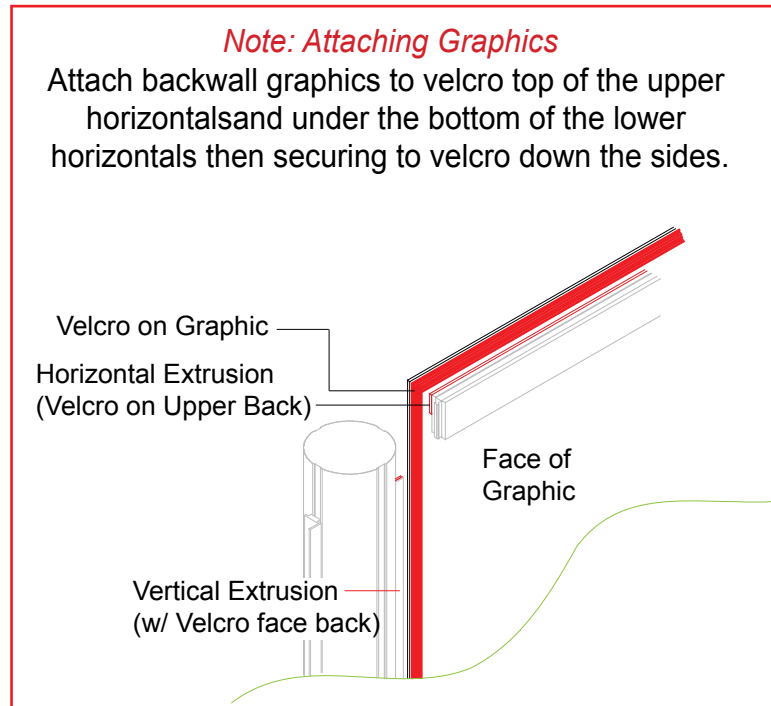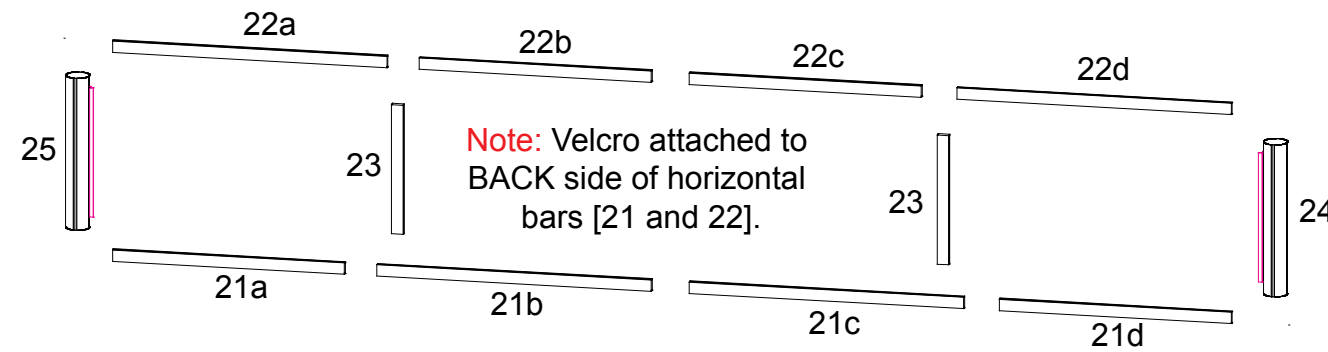

Steps

- 1) Connect horizontal extrusions [21a through 21d] and [22a through 22d] together as shown.
- 2) Attach vertical extrusion [23] between horizontal assemblies [21 and 22].
Note: Left vertical extrusion [23] must attach between horizontal extrusions [22a and 21b] and right vertical extrusion [23] must attach between horizontal extrusions [22d and 21c].
- 3) Attach assembled section [21, 22, and 23] between vertical extrusions [24 and 25] as shown.



WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Item	Qty.	Description
34	2	7" Shelf support

Steps

- 1) Attach upper backwall assembled section to top of lower backwall assembly as shown. Refer to detail E at the general info. page.
- 2) Attach shelf supports [34] to vertical extrusions [26 and 28]. Refer to detail.
- 3) Place shelf atop shelf supports [34].





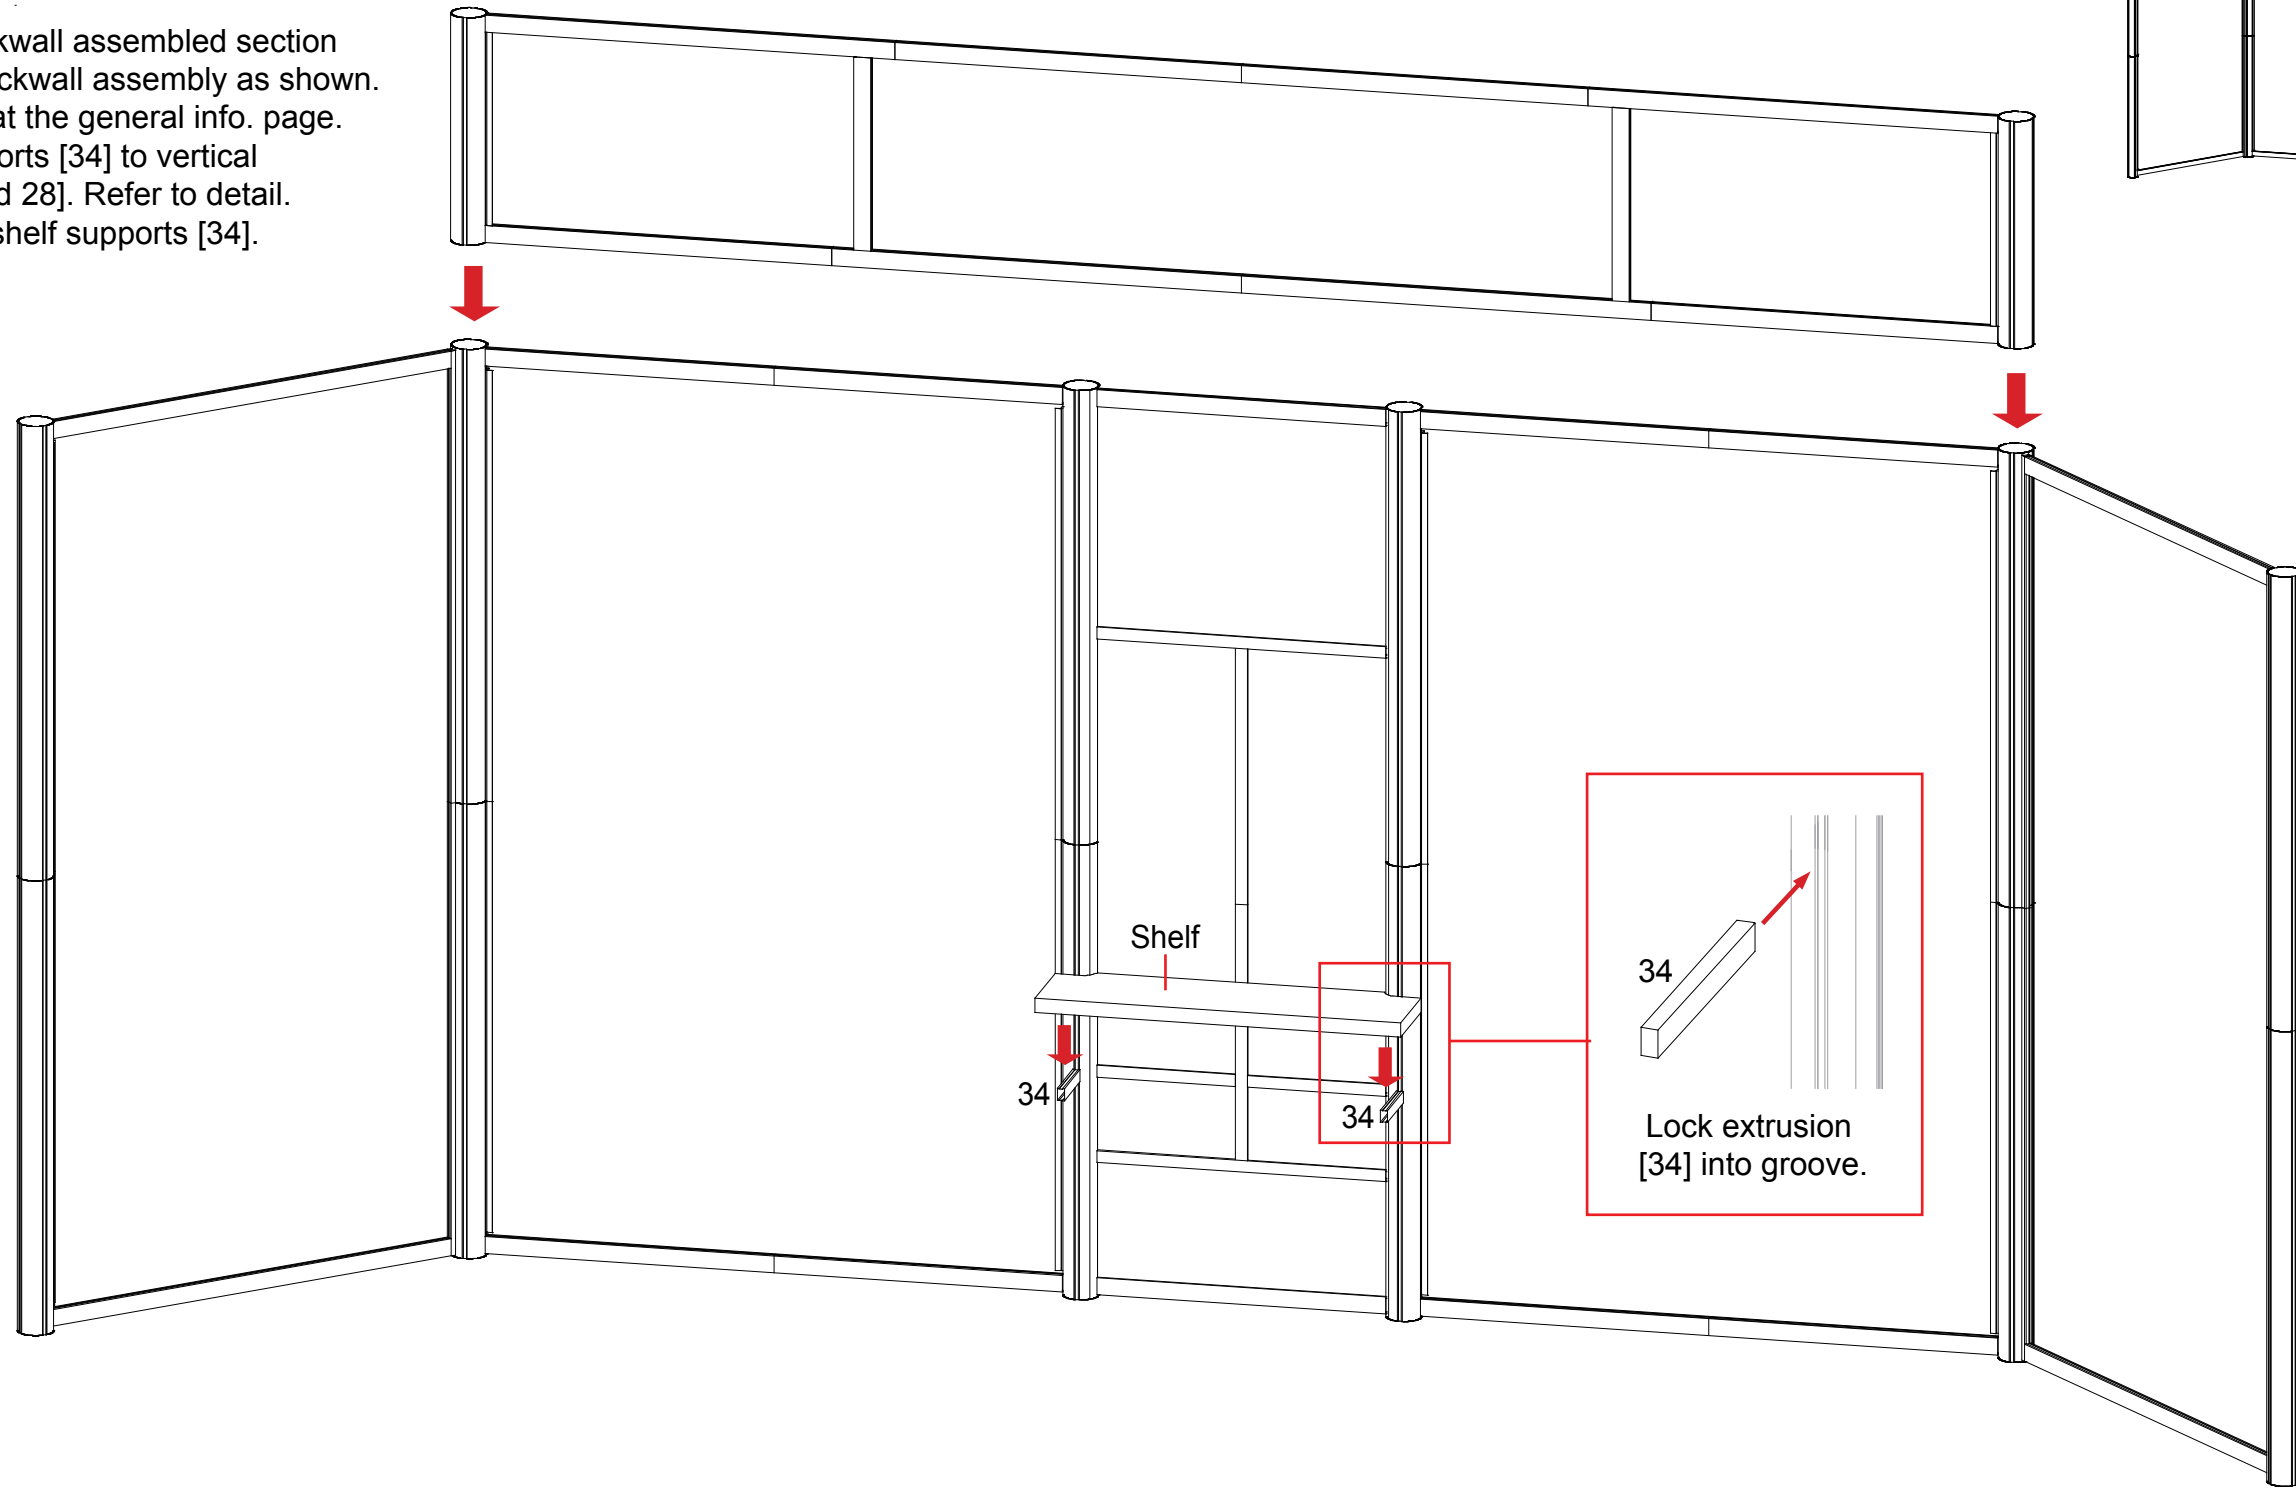
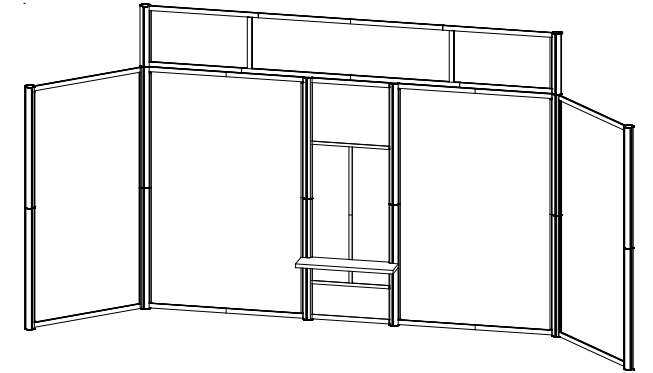


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100



Item	Qty.	Description
1	1	48”h Lower vertical extrusion
2	1	48”h Upper vertical extrusion
9	1	48”h Lower vertical extrusion
10	1	48”h Upper vertical extrusion
39	1	32” Horizontal extrusion NEW
40	1	32” Horizontal extrusion NEW
41	1	32” Horizontal extrusion NEW
42	1	32” Horizontal extrusion NEW

Steps:
 1) Connect vertical extrusions [1 to 2, and 9 to 10] together.
 2) Attach horizontal extrusions [39**NEW**, 40**NEW**, 41**NEW**, and 42**NEW**] between vertical assemblies as shown.

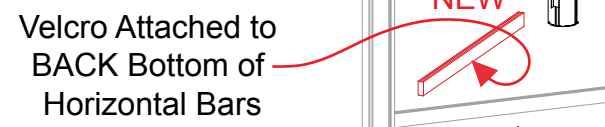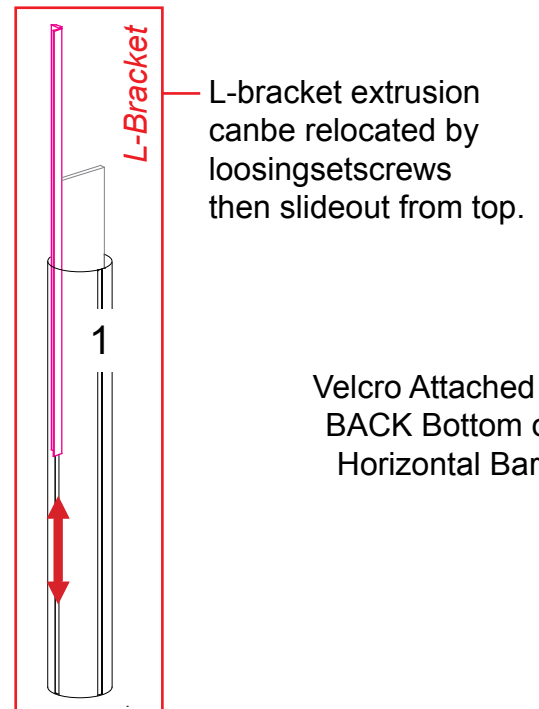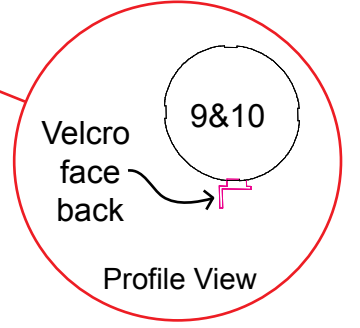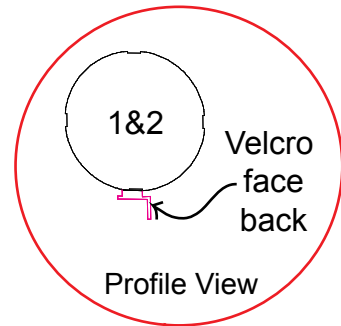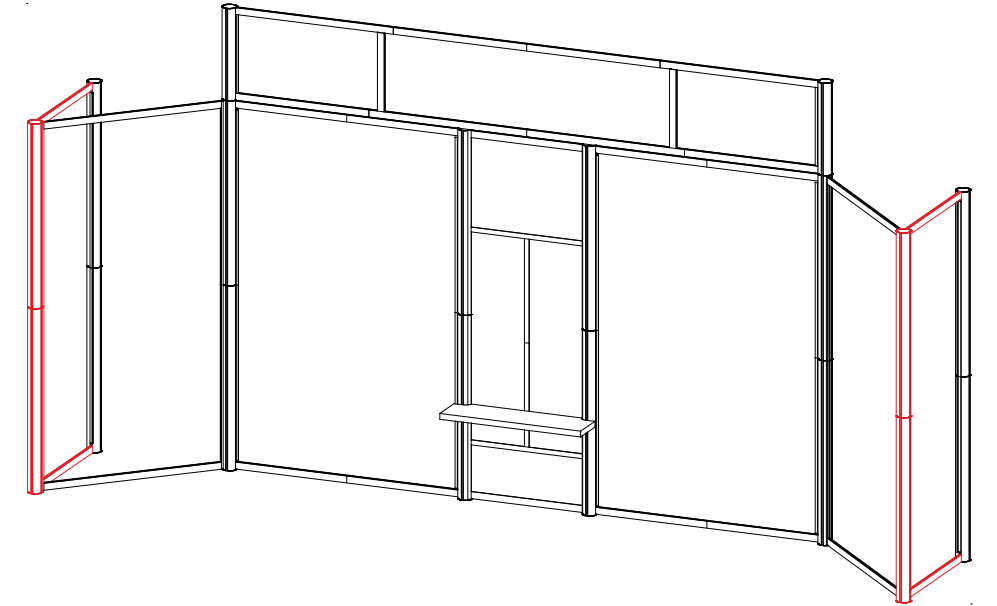

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


Top View of Each Level

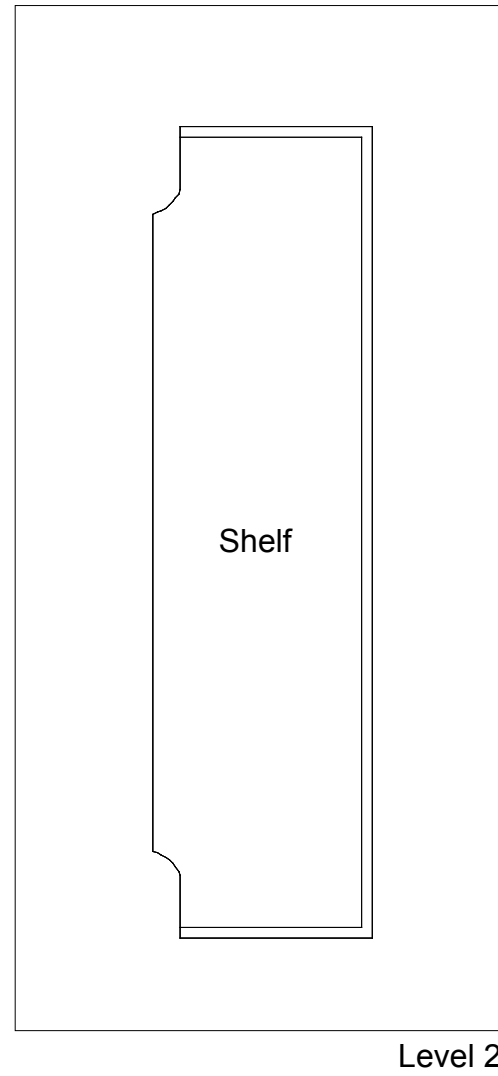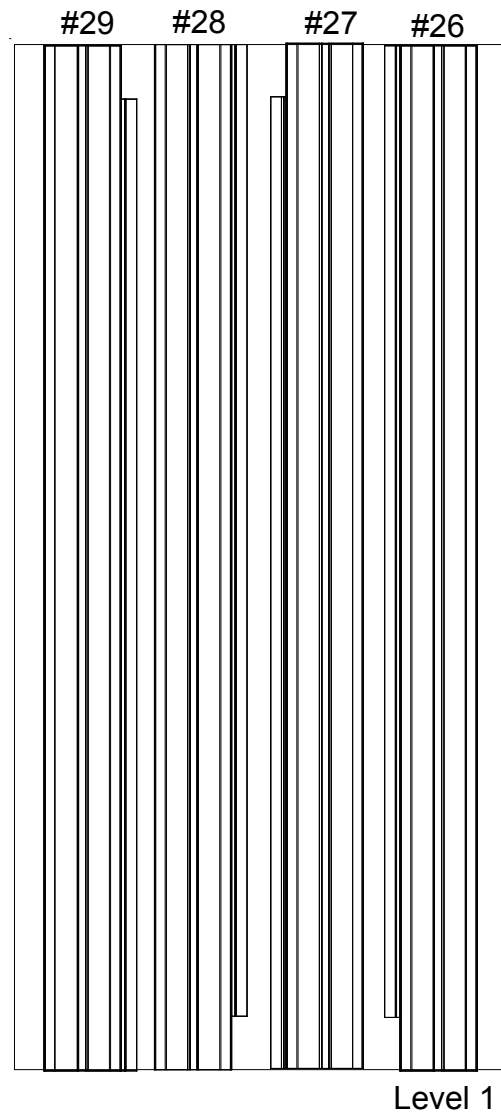


Note: New Additional Parts
- Corrugated Shipping Box

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL
SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


Top View of Each Level

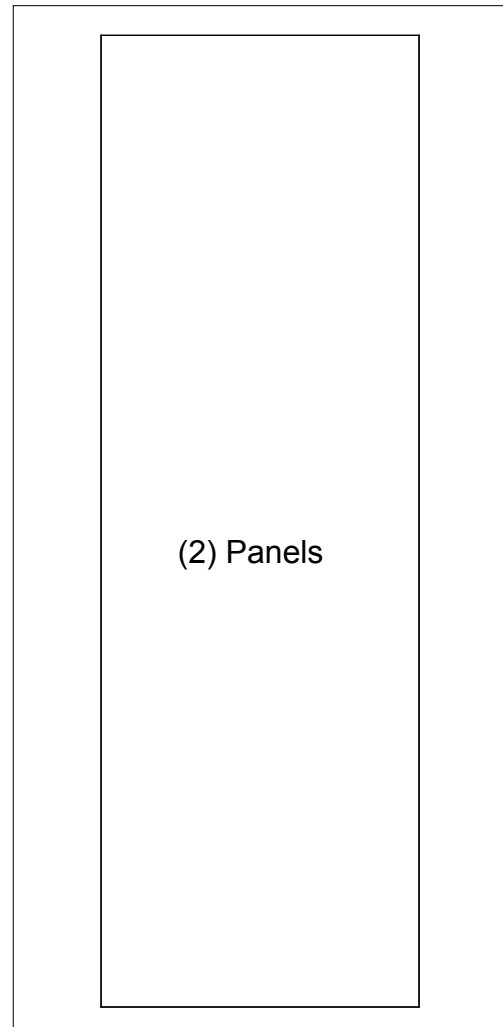


Level 1

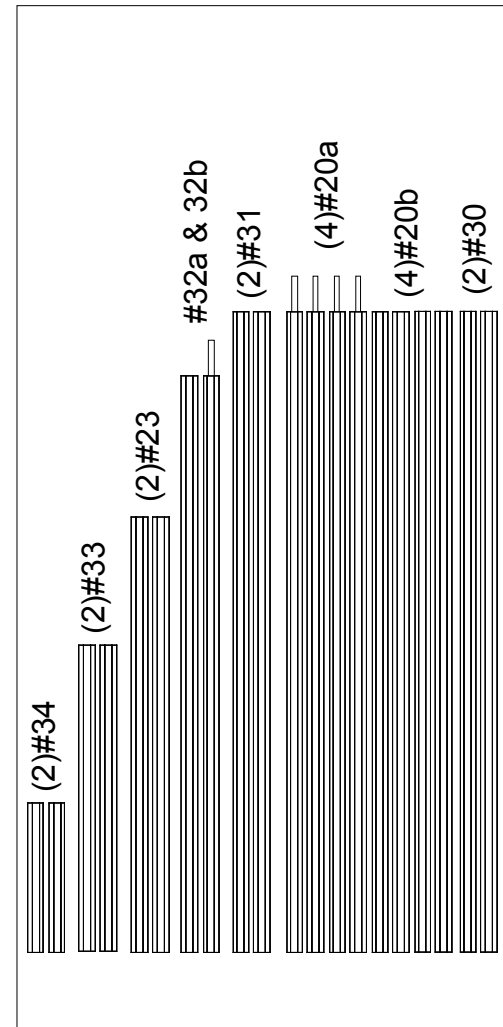

Level 2

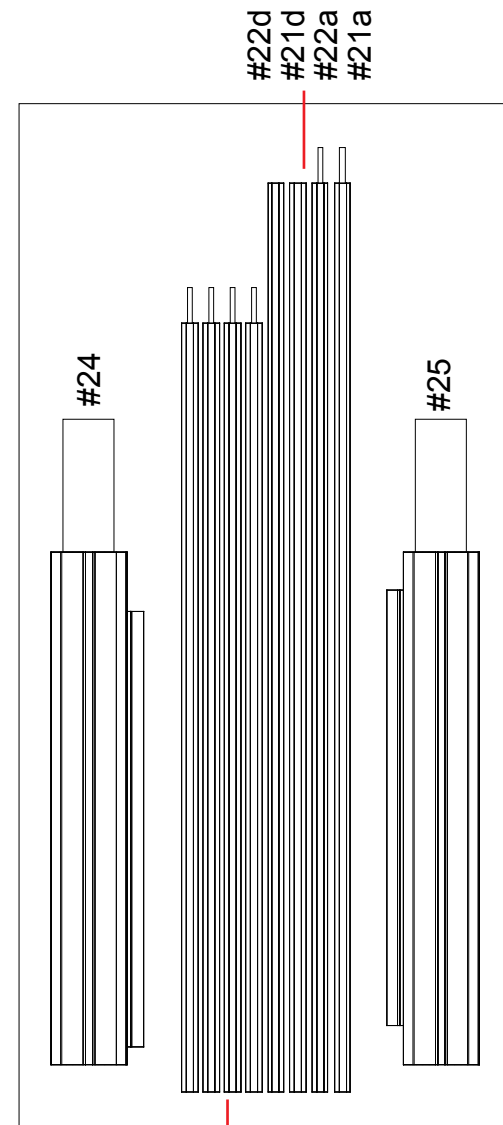

Level 3

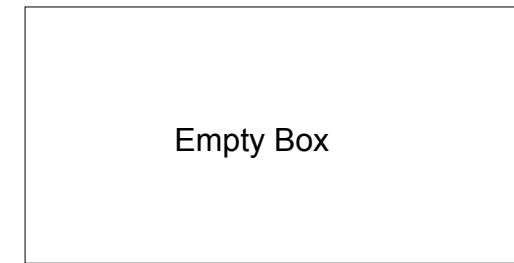

Note: New Additional Parts
- Corrugated Shipping Box

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING